

Monster Audio GI30 HIGH POWER SPEAKER USER MANUAL

Manualsum, simplified manuals

Table of Contents

- [Monster Audio GI30 HIGH POWER SPEAKER USER MANUAL](#)
 - ■ [WARNING](#)
 - ■ [CAUTION](#)
 - ■ [UNPACKING](#)
 - [IMPORTANT SAFETY INSTRUCTIONS](#)
 - [CONTROLS AND CONNECTIONS](#)
 - [LED Indicator](#)
 - [FRONT PANEL](#)
 - [Power ON/OFF Switch](#)
 - [BT \(Bluetooth®\) Button:](#)
 - [Play/Pause Button:](#)
 - [Master Volume Knob:](#)
 - [Microphone Control:](#)
 - [Previous and Next \(arrow\) Buttons:](#)
 - [SOURCE Button:](#)
 - [BASS Button:](#)
 - [XLR Out:](#)
 - [TWS Button \(True Wireless Dual Pairing\):](#)
 - [1-5 Number Button:](#)
 - [BASS/TREBLE Buttons:](#)
 - [CLOCK Button:](#)
 - [LIGHTING Button:](#)
 - [Technical Specs:](#)
 - [DISPUTES](#)
 - [Limited Warranty](#)

Monster Audio G130 HIGH POWER SPEAKER USER MANUAL

Monster Audio G130 HIGH POWER SPEAKER USER MANUAL, Monster G130
1800 WATTS Speaker User Manual, Monster Audio Speaker User Manual,
Monster High Power Speaker User Guide

Monster G30 1800 WATTS HIGH POWER SPEAKER

([2BAA5-G130](#))





Monster Audio GI30 HIGH POWER SPEAKER USER MANUAL

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

UNPACKING

Check that you have all of the following items.

If any item is missing, please contact the customer service hotline for assistance.

The hotline number is printed on the cover page of this user manual.

- Monster MNGI30 High Power Speaker
- AC Power Cable
- User Manual (with Warranty Statement)
- Quick Start Guide

Monster G30 1800 WATTS HIGH POWER SPEAKER


IMPORTANT SAFETY INSTRUCTIONS

To Prevent Fire or Shock Hazard. Do not use this plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure. To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the product is operated.
2. **RETAIN INSTRUCTIONS** -The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the product and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
5. **CLEANING** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.

6. **ATTACHMENTS** – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **ACCESSORIES** – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved care-quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
8. **VENTILATION** – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided or the manufacturer*instructions have been adhered to.
9. **POWER SOURCES** – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
10. **GROUNDING OR POLARIZATION** – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature: If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
11. **POWER-CORD PROTECTION** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point of exit from the product.
12. **NON-USE PERIODS** – The power cord of the product should be unplugged from the outlet when left unused for long periods of time.
13. Do not use this apparatus near water.
14. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power – supply cord or plug is damaged, liquid has been spilled or objects have fallen in o the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

CONTROLS AND CONNECTIONS

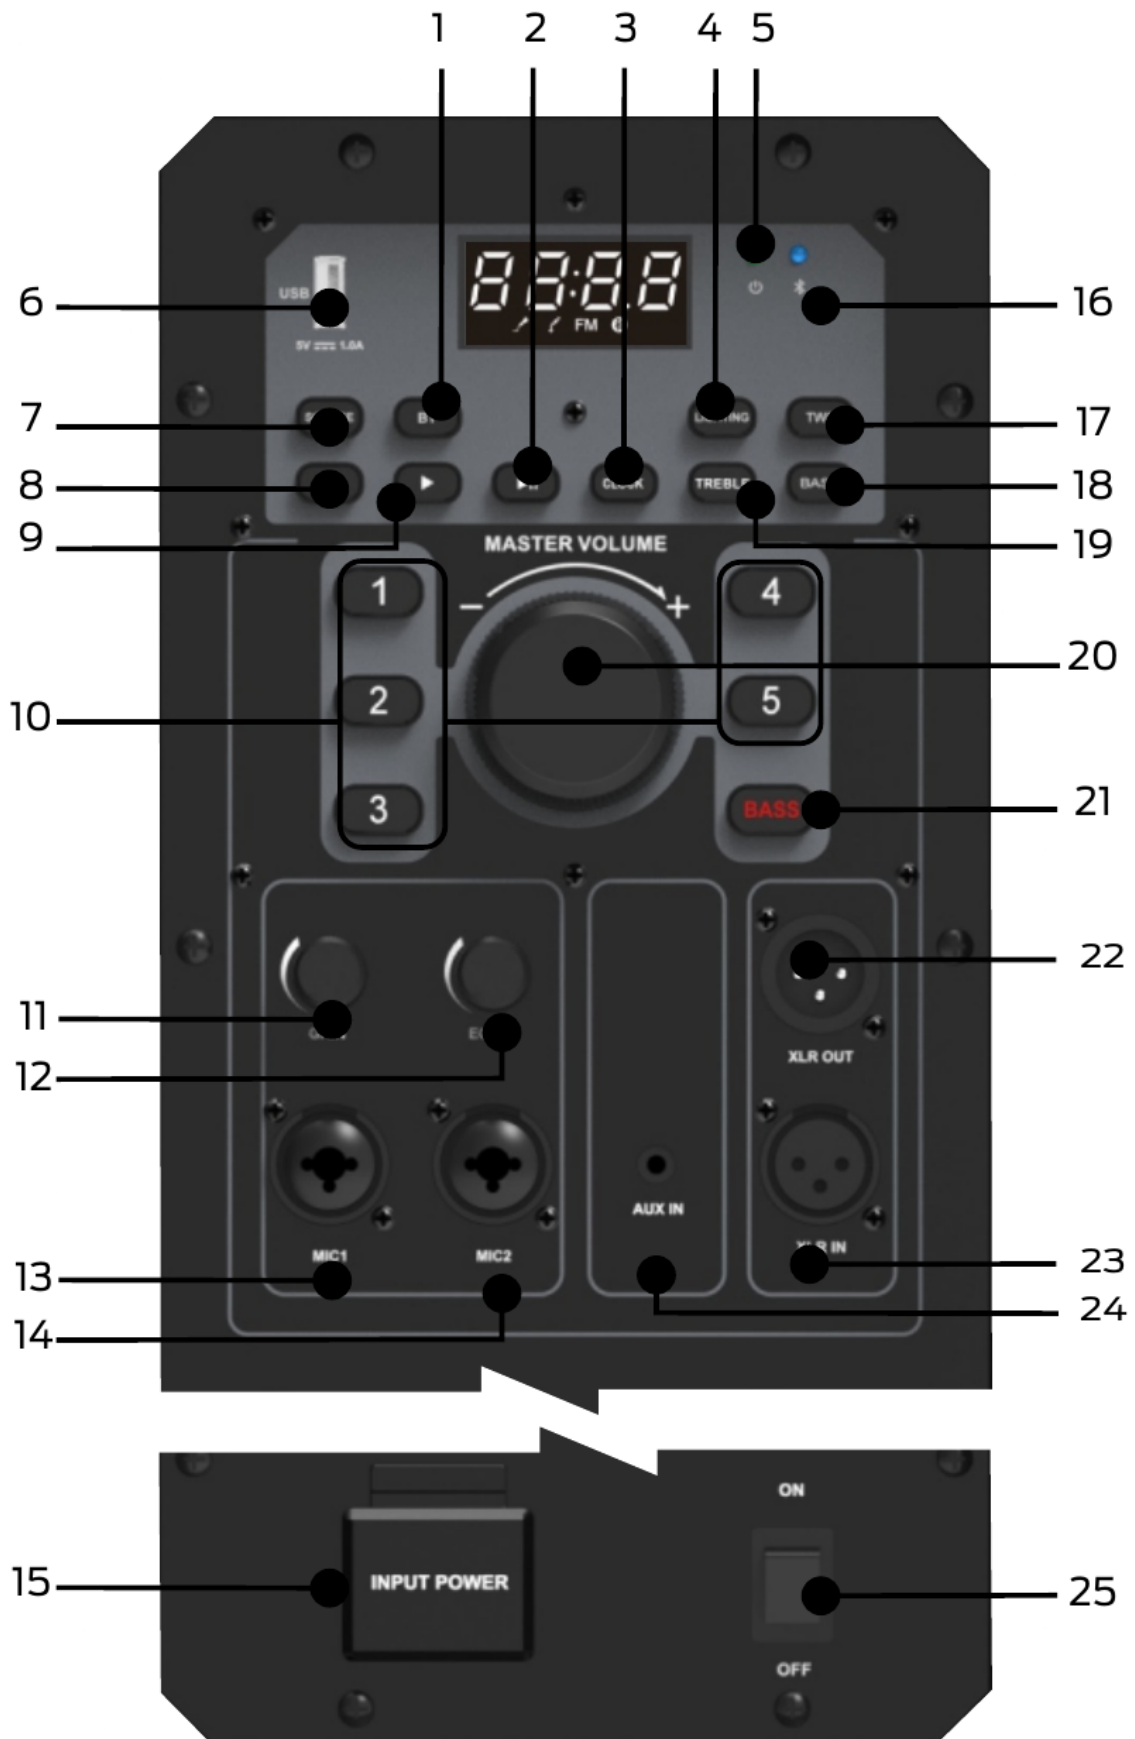

1. BT (Bluetooth) Button
2. PLAY-PAUSE Button
3. CLOCK Button
4. LIGHTING Button
5. POWER LED Indicator
6. USB Charging Socket
7. SOURCE Button
8. PREVIOUS Button
9. NEXT Button
10. NUMBER Buttons
11. MIC (GAIN) Button
12. ECHO Effect Button
13. Combo (XLR & 1/4") Mic In 1
14. Combo (XLR & 1/4") Mic In 2
15. ACInput (AC100-240V)
16. BLUETOOTH LED Indicator
17. TWS Button
18. BASS Button
19. TREBLE Button
20. MASTER VOLUME Knob
21. BOOST BASS Button
22. XLROut
23. XLRIn
24. 3.5mm AUX In
25. POWER Rocker Switch

LED Indicator

26. Clock
27. Mic-In Source Icon
28. AUX- In Source Icon
29. FM Radio Icon
30. Bluetooth® Source Icon

FRONT PANEL

1. LCD Display
2. Return
3. EQ Mode
4. Prev
5. Play/Pause
6. Next
7. Bluetooth
8. TWS
9. Volume +/- Knob

Power ON/OFF Switch

- Toggle switch to ON position:
 1. Green power LED Indicator light and LED Display will power on.
 2. The unit voice prompt will say, "Power on"
 3. Automatically enters into Bluetooth® pairing status
- Toggle switch to OFF position and all LED Indicators and the LED Display will turn off.

BT (Bluetooth®) Button:

- Switch to Bluetooth® Audio Source:
 1. While in another audio source, press the BT Button to switch to Bluetooth® mode or cycle through audio sources using the source button.
 2. The unit will automatically disconnect from the current device.
- Bluetooth® pair audio device:
 1. Set unit source to Bluetooth®.
 2. Long press BT Button for 2 seconds to enter into pairing status.
 3. Select "MONSTER GI30" from your Bluetooth® enabled audio device.
 4. The unit voice prompt will say, "Connected," when successfully paired.
 5. The blue Bluetooth® indicator light will remain on.
 6. If the signal moves out of range the blue Bluetooth® indicator light will blink and disconnect if the connection is not reestablished after 5 minutes.
- Disconnect Bluetooth® audio device connection:
 1. Set unit source to Bluetooth®.
 2. Long press BT Button for 2 seconds to enter into pairing status.
 3. The unit voice prompt will say, "Disconnected."
 4. The blue Bluetooth® LED Indicator light will begin to flash.
 5. Unit will enter pairing status.

Play/Pause Button:

- Play/Pause Button works with Bluetooth®
- While audio is playing, press the Play Button to pause playback.
- While audio is paused, press the Play Button to resume playback.

Master Volume Knob:

- Increase overall volume in playback mode:
- Default volume level is 10.

- Rotate master volume knob clockwise. The power LED Indicator blinks when the max level is reached.
- Decrease overall volume in playback mode:
- Rotate master volume knob counter-clockwise. The power LED Indicator blinks when the minimum volume level of 0 (mute) is reached.

Microphone Control:

- XLR and 1/4" Ports (Mic 1 and Mic 2):
- Except XLR and 1/4" microphones/instrument inputs
- Gain Knob (Mic 1 and Mic 2):
- Rotate the gain knob clockwise to increase or counter-clockwise to decrease the level on each channel.
- Echo Effect Knob (Mic 1 and Mic 2):
- Rotate the echo knob clockwise to increase or counter-clockwise to decrease the level on each channel.

Previous and Next (arrow) Buttons:

- FM radio source controls:
- LED display FM indicator icon will light up in FM mode.
- Short press the previous or next button to adjust the FM radio frequency shown on LED display.
- Long press the previous or next button to search for radio stations.
- Bluetooth® source controls:
- LED display BT indicator icon will light up in Bluetooth® mode.
- The previous/next buttons will change the audio track

SOURCE Button:

- Short press the SOURCE button to cycle through the different audio sources: BT (Bluetooth®) -> AUX -> FM (radio)

BASS Button:

- Press the button to turn on/off the BASS (boost). The LED will display "b on" or "b off"

XLR Out:

- While in audio sources: AUX-in, BT (Bluetooth®), FM radio, connect the unit to another active (powered) speaker via the XLR line out.

TWS Button (True Wireless Dual Pairing):

- TWS pairing (make sure both unit A and B are in close proximity to each other):
 1. Long press the TWS button to enter into pairing status. The Bluetooth® indicator LED will alternate flashing blue and red.
 2. Press and hold the TWS button of unit A to enter TWS searching mode while unit B is set to Bluetooth® pairing mode.
 3. The unit A (TX) Bluetooth® indicator LED will light up purple when connected, while the indicator LED for unit B (RX) will be solid red. The unit voice prompt will say, “Synchronized.”
- Disconnect TWS:
 1. Long press the TWS button.

1-5 Number Button:

1. Equalizer presets available in BT (Bluetooth®), AUX audio sources.
2. Short press a number (1-5) button to set the preset. The LED display will show the selected equalizer setting: “Eq-1, Eq-2, ... Eq-5”
3. Save and select FM Radio station presets.
4. Short press a number (1-5) button to set the preset station. The LED display will show the selected preset: “P1, P2,...P5”
5. Long press a number (1-5) button to save an FM radio station as a preset. The LED display will show the saved preset: “P1, P2,...P5”

BASS/TREBLE Buttons:

1. Bass adjustment in working mode:
2. Press the BASS/TREBLE button once to enter bass level status.
3. The LED display will show the default setting of “b 00.”
4. Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.
5. Treble adjustment in working mode:
6. Short press the BASS/TREBLE button twice to enter treble level status.
7. The LED display will show the default setting of “t 00. ”
8. Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.

CLOCK Button:

1. Turn on the unit, press the CLOCK button, the display will show “12:00”
2. After connecting the phone, the popup window on the phone needs to have access to synchronize with the time on the phone.
3. The time will be refreshed each time you press the CLOCK button, and the display will show the current time for 10 seconds, and it'll be back to show “BT”

4. If the smart phone is disconnected from the unit, the time won't show on the display.
5. Press the CLOCK button, the display will show "12:00 "
6. When the unit is on BT or AUX or FM mode, Press the CLOCK button, the display will show "12:00"

LIGHTING Button:

- Short press the LIGHTING button to cycle through the 15 available light modes. The LED display will indicate mode number: "L01, L02, L03 ... OFF"

Light modes included:

DANCE -> SPIN -> SWIRL -> DYNAMIC-> FOLLOW-> SPARK -> SUNSET -> MOOD-> PACE->RED->GREEN-> BLUE->AMBER->PURPLE->TEAL-> OFF

NOTE: Only the following modes work with the FM Radio audio sources: RED->GREEN-> BLUE->AMBER->PURPLE->TEAL-> OFF

DANCE LIGHT MODE: High frequencies will register on the top light bar, low frequencies on the four side light bars (two on the right and two on the left) and middle range on the light ring around the sub woofer.

- Long press the LIGHTING button to turn off the LED lights.

Technical Specs:

- 1800 Watts of Max. Audio Power
- Sub-woofer: 15" (inch)
- Frequency Response: 40Hz-20KHz
- Driver Size/Wattage: 15" 4 ohms 200W wooferX 2, 1"6ohms 30W tweeterX1
- Bluetooth® 5.3
- AC Power 100-240 Volt
- THD + Noise: <10%
- S/N Ratio: >70dB
- Max SPL :130dB+10%
- Display: 4.3" TFT ips LCD
- Product Dimensions (L x W x H) Inches: 21.2"x18.5"x53.9"
- Product Dimensions (L x W x H) mm: 539 x 470 x 1369

Monster Audio GI30 HIGH POWER SPEAKER USER MANUAL

DISPUTES

Model: MNGI30

Monster G30 1800 WATTS HIGH POWER SPEAKER

[Manualsum](#)

ALL DISPUTES ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY.

Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action.

The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted by the American Arbitration Association (AAA) pursuant to its Consumer Arbitration Rules (AAA Rules). The Federal Arbitration Act governs this provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and Russell Distribution Company, LLC shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA Rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims by you, the purchaser of the Product, and all those in privity with you, including your family members, beneficiaries and assigns, against Russell Distribution Company, LLC's parent(s), subsidiaries and aliates, any person or entity that licensed, supplied, sold or distributed the Product, and each of their ocers, employees, representatives, licensors/licensees, agents, beneficiaries, predecessors in interest, successors, and/or assigns.

You may opt out of this dispute resolution procedure by providing notice to Russell Distribution Company, LLC no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to Russell Distribution Company, LLC at support@mymonsteraudio.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number if applicable, if you have it. Alternatively, you may opt out by calling 1-800-976-0677 no later than 30 calendar days from the date of the first consumer purchaser's

[Manualsum](#)

purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

To obtain warranty service, please contact technical support with questions **Email: support@mymonsteraudio.com**

Do not return this product to the store. Visit: MyMonsterAudio.com

Monster G30 1800 WATTS HIGH POWER SPEAKER

Limited Warranty

Model: MNGI30

Monster G30 1800 WATTS HIGH POWER SPEAKER

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found. Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase. We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products. If the Product is received damaged, it is your responsibility as the [Manualsum](#)

consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITE BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, | NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

For Customer Service, please visit our website: mymonsteraudio.com

Monster Audio GI30 HIGH POWER SPEAKER USER MANUAL

