

# [Pulsar X2H v3 Mini Wireless Mouse User Manual](#)

## [Manualsum](#), simplified manuals

### Table of Contents

- [Pulsar X2H v3 Mini Wireless Mouse User Manual](#)
  - [Basic function](#)
  - [Indicator light](#)
  - [Working mode switching](#)
  - [DPI Setting](#)
  - [Polling Rate Setting](#)
  - [LOD Setting](#)
  - [Motion Sync Setting](#)

# **Pulsar X2H v3 Mini Wireless Mouse User Manual**


Pulsar X2H v3 Mini Wireless Mouse User Manual

FCC id: [2A2TU-PX2H3ES11](#)

## Basic function



## Indicator light

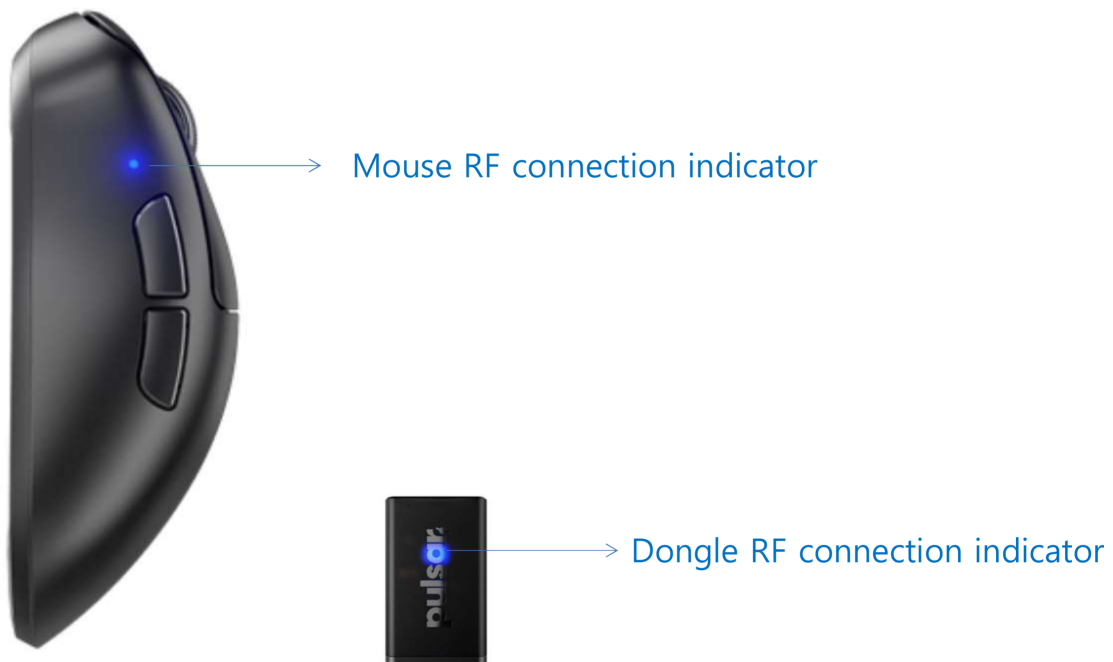

3

## Working mode switching

### Toggle switch,

1. wired mode when moved to the left "X";
2. RF mode when moved to the right "O"

[Manualsum](#)



# DPI Setting



- **Gather Step 1:** Press the “DPI” switch to light the OLED, and the OLED will display the current set values;
- **Gather Step 2:** Press the switch again, set the DPI value, at this time OLED will only display the DPI value, other Settings will be hidden;
- **Gather Step 3:** After the setting is complete, wait 3 second, OLED will display the current overall setting values;
- **Gather Step 4:** Wait another 3 second and the OLED will turn off;

DPI sets the step level

400-800-1600-3200-6400-12800

Back and forth cycle



# Polling Rate Setting



- **Gather Step 1:** Press the “HZ” switch to light the OLED, and the OLED will display the current set values;
- **Gather Step 2:** Press the switch again, set the polling rate value, at this time OLED will only display the polling rate value, other Settings will be hidden;
- **Gather Step 3:** After the setting is complete, wait 3 second, OLED will display the current overall setting values;
- **Gather Step 4:** Wait another 3 second and the OLED will turn off;

Wire mode polling rate sets the step level

500Hz-1000Hz-2000HZz-4000HZ-8000HZz

Back and forth cycle


Wireless mode polling rate sets the step level

500Hz-1000Hz-2000Hz-4000HZ

Back and forth cycle



## LOD Setting

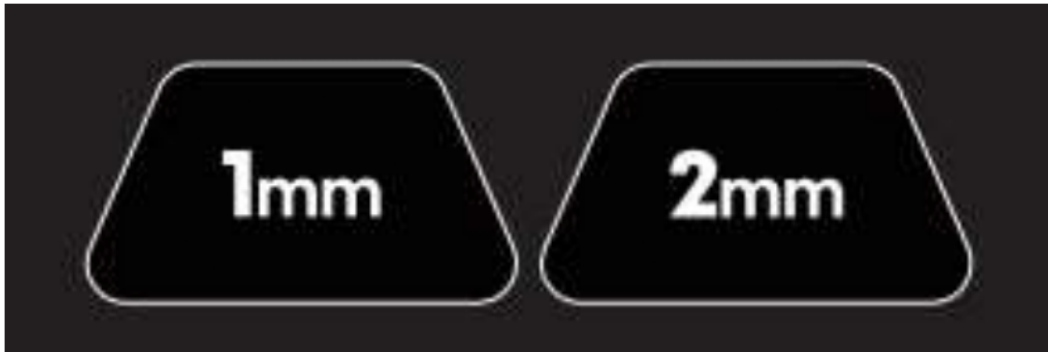

→ 1- Hold down





→ 2- Click to set

- **Gather Step 1:** Press the “HZ” switch to light the OLED, and the OLED will display the current set values;
- **Gather Step 2:** Hold down the “HZ” switch and set the LOD height value by pressing the right mouse button. At this time, OLED will only display the current LOD set value, and other set values will be hidden;
- **Gather Step 3:** After the setting is complete, wait 3 second, OLED will display the current overall setting values;
- **Gather Step 4:** Wait another 3 second and the OLED will turn off;

LOD sets the step level

1Tmm—2mm

Back and forth cycle

## Motion Sync Setting



→ 1- Hold down



2- Click to set

- **Gather Step 1:** Press the “HZ” switch to light the OLED, and the OLED will display the current set values;
- **Gather Step 2:** Hold down the “HZ” switch and press the right mouse button to enable or disable the “Motion Sync” function. At this point, the OLED will only display the current set value, and other set values will be hidden;
- **Gather Step 3:** After the setting is complete, wait 3 second, OLED will display the current overall setting values;
- **Gather Step 4:** Wait another 3 second and the OLED will turn off;

Motion Sync sets the step level

ON—OFF

Back and forth cycle