

Askey Computer Corp Outdoor WiFi6 AP User Manual

Manualsum, simplified manuals

Table of Contents

- [Outdoor WiFi6 AP User Manual](#)
 - [Professional installation instruction](#)
 - [1. Installation personal](#)
 - [2. Installation location](#)
 - [3. External antenna](#)
 - [4. Installation procedure](#)
 - [5. Warning](#)

Outdoor WiFi6 AP User Manual

Outdoor WiFi6 AP User Manual

[\(H8NEAO2522P-2\)](#)

Professional installation instruction

1. Installation personal

This product is designed for specific application and needs to be installed by a qualified personal who has RF and related rule knowledge. The general user shall not attempt to install or change the setting.

2. Installation location

The product shall be installed at a location where the radiating antenna can be kept 20cm from nearby person in normal operation condition to meet regulatory RF exposure requirement.

3. External antenna

Use only the antennas which have been approved by the applicant. The non-approved antenna(s) may produce unwanted spurious or excessive RF transmitting power which may lead to the violation of FCC limit and is prohibited.

4. Installation procedure

Please refer to user's manual for the detail.

5. Warning

Please carefully select the installation position and make sure that the final output power does not exceed the limit set force in relevant rules. The violation of the rule could lead to serious federal penalty.