
COOFLY P246W5 Power Bank User Manual

Manualsum, simplified manuals

Table of Contents

- COOFLY P246W5 Magnetic Power Bat USER MANUAL
 - Product Guide
 - Specification
 - Overview
 - Warranty Card
 - Operation introduction
 - [IMPORTANT SAFETY INSTRUCTIONS

COOFLY P246W5 Magnetic Power Bat USER MANUAL

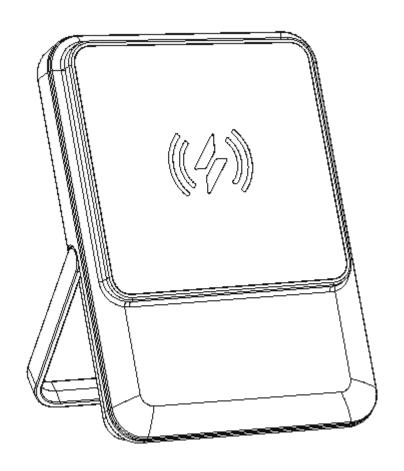

Product Guide

Accessories

- 1 Portable Battery
- 1 USB-C charging cable
- 1 User manual
- 1 Warranty card

Specification

Specification Details

Model P246W5

Type-C Port Input 5V/3A, 9V/2.22A, 12V/1.67A Type-C Plug Output 5V/3A, 9V/2.22A, 12V/1.67A


Wireless Output 15W (Max)

Output (Max) 20W

Dimensions 67.3 x 96 x 15.6 mm

Weight 143 g Battery Capacity 5000 mAh

Overview

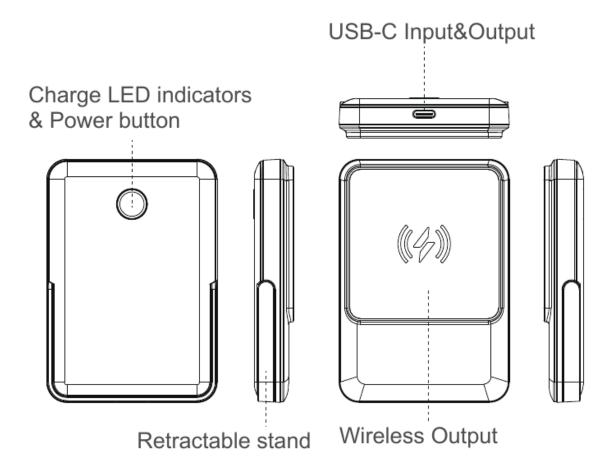

Feature Description

Input - Self-charging

Output / Wireless charger For charging digital devices.

Charge LED indicators LED indicators to show battery status.

Power button Press to check the battery level.

Warranty Card

Thank you very much for using our products. According to the prescription, anybelongs to under normal usage circumstance cause because of the product quality's problem of breakdown, our company will be responsible for giving free maintain during this period.

Free maintain won't be given under the following circumstance:

- 1. Without Protection to fix warrantees and the purchasing invoice.
- 2. The protect to fix card or purchasing invoice has been changed.
- 3. The breakdown and damage caused by the Force majeure.
- 4. The breakdown, damaged because of the transportation or handling.
- 5. The breakdown caused by the manipulation that hasn't follow the requests of the Manual.
- 6. The damage caused by the dismantle movement of non-our company authorized maintainer.

How to claim your warranty?

- 1.Enter https://cooflypower.com/pages/warranty-registration
- 2.Fill in the corresponding information and submit Our professional customer service team will serve you sincerely!


Email: service@cooflypower.com

URL: www.cooflypower.com

Operation introduction

Charging power bank:

See below diagram, the white indicator is flickering when charging. It will stop flicker and all the indicators turn in white after fully charged. Please remove the adapter safely after power bank is fully charged.

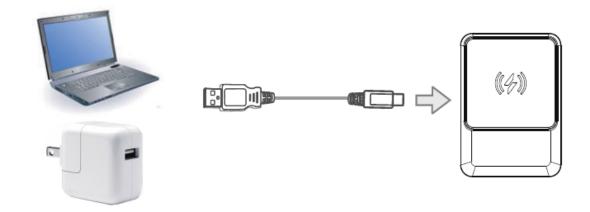

Adapter AC 100-240V

Charging digital devices:

Once the power bank is connected to the digital device, the device shall be charged.



Matters needing attention

It is forbidden to put the equipment in high temperature and high humidity environment, lest cause equipment overheating and internal short circuit and damage to equipment. Storage temperature not more than 45 degrees, high temperature storage for a long time can affect the service life of the machine.

Maintenance

For a long time do not use the equipment should be the power plug from the outlet of down. At least half a year using a device to ensure the service life of equipment. If the equipment malfunction, please have qualified personel maintenance, don't disassemble equipment without permission.

[IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using this product, basic precautions shouldalways be followed, including the following:

- a) Read all the instructions before using the product.
- b) To reduce the risk of injury, close supervision is necessary when the product is used near children.
- c) Do not put fingers or hands into the product.
- d) Do not expose power bank to rain or snow.
- e) Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.
- f) Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- g) Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- h) Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- i) Do not expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 100°C may cause explosion. The temperature of 100°C can be replaced by the temperature of 212°F.
- j) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- k) Switch off the power bank when not in use.

SAVE THESE INSTRUCTIONS

Jupiter Technology Co., Limited

Address: Building B3, Demonstration Park for Undertaking

Industrial Transfer, Western District, Xiangxi Hi tech Zone,

Hunan Province

Website: www.cooflypower.com

Made in China