

AFK BT601 RGB Light Soundbar User Manual

Manualsum, simplified manuals

Table of Contents


- [AFK BT601 RGB Light Soundbar User Manual](#)
 - [Functions Description](#)
 - [Function Buttons](#)
 - [Functional Ports](#)
 - [Device Operation](#)
 - [How to turn on/off the device?](#)
 - [How to connect to Bluetooth?](#)
 - [How to switch to TF Card Mode?](#)
 - [How to adjust the Speaker volume,switch songs and pause play?](#)
 - [How to switch to play TF card/U disk music/AUX mode?](#)
 - [How to switch the Lighting Modes?](#)
 - [How to charge the Computer Speaker?](#)
 - [Specifications](#)
 - [Packing List](#)
 - [Trouble Shooting](#)

AFK BT601 RGB Light Soundbar User Manual

AFK BT601 RGB Light Soundbar User Manual


Dier Digital Audio BT601 Bluetooth Speaker User Manual

FCC id: [2A5N7-BT601](#)

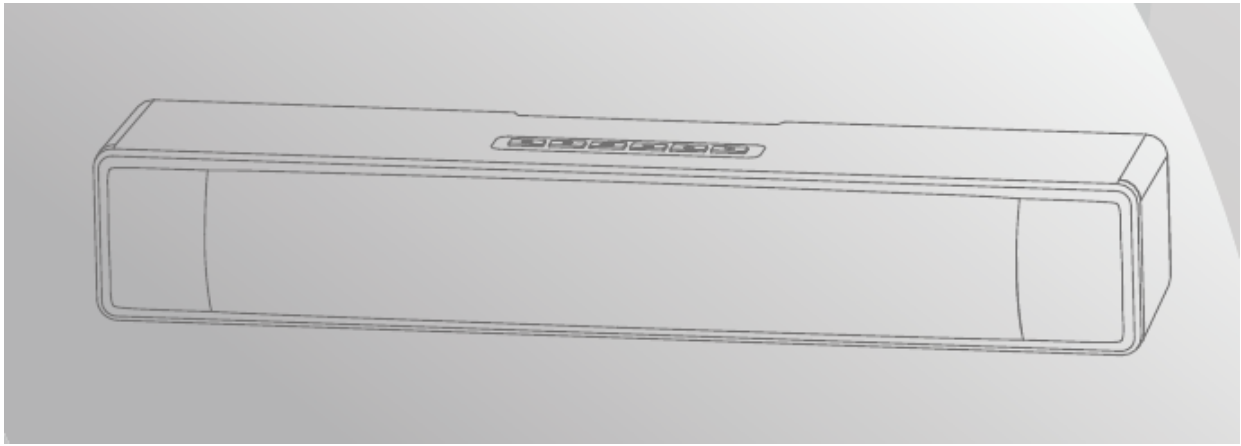

Functions Description

Function Buttons

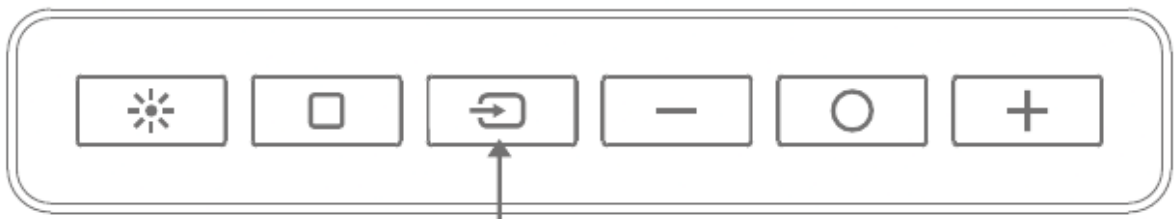

Bluetooth indicator



Light ON/OFF/Light Mode Transfer



Pairing a Bluetooth Device



Switch to AUX Mode



Volume-/Previous Song



Turn ON/OFF, Play/Pause



Volume +/Next Song

Functional Ports



Power input — TYPE-C/USB audio input



Connect to other device with a 3.5mm audio cable



USB flash drive to play audio




TF/SD card port

Device Operation

How to turn on/off the device?

Long Press  key to turn on, Long Press  key to turn off.

How to connect to Bluetooth?

Long press to  key, enters the pairing state, Indicator blinks blue.



Turn on the Bluetooth feature, Once paired, the BT601 system appears connected in the device list. Note Password is: 0000.



How to switch to TF Card Mode?



Insert the TF Card to TF Card Port and it switch automatically to TF Card Play Mode.


How to adjust the Speaker volume,switch songs and pause play?

Short press  key to adjust volume down,Long press  key to switch Previous Song.

Short press  key to adjust volume up,Long press  key to switch next Song.


Short press  key to pause/play

How to switch to play TF card/U disk music/AUX mode?


Press the  to switch between different playback modes. (Default mode:Bluetooth Mode)

How to switch the Lighting Modes?

The Default Light is on when Music booting up.

Short press  key to switch the Light Effects.

1. Mode: Water Lamp
2. Mode: Breathing light
3. Mode: Starry sky light
4. Mode: gradient color
- 5.

Press  Key again to return to the Default Light Mode.

How to charge the Computer Speaker?

Connect the power adapter via the Type C cable with the normal USB-A Power Adapter to charge the Computer Speaker.

Specifications

- Bluetooth Version: V5.1
- Bluetooth Profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth Range: 10 meters (barrier-free)
- Speaker: Ø 53mm x2
- Speaker power: RMS 4Ω 5W
- Audio range: 145Hz ~ 20kHz
- Sensitivity: 84±3 db
- Signal to noise ratio: 80%
- TF card: 32G(MAX)
- Scene light: Full RGBx13pcs
- Sleep current: <1 mA
- Battery : 1800mAh
- Port: Type C, DC5V, 2000mA; USB Audio Input
- Product Size: 400.3 X 67.9 X 71.5mm

Packing List

- 1* Computer Speaker
- 1* User Manual
- 1* Type-C Cabel
- 1* AUX Cabel

Trouble Shooting

FAQ	Solution
Fail to connected	<ol style="list-style-type: none">1. If fail to find model name or connect with speaker, please make sure the speaker in pairing mode.2. Please re-open the Bluetooth function on your mobile/computer if long time fail to connect.3. Please close other Bluetooth devices to avoid searching problems.4. Please enter "0000" (4 zeros) if password needed.
No sound when play	<ol style="list-style-type: none">1. Please adjust your phone if in minimum volume status2. Please check the speaker if in pause status.
Speaker stuttering when playing music	<ol style="list-style-type: none">1. Check if the range are exceed or there is an obstacle between the speaker and the connected devices.
Can not turn ON	

2. Check phone if no enough storage, please restart your phone.

No power,please charge and then try again.

Can not charge, no red indicator

1. Battery is full ,please charge again after half hours working,red indicator will be on.
2. Charge cable is broken,change new one.
3. Re-open the speaker and try again.



Made in China