

[ZEALOT P1 Wireless Speaker User Manual](#)

[Manualsum](#), simplified manuals


Table of Contents

- [ZEALOT P1 Wireless Speaker User Manual](#)
 - [Specification](#)
 - [Power ON/OFF](#)
 - [Mode switching](#)
 - [Rainbow light effect](#)
 - [Bluetooth Mode](#)
 - [Bluetooth connection:](#)
 - [How to reconnect?](#)
 - [Bluetooth playback](#)
 - [TF, USB Mode](#)
 - [AUX Mode](#)
 - [FM mode](#)
 - [KTV Function](#)
 - [Charger](#)
 - [Notice](#)

ZEALOT P1 Wireless Speaker User Manual

ZEALOT P1 Wireless Speaker User Manual

FCC id: [2A27V-ZEALOT-P1](#)

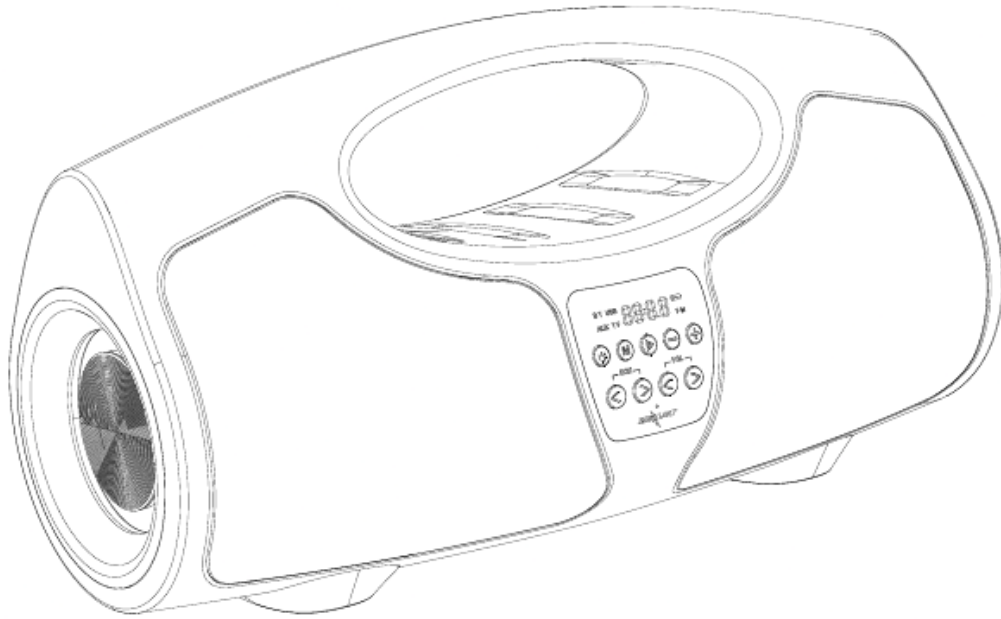

Specification

- **Charging voltage:** DC5V
- **Transmission distance:** about 10m
- **Frequency response:** 20Hz-20KHz
- **Signal to noise ratio:** $\geq 85\text{dB}$
- **Size:** 321*129*166mm
- **Speaker:** 4 Ω x2
- **Distortion:** <1%
- **Working voltage:** 3.7V
- **Weight:** 1336g

Power ON/OFF



Power on/off: long press for 3 seconds

Mode switching



Short press the “M” key to switch the mode.



(TF card, AUX mode is the priority for rear access.)

Rainbow light effect



Long press to play and pause to turn on and off the lights

Bluetooth Mode

Bluetooth connection:



Press and hold the key  for 3 seconds to turn on and off the machine, the prompt sound “BULETOOTH MODE”, enter the Bluetooth pairing mode,

Waiting for connection. Use a Bluetooth device (mobile phone) to automatically search for the device name “ZEALOT-P1”, Click Connect and hear two beeps.

Indicates a successful connection.

How to reconnect?

When the speaker is turned on again, the Bluetooth will automatically connect to the paired mobile phone or other Bluetooth devices. If it is not connected, please enter the Bluetooth settings of the mobile phone to check whether the Bluetooth is turned on. The IOS system needs to turn on Bluetooth in advance to connect the speakers automatically. Otherwise, manually click on the ZEALOT-P1 connection.

Bluetooth playback



Single click : Play/Pause



Single click: Last

Long Press: Volume-



Single click: Next

Long Press: Volume+

TF, USB Mode

Insert the TF card or USB and listen to the prompt “Music Mode” to play the songs on the TF card.



Single click: Last

Long Press: Volume-



Single click: Next

Long Press: Volume+

AUX Mode

Connect with audio cable, it will switch to aux mode after hearing the warning tone “ **Line in Mode** ”.

FM mode



Single click: Automatic search channel



Single click: Last channel

Long Press: Volume-




Long Press: Next channel

Single click: Volume +

KTV Function

Plug in the wired karaoke microphone, karaoke in any mode,

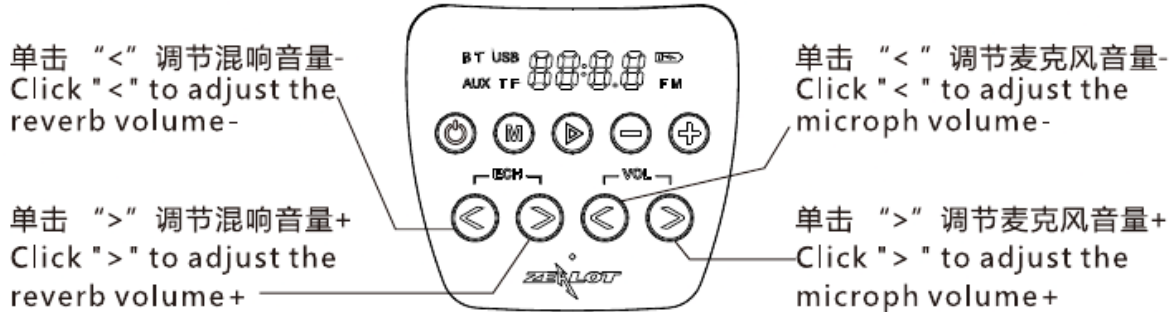

Charger

- Appearance of prompt voice “low battery Please Charge”,
- The red indicator light is on when DCs charging, and the red charging indicator is off when fully charged
- Different adapters, interfaces, and charging time will vary

Notice

- Do not throw this product into fire or water.
- Do not modify, repair or disassemble the speaker.
- Do not make it contact with combustible materials directly.
- Please keep the device away from damp and dusty environments.
- Before charging please check whether the charger model is suitable for this product.
- Do not use the Bluetooth function while charging.
- The device will automatically lose power when it's in standby, it's recommended to charge the speaker once a month.

Please keep your speaker and mobile phone within 10m working range.

If over this distance, decline of sound quality and disconnection will occur.



Made in China

ZA-P1-20221223