

FAMETEK Wireless Speaker User Manual

Manualsum, simplified manuals

Table of Contents

- [FAMETEK Wireless Speaker User Manual](#)
 - [Features:](#)
 - [Specifications:](#)
 - [Packing Lists:](#)
 - [Button Interface:](#)
 - [Volume up / Next](#)
 - [Volume down / Previous](#)
 - [Play or Pause / Power ON or OFF](#)
 - [Skip Sound FX](#)
 - [Window LED Indicator:](#)
 - [Roof Lamp LED Indicator:](#)
 - [Voice Indication:](#)
 - [Base LED Indicator:](#)
 - [Bluetooth Pairing:](#)
 - [Charging:](#)
 - [Auto Power Off:](#)
 - [TROUBLESHOOTING](#)
 - [HEARING DISTORTION](#)
 - [NOT LOUD ENOUGH?](#)
 - [UNABLE TO PAIR WITH BLUETOOTH DEVICE?](#)
 - [EXPERIENCING SIGNAL LOSS OR DROPOUTS VIA BLUETOOTH?](#)
 - [WARNING](#)
 - [CAUTION](#)
 - [RoHS COMPLIANCE](#)
 - [WEEE NOTICE](#)

FAMETEK Wireless Speaker User Manual

FAMETEK Wireless Speaker User Manual

FCC id: [2BKGX-692001](#)

[Manualsum](#)



Applicable models: 692001

Features:

- Officially licensed BBC™ TARDIS™ collectible Be es h
- Sound Clips: Materialize, Dematerialize, Cloister Bell, Flight
- Top LED flashes white when powered On/Off
- Windows illuminate when connected to device
- Auxiliary in for direct connection
- Multi-Function interface for Volume / Play / Pause / >> / << / Power
- Precision tuned ported speaker enclosure
- Mil spec PCB with SMD parts for amplification
- Built-in noise rejection circuitry
- USB Rechargeable lithium-ion battery
- Skip Sound FX by pressing any button
- Battery indicator display / voice battery low indicator

[Manualsum](#)

Specifications:

- Connectivity: Wireless Bluetooth™
- Wireless Range: 33 Feet / 10 meters minimum
- Dimensions: 5.89"H x 2.98"W x 2.98"D
- Battery Life: 4hr. (varies upon volume and connection)
- Battery: Rechargeable Lithium-ion via Type-C
- Speakers: High power 36mm low distortion speaker A
- Direct Connect: 3.5mm Auxiliary Input
- USB Port: Type-C DC5V/3A
- Frequency: 150Hz - 20KHz
- S/N: >80dB

Packing Lists:

- Unit x 1,
- USB cable x 1,
- AUX cable x 1,
- User guide x1,
- Warranty card x 1

Button Interface:

Volume up / Next

- Press + button = volume up
- Press and hold + button = next song

Volume down / Previous

- Press - button = volume down
- Press and hold - button = previous song


Play or Pause / Power ON or OFF

- Press button = play or pause
- Press and hold button = power ON or OFF

(if no Bluetooth connection is detected within 15 minutes the device will auto turn off)

Skip Sound FX

Press any button

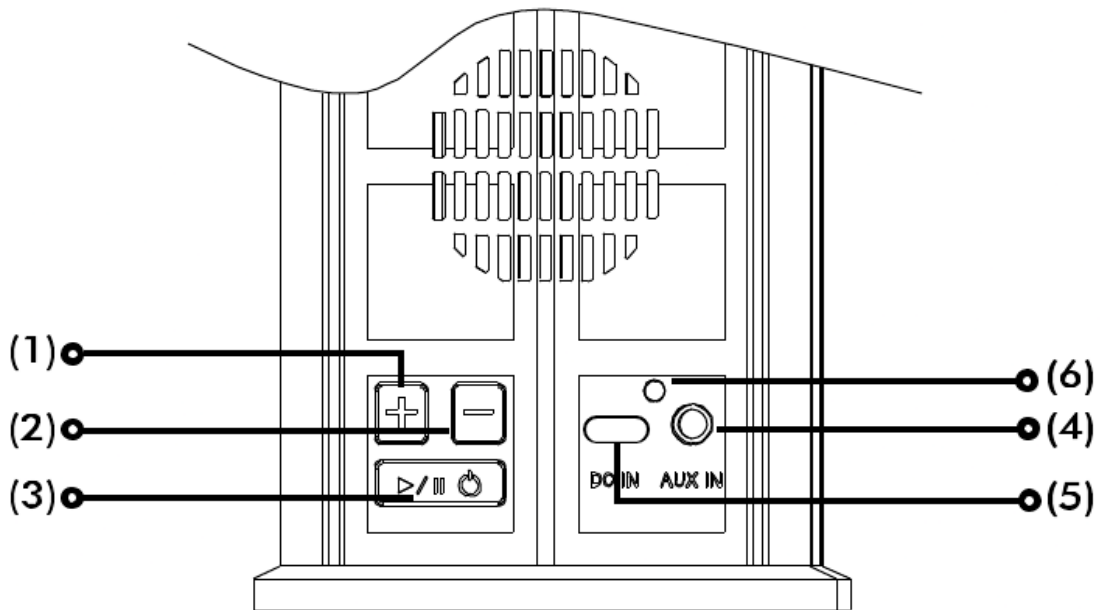

FAMETEK Wireless Speaker User Manual

- 1 Volume up/Next
- 2 Volume down/Previous
- 3 Play or Pause/Power On or Off
- 4 AUX IN
- 5 TYPE-C Input
- 6 Battery indicator

Window LED Indicator:

- Flashes white continuously = Looking for Bluetooth Connection
- White LED stays lit = Paired to device
- White LED stays lit = Auxiliary connection

Roof Lamp LED Indicator:

- The LED will flash white when powered on
- The LED will flash white when powered off

(Hold down power button)

Voice Indication:

- Power ON: Materialize
- Power OFF: Dematerialize
- Bluetooth Connected: Cloister Bell
- Aux In Mode: Flight noise

Base LED Indicator:

- White LED stays lit = Unit is charging
- Green LED starts lit = Unit is fully charged

Bluetooth Pairing:

The Bluetooth name is “TARDIS”

Turn on speaker, it will search for the last paired device and auto-pair to it

If no device can be auto-paired, the speaker will wait for a new device to connect

Charging:

We recommend turning off the TARDIS before charging

Connect TARDIS and power source via Type-C cable the LED will be white while charging

The LED will be green when charging is completed

Auto Power Off:

If no Bluetooth connection within 15 minutes, device auto power off

When the battery is too low, the device will auto power off

TROUBLESHOOTING

HEARING DISTORTION

- **A** Lower the volume on your BAD WOLF TARDIS and/or phone/device.
- **B** Make sure it's charged up. Check for low battery, then charge Tardis via USB.

NOT LOUD ENOUGH?

- **A** Turn up the volume on your phone/device or your BAD WOLF TARDIS.
- **B** Make sure it's charged up.
- **C** Try plugging your BAD WOLF TARDIS into your phone/device via 3.5mm cable.

UNABLE TO PAIR WITH BLUETOOTH DEVICE?

- **A** Confirm that your phone/device is Bluetooth™ compatible.
- **B** Follow Bluetooth pairing instructions in this guide
- **C** Visit www.massiveaudio.com/support

EXPERIENCING SIGNAL LOSS OR DROPOUTS VIA BLUETOOTH?

- **A** Move BAD WOLF TARDIS closer to your phone/device.
- **B** Make sure it's charged up.
- **C** Turn off your BAD WOLF TARDIS and phone/device, then power up and reconnect.

WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not expose your Fametek Speaker to liquid, moisture, humidity, or rain. Do not use the Fametek speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the Massi ve® speaker fo moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in fo the Fametek speaker. such actions could result in electric shock. Clean the Fametek Speaker only with a dry cloth
- Do not expose your Fametek Speaker to extremely high or low temperatures.
- Do not leave your Fametek Speaker in direct sunlight for extended periods of time.
- Do not leave your Fametek Speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block ary ventilation openings.

Battery/Charger Hazard

- Do not dispose of your Fametek Speaker in a fire. The battery could explode causing injury , death or paradox.
- Only charge the battery in accordance with the user instructions supplied with the Fametek Speaker.
- Do not attempt fo disassemble the Fametek Speaker charger or force open the built-in battery because this may result in electric shock.
- Do not charge the Fametek Speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the Fametek Speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

Automobile Accident Hazard

- Do not leave or store the Fametek Speaker near or over your automobile's air bag because serious injury may result when an air bag deploys.
- Do not place the Famerek Speaker on high surfaces such as shelves. During music playback the speaker may fall.

CAUTION

- Do not use abrasive cleaners to clean your Fametek® Speaker because this could cause scratches and damage.
- Do not bring your Fametek Speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Fametek Speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Fametek Speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Fametek Speaker battery, it is built-in and is not changeable.
- Keep out of the range of children under 6 years old to prevent choking on small removable parts.
- Use only the manufacturer suggested charger for your Fametek Speaker. Other chargers could result in electric shock and damage speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your Fametek Speaker prior to boarding an aircraft. Do not use the Fametek Speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and the speaker's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.
- Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the device. Read these instructions before operation. Keep these instructions for future reference. Follow all instructions for installation, use and maintenance of the device. To avoid tilt or drop, place the device on a flat and hard surface. To clean the device, turn off device first. Clean only with soft and dry cloth. To ensure compatibility, only use accessories recommended by the manufacturer. When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture evaporates. To ensure compatibility, only use accessories recommended by the manufacturer.
- Do not expose the device to sand or dust, or cover it with items, such as newspapers, table cloths, or curtains.
- Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation. Make sure that the power supply voltage is within the range indicated on the label on the device or power adapter. If you are not sure of the type of power supply, consult your dealer or local power company. Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel. Do not use the device if any abnormality occurs. If any

smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair the device yourself. Avoid using dropped or damaged appliances. If the device is dropped and the housing is damaged, the internal components may not function normally. To reduce the risk of electric shock, do not touch any connector with wet hands. Never remove the housing of the device. Never lubricate any part of the device. Never place the device on top of any other electrical equipment. Never block ventilation openings. Install in accordance with manufacturer's instructions. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

RoHS COMPLIANCE

- This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

WEEE NOTICE



- The directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13 February 2003, resulted in a major change in the treatment at end of life. The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycle and other forms of recovery of such wastes so as to reduce disposal. The WEEE logo on the product or on its box indicating collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown above. This product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical Waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and

electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

GET FAMETEK SUPPORT

VISIT www.fametek.com

CALL 1-323-262-2262

PURCHASE Other great Doctor Who™ products at www.fametek.com

Become a fan of FAMETEK on Facebook & Instagram

VISIT WWW.FACEBOOK.COM/TARDISSPEAKERS

VISIT WWW.FACEBOOK.COM/FAMETEKELECTONICS

VISIT WWW.INSTAGRAM/FAME_TEK

FAMETEK Wireless Speaker User Manual