

# FOXX Development PC Tablet User Manual

## Manualsum, simplified manuals

### Table of Contents

- [FOXX Development PC Tablet User Manual](#)
  - [Points for Attention](#)
  - [Basic Operation](#)
    - [Power on](#)
    - [Power off](#)
    - [Sleep](#)
    - [Power reset](#)
    - [Screen time out](#)
    - [Using the Micro SD/TF card](#)
      - [Inserting and Pulling out the Micro SD/TF card](#)
        - [Inserting:](#)
        - [Pulling:](#)
    - [Battery:](#)
    - [Charging:](#)
  - [Shapes and Keys](#)
  - [Setting up your tablet](#)
    - [Organize the Home screen](#)
    - [Change your tablet's view](#)
    - [Backup your data](#)
  - [Specifications](#)

# FOXX Development PC Tablet User Manual

FOXX Development PC Tablet User Manual

FCC id: [2AQRM-T10A](#)

## Points for Attention

1. Do not use the tablet in exceptionally cold or hot, dusty, damp or dry environments.

[Manualsum](#)

2. Do not let the tablet to fall down while using it.
3. Please charge your battery when
  - **A.** Battery power icon shows an empty icon;
  - **B.** The system automatically shuts down and the power is soon off when you switch on the unit once again;
  - **C.** There is no response if you press any key.
4. Please do not disconnect power abruptly when the tablet is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program.
5. When this unit is used as a moving disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this company will be held no liable.
6. Please do not dismantle this unit by yourself. If there is any inquiry, please contact the dealer.
7. There will be no separate notice in the case of any change in the functions and performance of this product.

## **Basic Operation**

### **Power on**

In the shutdown state, long press power button to wake up the device.

### **Power off**

In the power on state, long press the power key 3 seconds, then select "Power off" to shut down in the pop-up tablet options.

### **Sleep**

'When the device is under normal operating conditions, short press the power button into hibernation, then, screen will close. Short press the power button again, it will resume to normal mode.

### **Power reset**

If there is shutdown to the tablet in the process of operation, you can turn off and restart the tablet by pressing "reset" key.

### **Screen time out**

If you do not contact the tablet within the set time, and do no operate by the button, the contact screen will automatically turns off.

In any state, short press power button activates the device, then skid the screen to unlock it.

If it is necessary to deactivate the contact screen time out function, you can set the [Screen time out] option under [display] function into “Never”.

## **Using the Micro SD/TF card**

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the Micro SD/TF card. If no card is inserted, the second disk can't be opened. This unit supports the extension of the

Micro SD/TF card from 4GB to 32GB.

## **Inserting and Pulling out the Micro SD/TF card**

### **Inserting:**

Put the Micro SD/TF card face up (side with words), and slightly force the card into the socket of the card, i.e., connecting the unit. Under this state, you can play the content in the Micro SD/TF card.

### **Pulling:**

Slightly push the Micro SD/TF, and it will bounce by a section, and then you can take it out.

### **Caution:**

**Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage of the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD/TF card).**

## **Battery:**

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The tablet can be set up by the user as “user define power off time” or “display setup” to save batteries.

## Charging:

This unit can be recharged by Type-C USB port, please charge the tablet only with equipped USB cable and Charger. Other Chargers might damage the machine. Warnings for charging:

 
1. A new battery may be empty and not charged before you get the tablet.
2. If the tablet is not used for long time, it is better to charge it to full capacity every 2or3 months during storage.

Power adapter is a key component of the portable tablet, which plays a crucial role in keeping the portable tablet's normal work and protecting your security when using the tablet.

Long-term customer surveys and after-sales service practice show that the malfunction of the portable tablet were caused by using inappropriate accessories in most cases, particularly the power adapter. Use the substandard power adapter will shorten the life of the portable tablet. The voltage instability will seriously affected the normal work of the portable tablet and bring permanent damage on the tablet's performance and reliability.

Use the substandard power adapter will also reduce the vocal quality of the tablets. Shutdown the tablet when you do not use it. In addition, use the substandard power adapter will cause combustion and explosion which will disserve the safety of consumers.

## Shapes and Keys

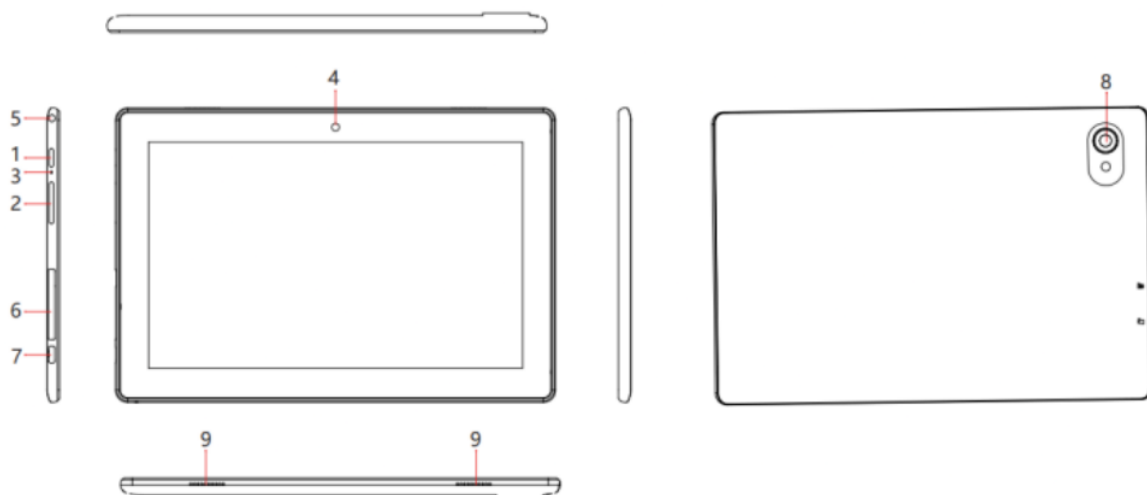


1. Power button
2. TF Card slot
3. Reset
4. Front camera
5. Earphone jack
6. Volume button


7. Type-C USB port
8. Rear camera
9. Speaker


## Setting up your tablet



 
 
After charging the battery, press and hold the power button for up to 5 seconds until the pattern was displayed.

Follow the on-screen instructions to select a language and a wireless network. On the Home screen, tap  in app list, tap “Settings”-) “Network& Internet” and then tap Wi-Fi to turn it on.

Click  in Home screen to enter APK list

Short press “back”or click  screen will go back to the upper level menu;

 
Click  on screen will go back to Main menu;

Click  will move to recent task-bar.

**NOTE:** The appearance of the Home screen may vary.



Google Search—Allow you to type one or more keywords to search.



Google Voice—Allow you to speak one or more keywords to search among the installed apps.

## Organize the Home screen

- To add an app or a widget to the Home screen, touch the Apps tab or the Widgets tab, and then tap and hold an app or widget until it is added to the Home screen.
- To remove an app or widget from the Home screen, drag it to the X at the top of the screen.

## Change your tablet's view

The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally; For portrait view, hold the tablet vertically.

NOTE: Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top of the main screen to display notifications, and then touch the screen, it will show auto-rotate icon



, touch the icon to change Landscape or Portrait.

## Backup your data

Make periodically backup of your personal data and media on your tablet to another computer, a dedicated storage tablet, or to the cloud server.

# Specifications

<b>Memory</b>	ROM	64GB
<b>General</b>	Chip	MT8766
	Resolution	10.1" 1280*800 IPS
	System	Android 13
	RAM	4GB
	WLAN	IEEE 802.11 a/b/g/n
	TP	G+P
	RTC (real time clock)	yes
	G sensor	yes
	Charger	5V 2A
	Camera	2M + 5M
	Bluetooth	BT4.2
	Speaker	yes
	Operating temperature	-5~40 ° C
<b>Language</b>	Multilingual	English, Italian, German, Spanish, Russian, Chinese, etc.
<b>Battery</b>	Battery	5000MAH
<b>Compatible format</b>	Video	H264 1080p 30 fps, H.263 720p 30 fps, MPEG-1/2 1080p 30 fps, Flash 1080p 30 fps, RMVB 1080p 30 fps, H264 stereo 720p 30 fps
	Music	MP3/AAC/WAV/APE/FLAC/OGG
	Photo	JPG, BMP, GIF , PNG
	E-Book	PDF, TXT, EPUB, etc.
<b>Software application</b>		GMS

FOXX Development PC Tablet User Manual