

GOLDEN WATER AirBass Signature True Wireless Earbuds User Manual 2BE3Y-1925380X

Manualsum, simplified manuals

Table of Contents

- [Golden Water Airbass Signature True Wireless Earbuds](#)
- [User Manual](#)
 - [HOW TO CHARGE THE CHARGING CASE](#)
 - [HOW TO CHARGE THE EARBUDS](#)
 - [ATTENTION!](#)
 - [USE OF THE EARBUDS](#)
 - [HOW TO CONNECT THE BLUETOOTH DEVICE](#)
 - [THE FUNCTION OF THE BUTTONS](#)
 - ■ ■ [Music mode:](#)
 - [Left button:](#)
 - [Right button:](#)
 - [CALL MODE:](#)

Golden Water Airbass Signature True Wireless Earbuds User Manual

HOW TO CHARGE THE CHARGING CASE

Use the supplied micro Type-C charging cable to connect the charging box. The charging box will turn ON automatically and will be charged.

1. During charging the LED indicators will be red and keep flash. [Manualsum](#)

2. When the charging box is completely charged, the LED indicators will keep red.

HOW TO CHARGE THE EARBUDS

Place the earbuds in the charging box. The charging box will automatically turn on and begin to charge the earbuds.

1. During charging the LED indicators on the earbuds will be RED
2. When the earbuds are completely charged, the RED LED will turn off.

ATTENTION!

The earbuds will turn off automatically if there has been no connection with your mobile phone for 5 minutes.

USE OF THE EARBUDS

Take out the earbuds from the charging box, the earbuds will be turned on automatically. Place the left and right earbud correctly into your ear.

HOW TO CONNECT THE BLUETOOTH DEVICE

You are required to pair the PAIRING NUMBER with your mobile phone once before using it. Make sure that the earbuds are turned ON. Let your phone search for devices and select PAIRING NUMBER from the list.

THE FUNCTION OF THE BUTTONS

Music mode:

Left button:

1. Short press once (1 second): Pause/play music
2. Press 2 times: Decrease the volume
3. Press 3 times: Voice Assistant
4. Long press 2 seconds: Switch to the previous song (after switching to the previous song, continue to long press to turn off)

Right button:

1. Short press once (1 second): Pause/play music
2. Press 2 times: Increase the volume
3. Press 3 times: Redial the last call
4. Long press 2 seconds: Switch to the next song (after switching to the previous song, continue to long press to turn off)

CALL MODE:

1. Short press once(1 second):answer/end call
2. Long press 2 seconds: Reject the incoming cal