

# **ART+SOUND KAWAII CAT HEADPHONES USER MANUAL**

## **Manualsum, simplified manuals**

### Table of Contents

- [ART+SOUND KAWAII CAT HEADPHONES USER MANUAL](#)
  - [Before You Begin...](#)
    - [Caution](#)
  - [In the Box](#)
  - [Location of Controls](#)
  - [Bluetooth Pairing](#)
  - [Using The Headphones](#)
    - [Powering ON/OFF](#)
    - [Adjusting Volume](#)
    - [Answering/Ending Phone](#)
    - [Playing Music](#)
    - [Playing/Pausing Music](#)
    - [Skipping Tracks](#)
  - [Warranty Information](#)

# **ART+SOUND KAWAII CAT HEADPHONES USER MANUAL**

ART+SOUND KAWAII CAT HEADPHONES USER MANUAL

([2BHI2-ASWH13CT](#))



ASWH13CT-TGT

## **Before You Begin...**

### **READ CAREFULLY AND KEEP THIS MANUAL**

#### **Caution**

To ensure safe and proper use, read all safety information before using the device.

Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.


[Manualsum](#)

- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The included built-in batteries should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of batteries.

## **In the Box**

- Wireless Headphones
- Type-C Charging Cable
- Instruction Manual

## Location of Controls

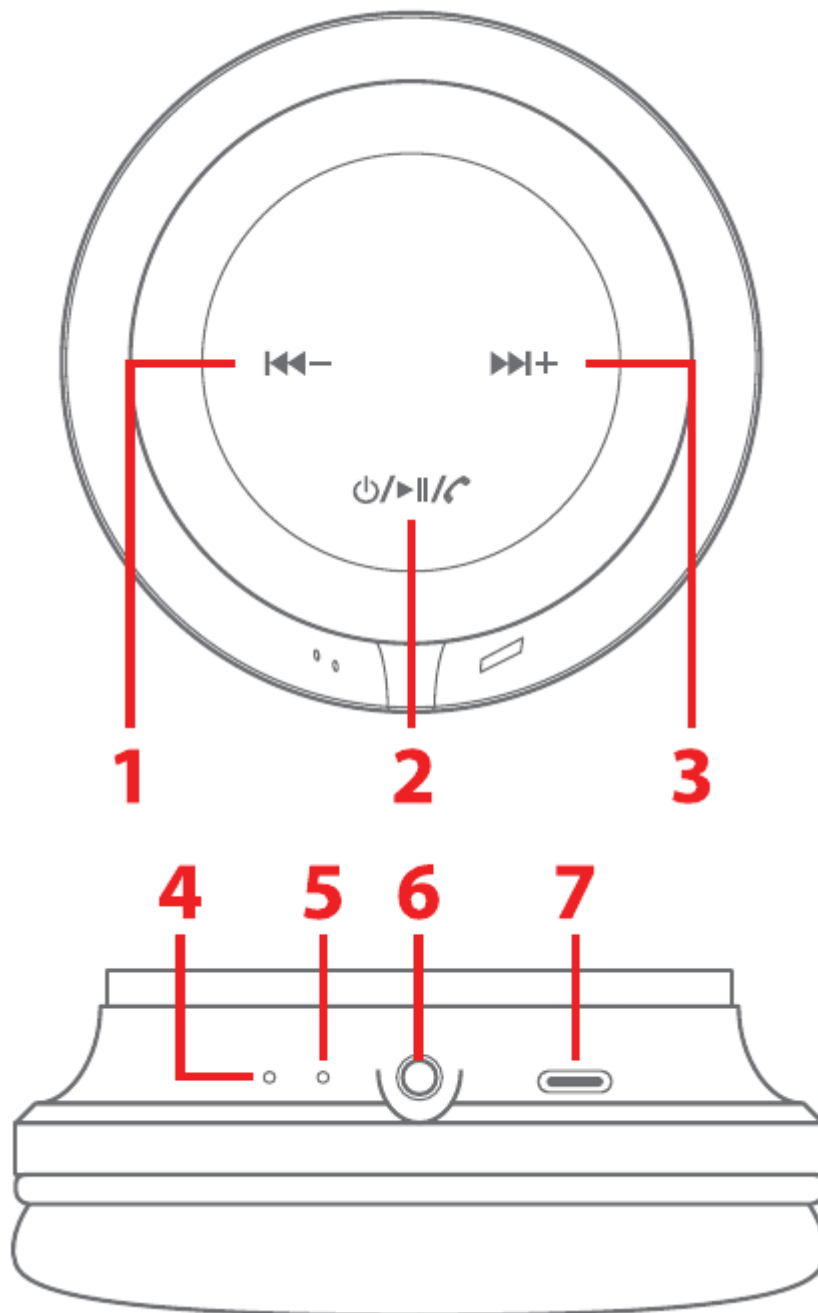

1. [1] Button: **Long Press** - Decrease volume | **Quick Press** - Skip to previous track
2. [2] Button: **Long Press** - Power headphones | **ON/OFF Quick Press** - Play/pause music, answer/end phone call
3. [3] Button: **Long Press** - Increase volume | **Quick Press** - Skip to next track
4. Charging LED Indicator
5. Bluetooth LED Indicator
6. AUX-In Jack
7. Charging Port

# Bluetooth Pairing

1. Long press the [Ⓜ / > | / Ⓜ\*] button. A tone will be heard and the Bluetooth LED indicator will flash BLUE.
2. Set your mobile device to search for Bluetooth devices. When your mobile device finds the headphones select ASWH13CT-TGT from the list of found devices.
3. After a successful pairing, a tone will be heard and the Bluetooth LED indicator will slowly flash BLUE.

# Using The Headphones

## Powering ON/OFF

Long press the [Ⓜ / > | / ~ ] button to power the headphones ON. When powered ON, the cat ears will flash BLUE Long press again to power OFF.

## Adjusting Volume

- Long press the [⏪ =] button and [⏩ +] button to adjust volume.

## Answering/Ending Phone

- Quick press the [Ⓜ / ⏩ | / Ⓜ\*] button to answer an incoming phone call. Quick press again to hang up.

## Playing Music

To enjoy music wirelessly on your headphones, make sure you are paired to a Bluetooth-enabled device. Once paired, you can control media playback and volume adjustment with the controls on your paired device or the controls on the headphones.

## Playing/Pausing Music

- Quick press the [Ⓜ / ⏩ | / Ⓜ°] button to pause music playback.
- Quick press the [Ⓜ / ⏩ | / Ⓜ°] button again to resume music playback.

## Skipping Tracks

- Quick press the [⏮ =] button and [⏭ +] button to skip to tracks.

Attach the supplied USB charging cable to the USB charging port on the underside of the earpiece. Attach the other end to a computer, USB charging device, or 5V USB adapter and plug into a wall outlet.

The LED indicator will turn RED while charging and turn off when charged.

# ART+SOUND™

## Warranty Information

90-Day Limited Warranty

Territory: United States/Canada

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- Visit our customer support portal: [www.customersupport123.com](http://www.customersupport123.com) and select "Support."
- Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURER [Resubsum](#)

LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.