## Hefei Eileen Remote Controller User Manual 2BGXK-RE033

### **Manualsum**, simplified manuals

#### Table of Contents

- Remote controller User Guide 2BGXK-RE033
  - INSTALLING RECEIVER IN CEILING FAN
    - A. Safety precautions:
    - B. Electrical rating:
    - C. Installing receiver in fan:
  - OPERATING TRANSMITTER:

# Remote controller User Guide 2BGXK-RE033

#### **INSTALLING RECEIVER IN CEILING FAN**

#### A. Safety precautions:

WARNING: HIGH VOLTAGE! Disconnect power by removing fuse or switching off circuit breaker. Do not use with solid state fans. Electrical wire must meet all local and national electrical code requirements.

#### **B. Electrical rating:**

110/240V 50/60Hz MAX. Motor watts: 40W MAX. Light watts: 60W


Otherwise power can cause serious injury or death.

#### C. Installing receiver in fan:

(FI1G.2)


- 1. Remove power from the circuit.
- 2. Remove ceiling fan canopy from the mounting bracket.

- 3. Disconnect existing wiring between ceiling fan and Supply in electrical junction box.
- 4. Make connections as follows, using the wire nuts supplied: (F1G.1)

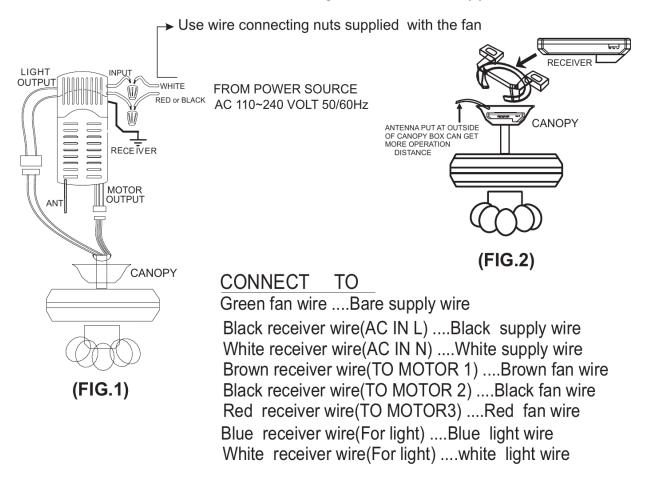

#### **OPERATING TRANSMITTER:**

- **A.** Install 2032 3 volt battery. (To prevent damage to transmitter, remove the battery if not used for a long time).
- **B.** Store the trans mitter away from excessive heat or humidity.
- **C.** Operating the buttons on the panel of the transmitter.
- **D.** Keep pressing the light button "0 in excess of 0.7 second and it becomes a dimmer.

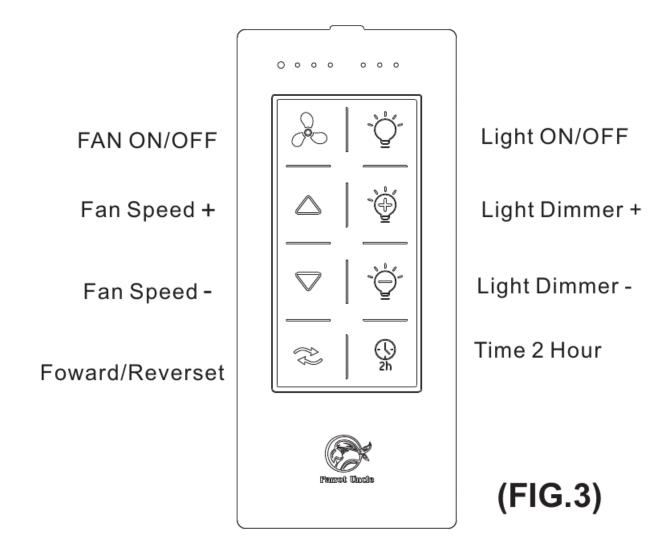

**D.** Setting the codes on the receiver: The Learn Key must be pressed with in 5 seconds, after pressing the Power button. If not, please press the Power button to restart. Keep pressing the button LEARN key in excess of 3 second it becomes a LEARN status. The receiver can remem ber the last codes status. The ceiling fan light flash two times. (FIG.4)

