

# SMART MULTI-MODE RADIO User Manual 2AIV6-IRC380

## Manualsum, simplified manuals

Table of Contents

- [SMART MULTI-MODE RADIO User Manual](#)
  - [Simple Troubleshooting](#)
  - [Specification](#)

# SMART MULTI-MODE RADIO User Manual

SMART MULTI-MODE RADIO User Manual

(2AIV6-IRC380)

## Simple Troubleshooting

<b>Problems</b>	<b>Solutions</b>
<b>Unable to Power On</b>	The battery may be incorrectly installed. Re-install the battery. The battery may be out of power. Charge or replace the battery. The battery may be in poor contact due to dirt or damage. Clean the electrical contact or replace it.
<b>Terminal Crash</b>	Too many APPS on processing. Force some programs to quit or restart the terminal.
<b>Buttons Not Working</b>	The buttons may not work temporarily, restart the terminal. The buttons are broken, contact the dealer or our company.
<b>White Screen Error</b>	Display screen may not work temporarily, restart the device. The display screen is damaged, contact the dealer or our company.

<b>Echo or Noise During Connecting</b>	The signal may be weak, make sure the terminal is within network coverage. The speaker may be covered, clean the speaker surface.
<b>Unable to Detect SIM Card</b>	The SIM card may be incorrectly installed. Remove and re-insert the SIM card. The SIM card may be not working due to dirt or damage. Clean the electrical contact or replace it.
<b>Unable to Locate</b>	The signal is weak and the radio can't receive the signal. Move to open and flat area and try again.
<b>Unable to Charge</b>	The power adapter plug may be damaged or with poor contact. Pull out and re-plug the adapter. The charging cable connectors may be damaged or with poor contact. Pull out and re-insert the cable.
<b>Shorter Standby Time</b>	The battery life becomes shorter in high temperature environment. Replace a new qualified battery. Power consumption increased in areas with weak signal. Please temporarily tur off the device.
<b>Unable to Connect the Network</b>	SIM card cannot work properly or cannot be used. Make sure the SIM card have balance and not overdue. Mobile network is not enabled, swift on the SIM card network and contact the network operator to activate the cellular network.

## Specification

<b>Operating System</b>	Android 10
<b>Frequency</b>	2G: B2/B3/B5/B8 3G: B1/B2/B4/B5/B8 4G TDD-LTE: B38/B39/B40/41 4G FDD-LTE: B1/B2/B3/B4/B5/B7/B8/B12/ B14/B17/ B20/B26/B28/B66
<b>Support CPU</b>	GPS GLONASS/AGPS/BEIDOU QM215
<b>Memory</b>	2GB+ 16GB(ROM)
<b>Voltage</b>	7.6V
<b>Screen Size</b>	2.4
<b>Camera</b>	Front: 5MP / Rear: 13MP, 107° Wide Angle
<b>Battery</b>	7.6V Removable Battery, 3100mAh
<b>Dimension (H*W*D)</b>	162.3*61*34.5mm (Without Antenna & Belt clip)
<b>Weight</b>	=386.49
<b>Working Temperature</b>	-20°C ~ 60°C -40°C ~ 85°C

## **Storage Temperature**