

[JLR Gear Magnetic Wireless Battery User Manual](#)

[Manualsum](#), simplified manuals

Table of Contents

- [JLR Gear Magnetic Wireless Battery User Manual](#)
 - [INSTRUCTION MANUAL](#)
 - [Intruction for use](#)
 - [SPECIFICATION](#)
 - [CONTAINS](#)
 - [DISPOSAL OF ELECTRONIC PRODUCTS](#)
 - [WARNING](#)
 - [WARRANTY CONDITIONS](#)

JLR Gear Magnetic Wireless Battery User Manual


JLR Gear Magnetic Wireless Battery User Manual

FCC id: [2AMG5-STG-7076-KB](#)

INSTRUCTION MANUAL

Magnetic Wireless Battery Pack 10000mAh

PD-15

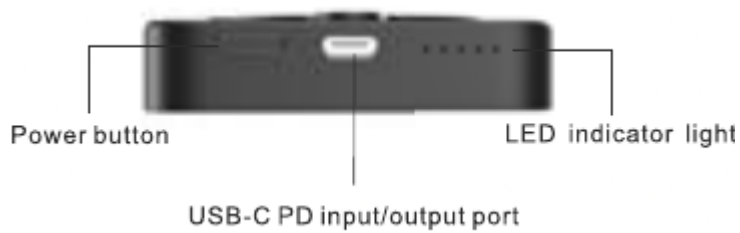



Intruaction for use

1. There are 2 ways to charge your device, connect PD-15 Power to your device through

A. The USB-C PD port

B. Wireisss charging

Note: To charge small devices like Bluetooth earbuds, fitness tracker. Put the device to the PD-15 wireless charge area, it will naturally charge the device,

2. To Recharge your PD-15, connect the USB-C port to a power adapter.

The LED will flicker in white progressively.

Indication charging is in progress. All LEDs will be ON in white when charging is completed. Unplug PD-15 from the power supply.

Indicator	Status
1 LED ON in green color	Wireless Charging Mode is ON
1 LED ON in blue color	Fast Charging Mode is ON
4 LED ON	Battery Level > 75%
3 LED ON	Battery Level > 50%

2 LED ON	Battery Level > 25%
1 LED ON	Battery Level > 10%
1 LED Flashing	Battery Level < 10%
LED blink progressively	Small current mods is ON
1 LED flickers in red	Foreign object s detected (Please remove the foreign object)

SPECIFICATION

Model	PD-15
Capacity	10000mAh
Rated Capacity	5600mAh
Input	5V=3A,0V=2A(USB-C)
Output	5V=2.4A,9V=2.22A,12V=1.5A (USB-C PD)
Wilress Output	5W, 7.5W,10W
Materials	Aluminum + ABS
Size	102°68" 14mm
Weight	188g

CONTAINS

1. Magnatic Wireless Battery Pack 10000mAn
2. USB-Ato USB-C charging cable (30cm)
3. Instruction manual

DISPOSAL OF ELECTRONIC PRODUCTS

1. Do not place the product as household waste:
2. Please dispose of discarded electronic products, properly according to local regulations:
3. Encourages you to participate in electronics recycling program.

WARNING

1. Do not dismantle or modify the products;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources:
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product.
5. Stop charging or using the product in case of ballery expansion.
6. Make sure to remove metallic, magnetic protective case or chip cards like bank cards. Etc from your device when charging.
7. While charging, the charger may heat up. This is normal and should not affect charger's performance. If the charger foels hot to the touch

- during this charging process, remove the device from the charger and allow it to cool down before restarting the charging process
8. Avoid using bent or damaged USB cable.

WARRANTY CONDITIONS

1. We are responsible for 12 months quality guarantee'
2. A valid warranty card and original purchase. invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the products if; (A)it has explicitly modified or repaired in any way by persons other than technicians of this company or; (B)it has been damaged through misuse, malicious acts, negligence , inflow of any liquid or; (C)losses or damages are caused by force majeure or natural disasters.
4. No alteration to this use guide will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please consult the dealer about the product compatibility with your cell phone/PDA before purchase. Product specifications are subject to change without prior notice.