<u>Keychron B6 Pro Ultra-Slim</u> <u>Wireless Keyboard User</u> <u>Manual</u>

Manualsum, simplified manuals

Table of Contents

- Keychron B6 Pro Ultra-Slim Wireless Keyboard User Manual
 - IN THE BOX:
 - **B6 Pro ULTRA-SLIM WIRELESS KEYBOARD SPECIFICATIONS**
 - <u>B6 Pro ULTRA-SLIM WIRELESS KEYBOARD OVERVIEW</u>
 - **DEFAULT KEY LAYOUT:**
 - KEY DESCRIPTION
 - FUNCTION DESCRIPTION:
 - <u>CHARGING</u>
 - 2.4GHZ / CABLE / BLUETOOTH MODE (MODE TOGGLE)
 - 2.4GHZ MODE
 - <u>BLUETOOTH MODE</u>
 - SWITCH BLUETOOTH DEVICES
 - <u>RECONNECT:</u>
 - WIRED MODE:
 - TURN OFF THE KEYBOARD
 - TROUBLESHOOTING
 - Safety Precaution:
- Keychron, Inc.

Keychron B6 Pro Ultra-Slim Wireless Keyboard User Manual

Keychron B6 Pro Ultra-Slim Wireless Keyboard

Keychron Technology (Shenzhen) Wireless Mechanical Keyboard User Manual

2BGKB-B6PRO



IN THE BOX:

- Keychron B6 Pro Ultra-Slim Wireless Keyboard x1
- Type-C Cable x1
- Type-A to Type-C Adapter x1
- Type-A 2.4GHz Receiver x1
- Quick Start Guide x1
- Silicone Skin x1





4 Switch To The Right System

Manualsum



5 Switch Between Function And Multimedia Keys

Press fn + X + L (for 4 seconds) to switch



6 Reset Keyboard

Hold fn + J + Z for 4 seconds.



7 The Keychron Launcher App

Please visit launcher.keychron.com to access the Keychron online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more. If it cannot recognize your keyboard, please reach our support to get instruction.



- The online launcher App can only run on the latest version of Chrome, Edge, and Opera browsers yet.
- The online launcher App only works when the keyboard is connected by wire to the computer.

8 The Layers

There are four layers of key settings If your system toggle is switched to on the keyboard. The layer 0 and layer Mac, then the layer 0 will be 1 are for the Mac system. The layer 2 activated. and layer 3 are for the Windows system.

If your sy Windows, activated are using please m instead o 0). This is people ar



B6 Pro ULTRA-SLIM WIRELESS KEYBOARD SPECIFICATIONS

- Number of keys: 109
- Battery: 800mAh
- Battery life: 1200 hours
- Charging time: Around 2.5 hours
- Charging port: Type-C
- Mode: 2.4GHz / Bluetooth / Wired
- 2.4GHz / Bluetooth operating distance: Within 10 meters (open space)
- Name of Bluetooth device: Keychron B6 Pro
- Operating environment: -10 to 50°C

Technical specifications can be subjected to change without notice, we apologize for any inconvenience caused.

B6 Pro ULTRA-SLIM WIRELESS KEYBOARD OVERVIEW





- 1. Bluetooth Channel
- 2. Num Lock Indicator
- 3. Caps Lock Indicator
- 4. 2.4GHz / Bluetooth Indicator
- 5. Charging Indicator
- 6. BT Cable(Off) 2.4G (Mode Toggle Swtich)
- 7. Mac Win (OS Toggle Switch)
- 8. Type-C Charging Port

DEFAULT KEY LAYOUT:

LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.



Layer 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.



LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.



LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.



KEY DESCRIPTION

Scr-	Screen Brightness Decrease
Scr+	Screen Brightness Increase
Mission Control	Mission Control in macOS
Launch Pad	Launch Pad in macOS
Search	Search
Screen Lock	Screen lock in macOS
Prvs	Previous
Play	Play/Pause
Next	Next
Mute	Mute
Vol-	Volume Decrease
Vol+	Volume Increase
PrtSc-m	Print Screen in macOS
Emoji-m	Open emoji in macOS
MO(1)	Layer 1 will be activated when holding this key
MO(3)	Layer 3 will be activated when holding this key
BTH1	Bluetooth Host 1
BTH2	Bluetooth Host 2
ВТНЗ	Bluetooth Host 3
2.4G	2.4 GHz Host
Task	Task View
File	File Explore
Boot	Bootloader
Calc	Calculator
DESKTOP	
_L-m	Switch desktops Left in macOS
DESKTOP	
_R-m	Switch desktops Right in macOS

N.Lck	Num Lock	
N.Ent	Numpad Enter	
Cmd-		

Comma Open preferences for the front app in macOS

LED STATUS OVERVIEW

LED Location	Function	Status Charging – static red
Power indicator	Charging	Fully charged – static green
		Pairing – slow blinking
Bluetooth / 2.4GHz indicator	Bluetooth / 2.4GHz	Paired – static light and then off
		Reconnecting – fast blinking
Cans lock indicator	Caps Lock	Enable Caps Lock - static white
		Disable Caps Lock - light off
Num lock indicator	Num Lock	Enable Num Lock – Static white
		Disable Num Lock – light off

FUNCTION DESCRIPTION:

CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Power Indicator: a red light will stay on while charging; fully charged in around 2.5 hours, the light turns green.

*The Keychron keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The Keychron Bé6 Pro can be charged in 2.4GHz/Cable/Bluetooth mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4GHZ / CABLE / BLUETOOTH MODE (MODE TOGGLE)

2.4GHZ MODE

- 1. Connect the 2.4GHz receiver to your device's USB Port.
- 2. Switch the toggle to the 2.4GHz option. The keyboard will automatically connect to your device.

BLUETOOTH MODE

- 1. Switch the toggle to the Bluetooth option.
- 2. Hold "fn+1" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).
- 3. Search for the Bluetooth device "Keychron Bé Pro" on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination "fn" + "1" / "Fn +2" / "fn" + 3"

*The Bluetooth indicator will continue to flash for 3 minutes.

**Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.

SWITCH BLUETOOTH DEVICES

Short press key combination "fn" + "1" / "fn" + "2" / "fn" + "3" to switch to other device.

RECONNECT:

- 1. Switch the keyboard to the Bluetooth option to activate the keyboard.
- 2. The Bluetooth indicator flashes for 3 seconds and automatically pairs with the last paired device.
- 3. If the Bluetooth indicator is off, press any key to enter the reconnection mode again.

* The keyboard must have been paired with the device to perform this function.

WIRED MODE:

- 1. Switch the toggle to the Cable option (it only works when a USB cable is plugged in).
- 2. Connect our cable with your PC and keyboard.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

TURN OFF THE KEYBOARD

Switch the keyboard to the Cable(Off) option and unplug the power Mablelsum

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My keyboard isn't working in Bluetooth mode.

For the computer/smartphone: Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it. Then restart your device.

For the keyboard: Turn the keyboard off and back on. Then reconnect it to your device.

My keyboard isn't working in 2.4 GHz mode.

Ensure the toggle is set to 2.4 GHz, remove the receiver from your device, and press "fn" + "4" for 4 seconds to force pair, then reinsert the receiver into the device, keeping the keyboard within 20 cm of the receiver for optimal pairing.

Bluetooth connection is interrupted even within 10 meters.

Check if the keyboard is resting on a metal surface that can interfere with the Bluetooth signal.

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices. <u>Manualsum</u>

*Multimedia keys:

☆/☆/ロロ/ロロ/Q/Δ/◁/レリ/レ▷/◁/◁)/፡፡››/፡◊

Function keys:

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12 / F13

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below $-10^{\circ}C(14^{\circ}F)$ or above $50^{\circ}C(122^{\circ}F)$ to preserve the lifespan of the keyboard.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

https://www.keychron.com

Support@keychron.com





🕅 @keychronMK

Designed by Keychron

Made in China



B6 Pro 无线超薄键盘

Keychron B6 Pro Ultra-Slim Wireless Keyboard User Manual

Manualsum