

[Ningbo Homemate Products RADIO TRANSMITTER User Manual](#)

[Manualsum](#), simplified manuals

Table of Contents

- [Ningbo Homemate Products RADIO TRANSMITTER User Manual](#)
 - [Instruction Manual](#)
 - [Setup](#)
 - [Battery Information and Replacement](#)
 - [Specifications](#)
 - [SAFETY PRECAUTIONS](#)
 - [WARNING](#)

Ningbo Homemate Products RADIO TRANSMITTER User Manual

Ningbo Homemate Products RADIO TRANSMITTER User Manual

FCC id: [ZRMHM-ZJ-04B](#)

Instruction Manual

Setup

- Plug the remote base into a grounded 3-prong outlet.
- Plug your electrical device into the remote base. Be sure that your electrical device is powered ON.
- Use the button on the remote control to turn your device ON and OFF.

Battery Information and Replacement

The remote control uses a 3-volt CR2032 lithium battery. To replace the battery, slide off the battery cover on the back of the transmitter. Insert a [Manualsum](#)

new CR2032 lithium battery, making sure to match up the (+) and polarity markings. To test, press the ON or OFF buttons to make sure the LED lights up. Slide the cover back into the transmitter. DO NOT dispose of batteries in fire. Batteries may explode or leak.

Specifications

3 3-wire Grounded Outlet and Plug | Rated:125V 60Hz 8A 1000W Resistive or general Purpose, 5A 625W Tungsten 1433.92Mhz frequency | CR2032 lithium battery(included).

CAUTION: DO NOT splice, repair, or modify any part of this product. Unplug when not in use. Fully insert the plug. DO NOT use if damaged. Inspect this product periodically. Use ONLY within the electrical ratings as marked on this product and package. DO NOT plug in more than a total of 1000 watts in this remote set. If the watts are not marked on your appliance, multiply the amperage rating (on the appliance nameplate) by 125 to determine the equivalent watts. Add determined watts for each plugged in appliance or lamp (sum of watts on bulbs) to find total watts being used.

- Only use CR2032 batteries and be sure to match the (+) polarity markings.
- Do not mix older batteries and new batteries from this product.
- Remove exhausted or dead batteries from the transmitter.
- Remove batteries if this product is not to be used for a long period of time.
- Do not dispose of batteries in fire. Batteries may explode or leak. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.
- This product is a Radio Frequency Device (RF) and as such the range of the remote control is dependent on many unknown factors. Actual operational distance will vary depending on walls and line of sight obstructions, and other nearby electronic devices.

SAFETY PRECAUTIONS

1. Your remote control is powered by a 3V CR2032 battery(included). Remove the tab from the battery compartment of the remote control before use.
2. Ensure the batteries are installed correctly according to polarity (+ and -).
3. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
4. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.**
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



NOTES

1. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
2. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. **DO NOT** dispose of batteries in household trash or incinerate.
3. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.
4. Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

WARNING

INGESTION HAZARD:

This product contains a button cell or coin battery.

[Manualsum](#)

