English

Ouick Installation Guide



ame	State	Indication	
O	Red	Energy Indicator	
÷	On	2.4 GHz wireless band is enabled.	
7	Off	2.4 GHz wireless band is disabled.	
g	Flashing Blue	WPS connection is in progress. This may take up to 2 minutes.	
No.	Flashing Green	The extender is connected to the Internet.	
2	Solid orange	Router U9 is connected to the main router, but is too far away.	
9	Solid green	The U9 router is connected to the router and is in a good location.	
-	Blinking Green	A powered device is connected to the LANWAN port of the router.	
-	Off	No powered device is connected to the LAN/WAN port of the router.	

Item	Description	
Reset Button	Press and hold this button for more than 5 seconds to reset the router to factory settings.	
WPS button	Press this button to enable the WPS function.	
LAN/WAN port	To connect to a DSL/cable modern or Ethernet connector.	

A . O . S MASO Next NAME OF TAXABLE PARTY. __O + 5.0 Wait until the LED (a) is solid green. You can find the network names with EXT in the list of Wi-Fi

Relocate

Mode selection

·English

1. Plug the extender into a power outlet between your router (Home Network) and the "dead" Wi-Fi hotspot. The location you choose must be within range of your existing home network.

2. Wait until the LED is on solid green. If not, relocate it closer to the router for good (or better) signal quality.


WiFi Repeater Mode

In this mode, the router extends the existing wireless coverage in your home.

Plug the extender into a power outlet near your main router and wait until



the LED 🙃 🥥 🌀 lights up and then turns off.

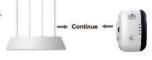




2. Set repeater mode

METHOD ONE Using WPS (Wi-Fi Protected Setup) Using WPS is an easier way to extend your main network.
It is recommended that you use this method if your main router has
the the WPS button. The button might look like one of these:

3 Within 2 minutes, press the WPS buttor on the extender for 1

Walt until the LED
is solid green.
You can find the network names with_EXT in your phone's Wi-Fi network list, indicating a successful WPS connection. If not, use METHOD

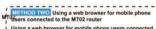

Using a web browser for mobile phone users connected to the MT02 Router

1. Find the SSID (Network Name) printed on the label of

MT02 router. Connect your mobile phone to the MT02 router's net



Connect to the extender's network: Extender-a4f97c (The SSID on the router's MT02 label).

Extended Network Names: Name of the main router's network with _EXT at the end, but can have different SSIDs (network names) if you customised them during setup. Extended Network Password: Share the same passwords as your main networks.

Frequently Asked Questions (FAQ)

- Frequently Asked Questions (FAQ)

 Q1. What do I do if the legin window does not appear?

 If the computer is configured with a static or fixed IP address, change the settings to obtain an IP address automatically.

 Check if http://192.188.11.1 is entered correctly in the web browser.

 Make sure your computer is connected to the Minl Router's network.

 Use another web browser and ty again.

 Restart your router and try again.

 Disable the currently used network adapter and then re-enable it.

 Q2. What do it of it cannot access the internet?

 Check if the Internet is working properly by connecting a computer directly to the modem using an Ethernet cable.

 If not, contact your Internet service provider. Restart your router and try again.

 Q3. How do I reset the router to factory settings?

 While the router is powered on, press and hold the reset button on the back panel of the router for approximately 5 secon Q4. Why is the repeater mode not setting up successfully?

 You may have entered the router's wireless password incorrectly, please log in and verify the wireless password.

 The Mini Router and reconfigure.

 Reset the Mini Router and reconfigure.

 Reset the Mini Router and reconfigure.



In this mode, the router transforms your existing wired network into a wireless network.

Enrutado A LAN/WAN



Connect to the MT02 router
 For mobile phone users
 1. Find the SSID (network name) printed on the label of the MT02 router.
 2. Connect your mobile phone to the MT02 router's network.





 Your Internet connection settings.
You can modify the settings according to the service information provided by your Internet service provider.



0000



5. Click finish to reboot the device





Keep the SSID and word Sessess BACK NEXT



2. Connect to the MT82 router

Router mode

Connect your router
 If your Internet connection is through a DSL/cable modem, follow steps 1, 2 and 4 to complete the hardware connections.
 If your Internet connection is through an Ethernet cable from the wall, follow steps 3 and 4 to complete the hardware connections.



2. Use the SSID (network name) printed on the label of the MT02 router.

2. Connect your mobile phone to the MT02 router's network. ChinaNet-aiJr Extender-a4f97c

Connect to the extender's network: Extender-a4f97c (the SSID on the label of the MT02 router).

?

₹

Your internet connection settings. You can change the settings according to the service information provided by your Internet service provider.



If you choose a static IP, enter the information provided by your Internet service provider in the appropriate fields.



Configure your internet connection. You can modify the settings according to the service information provided by your internet service provider (ISP).



If you choose PPPoE, enter the username and password provided by your ISP. PPPoE users typically have DSL modems.

Router	Mode Settings	
Internet Type PPPoE Account PPPoE Parceons	PROVE NOTE SHARES	Enter the username and password provided by your ISP.
SSID Wifi Password	Extender saltifits	You can keep the SSID and password or customise then for the extension.

Enjoy!

Connect to the extended networks (default SSID and password) and enjoy the internet, but they may have a different network name and password if you customise them during setup.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.