

正面

HS-BT333
Wireless
Soundbar Speaker
User Manual



SPECIFICATION

1. Product name : Wireless Soundbar Speaker
2. Function : BT/TF/USB/AUX-In/FM/RGB/TWS
3. BT version : AB5.3
4. Rated Power : 5W*2
5. Playing time : around 2 hours
6. Transmission Distance : 10M
7. Horn size : 52mm*2
8. Impedance : 4 ohm
9. Battery capacity : 1500mAh
10. Charging time : about 4 hours
11. Charging voltage : Type-C USB, DC5V, 500mA
12. Frequency response : 100Hz~20KHz
13. Material : PP+Iron net
14. Product size : 408(L) * 85(W) * 76(H)mm
15. Weight : 725g
16. Packing list



USER'S MANUAL



AUX Cable



USB Cable

SPEAKER

COMPONENTS & FUNCTION

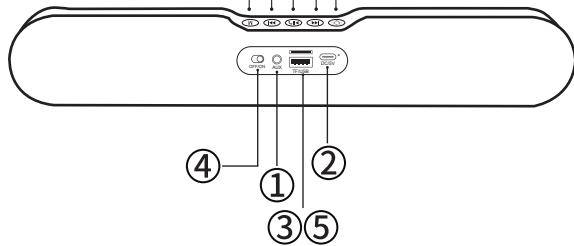
PLS KINDLY CHECK THE FUNCTION INDICATOR BEFORE USE THE SPEAKER SYSTEM






Click Play \ Pause, FM mode long press automatic channel search. Call click answer \ hang up, long press to refuse to answer, double click to make a call

Long press Volume “-”/ Short press Last song

Long press Volume “+”/ Short press Next song

Click to switch lighting mode, there are 8 kinds of lights. Press and hold for 2 seconds to turn off the light



1	 3.5mm AUX Input	2	 DC 5V Power
3	 TF Play	4	 OFF/ON
5	 USB Play		

背面

(HS-BT333) USER'S MANUAL

I. BT Mode

- 1.BT Version:BT V5.3,support HSP,A2DP,AVRCP profiles,with voice prompts.
BT pairing name:HS-BT333.
- 2.Rotate the volume knob to turn on the speaker,then the blue color indicator light is on with voice prompts.
- 3.The blue color light will flash by 100ms,and the speaker is on pairing status,use the device to serach"HS-BT333", then it will connect and pair automatically.If there is password needed, it is "0000".After connected successfully,there will be voice prompts.The blue color light will flash by 1000ms when the speaker is in using.Once the device is connected successfully,it will be automatically paired when re-use next time.

II. AUX Mode

- 1.Connect the device with the 3.5mm aux cable and the speaker will enter into the AUX mode with voice prompts.
- 2.The blue color indicator light is on in Aux mode.

 
III. Charging Mode

- 1.Charge the speaker with the charging cable.(Wall charger is also available as long as it is 5V adapter).
- 2.The red color indicator light is on when it is on charging mode, and the light is off when fully charged.

IV. Low battery protection

- 1.When the battery is lower than 3.3v and lasts for 15s,the speaker will issue the warning, and when the battery is lower than 3.1v and lasts for 15s,the speaker will issue the warning and turn off itself.

V. TWS Setting

1. To Begin Pairing, bring two HS-BT333. speaker in proximity of each other within 1m distance and switch on the Power.
2. Long press the Pause button  of one speaker, and a voice prompt will be heard like di di di then release your finger from button waiting two speaker paring themself.

VI. Disable TWS setting

1. Switch the mode of one of the speaker to TF or FM by pressing M, then the TWS will get disconnected.
- 2.If you wish to establish TWS Connection again - switch the mode back to BT mode and it will then connect automatically.

FCC WARNING

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.
The device has been evaluated to meet general RF exposure requirement.
This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.