


Quick Start Guide


M102

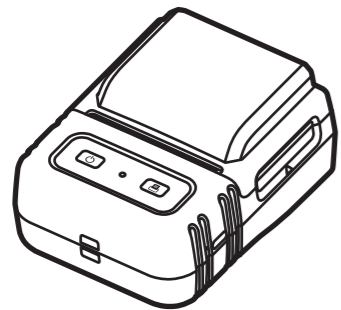

English


1. Product Introduction

1.1 Packing List

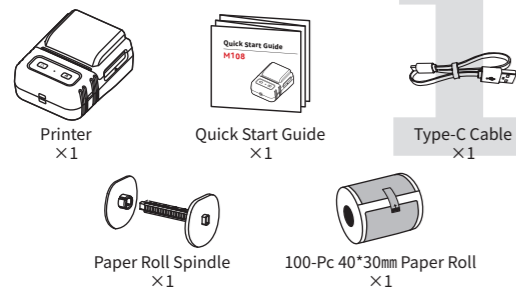

① The Paper Roll and Paper Roll Spindle have been installed in the printer. However, if you have purchased a bundled printer package, it does not include a 40*30mm -100pc Paper Roll.

1.2 Printer Parts Instruction

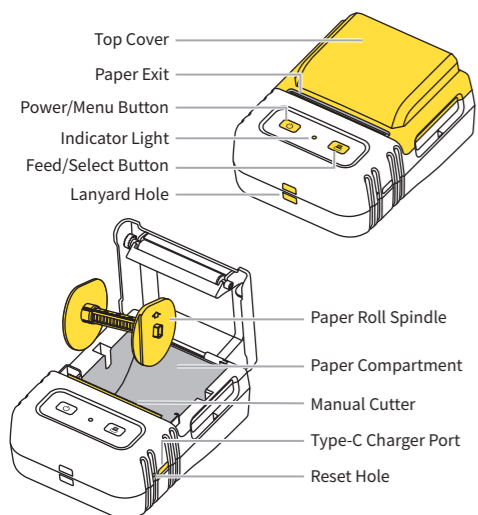

2. Getting Started

2.1 Downloading the App

Method 1: Search for the "Print Master" app on App Store® or Google Play™ for download and installation.



Print Master

Method 2: Scan the QR code to download the app. You can scan the code using your cell phone's camera, the built-in QR code scanning feature of your browser, or a dedicated QR code scanning app.



① As the Safari browser on Apple devices does not support direct QR code scanning, please use your device's built-in QR code scanner instead.

2.2 User Guide

01 Remove the protective film.




① This step is required for first use.


03 Open the app and follow the instructions to print a label.




05 Remove the liner.

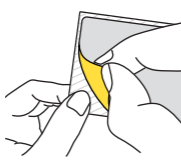

02 To turn on the printer, long press the Power Button for 3 seconds until the Indicator Light turns green.

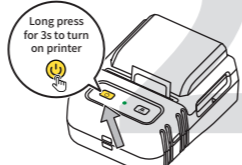

04 After printing, tear off the label along the Paper Exit.

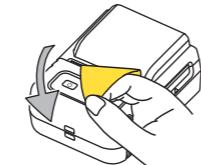

06 Attach the label to a dry, flat surface.



3. Replacing the Paper Roll


01 To turn on the printer, long press the Power Button for 3 seconds until the Indicator Light turns green.



02 Open the "Print Master" app.




03 Tap [Scan].

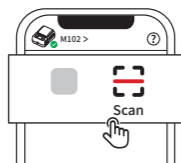

① Please use [Scan] after connecting the printer to the app. Otherwise, scanning will fail and the editing page will not be displayed.

04 Take out the unused paper roll.

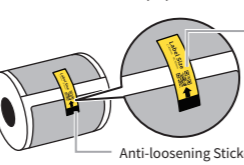


This QR code is for demonstration only. Please scan the actual QR code on your paper roll.

① If you have purchased boxed paper rolls separately, or if there is no QR code on the paper roll, please see 4. Identifying Label Sizes in the Online Guide for instructions on how to quickly access the editing page.


05 Scan the QR code on the Anti-loosening Sticker of the paper roll.




06 Paper roll size has been identified. Enter the editing page.

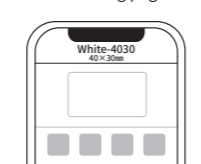


07 Hold both sides of the Top Cover and pull it upwards to open it, as illustrated.

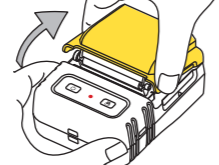

08 Take out the Paper Roll Spindle.

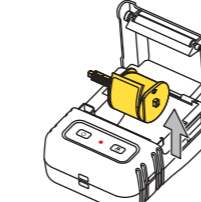


09 Remove the Movable Damper.

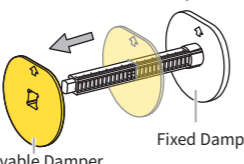


① Please remove the existing paper roll from the Paper Roll Spindle before loading a new paper roll.


10 Place the paper roll as shown in the diagram and secure the Movable Damper.

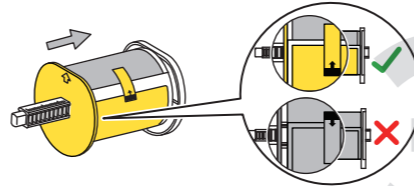

11 Tear off the Anti-loosening Sticker, place the paper roll in the printer as shown in the diagram, and ensure the two ends of the spindle are inserted into the notches inside the printer.

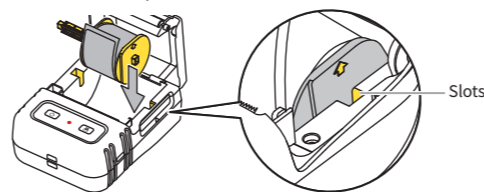


12 Pull the label paper out of the Paper Exit and close the Top Cover. The printer will then auto-calibrate.

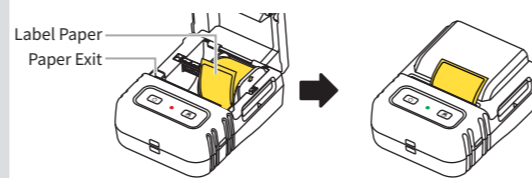

4. Charging Instructions

1. Please prepare your own power adapter (DC 5V/2A) with a Type-A port.
2. Insert the Type-C end (flat end) of the USB cable into M102's Type-C port; insert the Type-A end (wide end) of the USB cable into the Type-A port of the power adapter.
3. Upon connecting the printer to an outlet using the power adapter, please check the status of the Indicator Light. A slow flashing green light when the printer is off or a fast flashing green light when the printer is on indicates that the printer is successfully charging.
4. When the battery is depleted, charge for 20 minutes for quick usage. For a full charge, please charge for 2-3 hours or until the Indicator Light turns solid green.
5. As the printer may heat up during charging, avoid placing it on materials such as cotton or linen. Once the battery is fully charged, please unplug the charger promptly.

① Avoid using the printer while charging, as this may lead to reduced charging speed, compromised print quality, and shortened battery life.

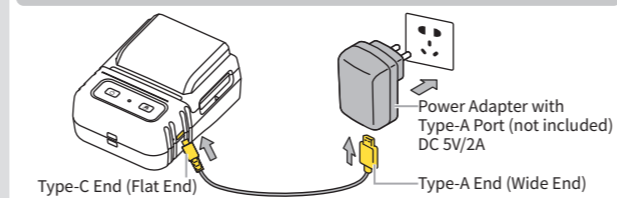

5. Accessing Detailed Online Guide

You can find more guides, video tutorials, and answers to FAQs through any of the following methods:

Method 1: Visit ms.phomemo.com/?mo=M102



Method 2: Scan the QR code.

You can scan the code using your cell phone's camera, the built-in QR code scanning feature of your browser, or a dedicated QR code scanning app.

① As the Safari browser on Apple devices does not support direct QR code scanning, please use your device's built-in QR code scanner instead.



6. Information to User

6.1 FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

6.2 ISED NOTICE(Canada)

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

6.2 ISED NOTICE(Canada)

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement IC RF exposure statement:

The device has been evaluated to meet general IC RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Déclaration d'exposition aux RF:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF d'IC. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

6.3 BATTERIES

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.

- 1) Replacement of a battery with an incorrect type that can defeat a safeguard;
- 2) Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- 3) Leaving a battery, in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- 4) A battery subjected to extremely low air or assure that may result in an explosion or the leakage of flammable liquid or gas.

Battery Capacity : 3.7V 1200mAh 4.44Wh

Type: Li-ion Polymer Battery

7. Warranty Card

Exchange Return

Customer Information	Name
	Sex
Product Information	Phone No.
	Address
Return/Exchange Form	Date of Purchase
	Order No.
	Serial No.
	Reason for Return/Exchange

Special Notes

The company assumes full responsibility for the revision and explanation of this manual, exercising utmost diligence to guarantee its accuracy. Nevertheless, please note that any technical improvements to the product may not be separately notified, and that the images of the product, accessories, software interfaces, etc. in this manual serve solely as illustrations and references. Due to product updates and upgrades, the actual product may vary slightly from the images. Please refer to the physical product for accurate representations.