 


Smart Glasses

User Manual



M10 Pro

Product Specification

Product Name: Smart Glasses

Model: M10 Pro

Lens Material: TAC/UV400

Frame Material: PC

Wireless Version: BT5.4

Transmission Range: 10m

Battery Capacity: 55 MAH*2

Charging Time: 1 Hours

 
Playing Time: 5 Hours

Input: DC5V.1A

Packing Lists:

- 1* M10 Pro Glasses
- 1* Magnetic Charging Cable
- 1* Cleaning Cloth
- 1* User Manual
- 1* Silicone Cover

Product Overview

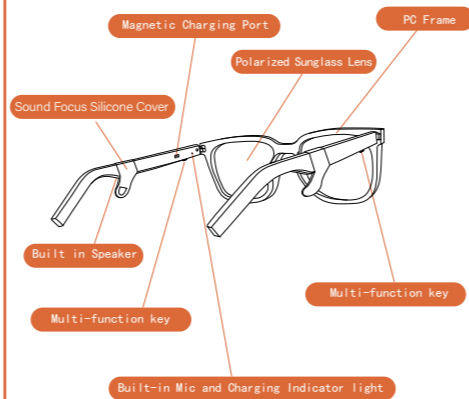

Operating Instructions

1. Power On/Off

Under the power off condition, long press and hold the left and right multi-function keys simultaneously for 3 seconds

2. Play/Pause

Under standby mode, press the multi-function key once to play or pause the music.

3. Volume Up /Down

Double-click the Right-multi-function key to increase the volume. Double-click the Left-multi-function key to decrease the volume.

4. Switch Songs

When playing music, quick press the Right-multi-function key three times to switch to the next song, and quick press Left-multi-function key three times to switch to the previous song.

5. Answer/Hang up the call

When the mobile phone calls, press the multi-function key once to answer the call and press it once again to hang up the call.

6. Call Rejection

When the mobile phone is calling, long press the multi-function key for about 2 seconds to reject the call

7. Activate Voice Assistant

Under the earbuds and mobile phone connection mode, long press multi-function key about 1.5s to activate Voice Assistant

8. Low Battery Alert

When the battery power is low, it will beep three times and then recharge the device as soon as possible.

Pairing Method

- After the glasses are switched on, it will automatically enter the pairing state, and the red and blue lights will flash alternately.
- Turn on your phone's Bluetooth, search and find the Bluetooth device "M10 Pro", and then click pairing to connect successfully.

Charging Operation

Plug one end of the Micro charging cable into the charging port and the other end into the charger to charge the glasses.
The red light will stay on during charging when charging is completed, the red lights will go out.

Tips

- Please read the user manual carefully before using this product, and keep the user manual.
- Please charge the product fully before the first use.
- If the product is not charged for a long time [more than two weeks], please charge it before use.
- Do not wipe the lens directly, first you should wet the lens, and then use the glasses cloth to wipe dry, try to use the strong absorbent glasses cloth to gently wipe clean the lens.

Cautions

- Do not disassemble or repair or modify glasses for any reason, otherwise it may cause a fire or even completely damage the glasses.
- Do not expose the device to temperatures too low or too high [below -86 ℉ or above 113 ℉].
- Do not wet or immerse the glasses in liquid.
- Do not put the glasses under the sun for a long time, otherwise it is easy to be deformed and broken by aging.

Important Safety Information

- Before using this device, please read all safety information to ensure proper and safe use.
- Using a power supply, charger or battery not approved by the manufacturer may cause fire, explosion or other hazards.
- Please use accessories approved by the manufacturer that are compatible with the device.
- Please use the device within the temperature range of 32 ℉ -95 ℉, and store the device and its accessories within the temperature range of -4 ℉ -113 ℉.
- This device uses a non-removable built-in battery. Please do not replace the battery yourself to avoid damaging the battery or the device.
- After charging, please disconnect the charger from the device and unplug the charger plug from the power socket. Do not charge the device continuously for more than 12 hours.
- The battery is prohibited from being disassembled, squeezed, hit or thrown into fire. If there is serious swelling, please do not continue to use it.
- Do not place device in a high-temperature environment (such as in a car). Overheating of the battery may cause an explosion.
- Please keep the device dry.
- If the device or any other parts are not working properly, please do not repair any product yourself.
- When connecting other devices, please refer to the user manual for the connection method, and do not connect unmatched devices at will.
- To avoid hearing damage, do not use high volume for a long time.

 
M10 Pro

Warranty and Customer Support

If you have any issues, please feel free to contact us, and we will reply within 24 hours. We offer a lifetime warranty, if you are not satisfied with the quality, you can contact us for a replacement or refund.

智能眼镜

说明书



M10 Pro

产品规格

产品名称: 智能眼镜

型号: M10 Pro

镜片材料: TAC/UV400

镜框材料: PC

无线版本: BT5.4

电池容量: 55 MAH*2

充电时间: 1 小时

播放时间: 5 小时

输入: DC5V.1A

包装清单:

- 1* M10 眼镜
- 1* 磁吸充电线
- 1* 清洁布
- 1* 用户手册
- 1* 硅胶套

产品概览



操作说明

1. 电源打开/关闭

在关机状态下, 同时长按左右多功能键 3 秒钟

2. 播放/暂停

在待机状态下, 按一次多功能键可播放或暂停音乐。

3. 增大/减小音量

双击右侧多功能键可提高音量。

双击左侧多功能键可降低音量。

4. 切换歌曲

播放音乐时, 快速按三次右多功能键可切换到下一首歌曲, 快速按三次左多功能键可切换到上一首歌曲。

5. 接听/挂断电话

手机来电时, 按一次多功能键接听来电, 再按一次多功能键挂断电话。

6. 拒接来电

当手机来电时, 长按多功能按键约 2 秒钟即可拒接来电。

7. 激活语音助手

在耳塞和手机连接模式下, 长按多功能按键约 1.5 秒激活语音助手。

8. 低电量提示

当电池电量不足时, 它会发出三声提示音, 然后尽快为设备充电

配对方法

- 眼镜开机后, 会自动进入配对状态, 红灯指示灯交替闪烁。
- 打开手机蓝牙, 搜索并找到蓝牙设备 "M10 Pro", 点击配对即可连接成功。

充电操作

将微型充电线的一端插入充电端口, 另一端插入充电器, 即可为眼镜充电。充电过程中, 红灯会一直亮着; 充电完成后, 红灯会熄灭。

提示

- 使用本产品前, 请仔细阅读用户手册, 并保存好用户手册。
- 首次使用前, 请将产品充满电。
- 如果产品长时间未充电 (超过两周), 请在使用前充电。
- 请勿直接擦拭镜头, 应先将镜头打湿, 然后用眼镜布擦干, 尽量使用吸水性强的眼镜布轻轻擦拭镜头。

注意事项

- 请勿以任何理由拆卸、修理或改装眼镜, 否则可能导致火灾, 甚至完全损坏眼镜。
- 请勿将设备暴露在过低或过高的温度下 [低于 -86 ℉ 或高于 113 ℉]。
- 请勿将眼镜浸湿或浸入液体中。
- 请勿将眼镜长时间置于阳光下暴晒, 否则容易老化变形和破裂。

重要安全信息

- 使用本设备前, 请阅读所有安全信息, 以确保正确使用。
- 使用未经制造商认可的电源、充电器或电池可能会导致火灾、爆炸或其他危险。
- 请使用制造商认可的与本设备兼容的配件。
- 请在 32 ℉ -95 ℉ 的温度范围内使用本设备, 并在 -4 ℉ -113 ℉ 的温度范围内存放本设备及其附件。
- 本设备使用不可拆卸的内置电池。请勿自行更换电池, 以免损坏电池或设备。
- 充电后, 请将充电器从设备上拔下, 并将充电器插头从电源插座上拔下。请勿连续充电超过 12 小时。
- 禁止拆卸、挤压、撞击电池或将电池投入火中。如果出现严重肿胀, 请不要继续使用。
- 请勿将设备置于高温环境中 (如汽车内)。电池过热可能导致爆炸。
- 请保持设备干燥。
- 如果设备或任何其他部件无法正常工作, 请不要自行修理任何产品。
- 连接其他设备时, 请参考用户手册中的连接方法, 不要随意连接不匹配的设备。
- 为避免听力受损, 请勿长时间使用大音量。

M10 Pro

保修和客户支持

如果您有任何问题, 请随时联系我们, 我们将在 24 小时内回复您。我们提供终身保修, 如果您对质量不满意, 可以联系我们要求更换或退款。

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.