


KLIPSCH

# M i a m i

MANUAL



LEGENDARY AMERICAN SOUND

 SINCE 1946

# TABLE OF CONTENTS

---

APPLICATION KLIPSCH CONNECT PLUS • APLICACIÓN KLIPSCH CONNECT PLUS • KLIPSCH CONNECT PLUS APP • APP KLIPSCH CONNECT PLUS • APLICATIVO KLIPSCH CONNECT PLUS  
KLIPSCH CONNECT PLUS 应用程序 • KLIPSCH CONNECT PLUS 應用程式 • KLIPSCH コネクトプラスアプリ • 클립쉬 커넥트 플러스 앱

- 1. Klipsch Connect Plus App**
- 2. What's in the Box**
- 3. Product Overview**
- 4. Retractable Handle**
- 5. Power and Battery**
- 6. Lighting Control**
- 7. Bluetooth Connection**
- 8. Aux Connection**
- 9. USB Connection**
- 10. Microphone/Guitar Input**
- 11. TWS Pairing**
- 12. Broadcast Mode Pairing**
- 13. Factory Reset**
- 14. Care and Cleaning**

 
# KLIPSCH CONNECT PLUS APP

APPLICATION KLIPSCH CONNECT PLUS • APLICACIÓN KLIPSCH CONNECT PLUS • KLIPSCH CONNECT PLUS APP • APP KLIPSCH CONNECT PLUS • APLICATIVO KLIPSCH CONNECT PLUS


KLIPSCH CONNECT PLUS 应用程序 • KLIPSCH CONNECT PLUS 應用程式 • KLIPSCH コネクトプラスアプリ • 클립쉬 커넥트 플러스 앱

## Scan the QR code for enhanced functionality.


Scannez le code QR pour une fonctionnalité améliorée. Escanee el código QR para obtener una funcionalidad mejorada. Scannen Sie den QR-Code für erweiterte Funktionalität. Scansiona il codice QR per funzionalità avanzate. Digitalize o código QR para funcionalidade aprimorada. 扫描二维码以获取增强功能。 掃描二維碼以取得增強功能。 拡張機能についてはQRコードをスキャンしてください。 향상된 기능을 보려면 QR 코드를 스캔하세요.

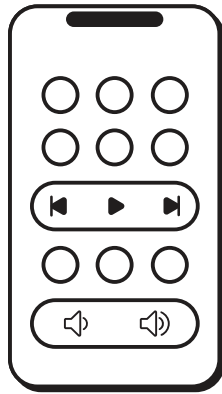


VIRTUAL REMOTE

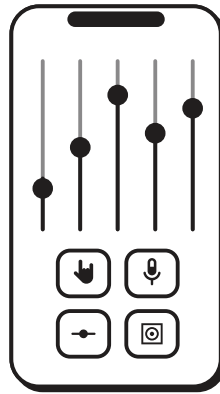 

EQUALIZER

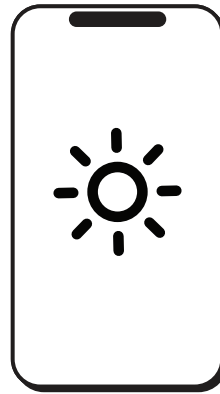 

LIGHT SHOW CONTROL


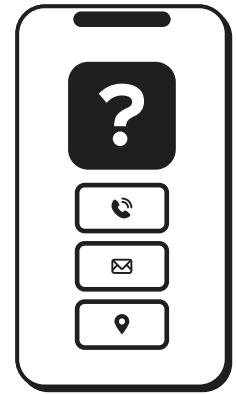 


SUPPORT

|  |   |  |   |
|--|---|--|---|
| <p><b>Virtual Remote</b><br/>                     Télécommande virtuelle<br/>                     Control remoto virtual<br/>                     Virtuelle Fernbedienung<br/>                     Telecomando virtuale<br/>                     Remoto virtual<br/>                     虚拟遥控器<br/>                     虛擬遙控器<br/>                     仮想リモート<br/>                     가상 원격</p> | <p><b>Equalizer</b><br/>                     Égaliseur<br/>                     Igualada<br/>                     Equalizer<br/>                     Equalizzatore<br/>                     Equalizador<br/>                     均衡器<br/>                     均衡器<br/>                     이퀄라이저<br/>                     평형 장치</p> | <p><b>Light Show Control</b><br/>                     Contrôle du spectacle lumineux<br/>                     Control del espectáculo de luces<br/>                     Lichtshow-Steuerung<br/>                     Controllo dello spettacolo di luci<br/>                     Controle de show de luzes<br/>                     灯光秀控制<br/>                     燈光秀控制<br/>                     라이트쇼컨트롤<br/>                     라이트 쇼 컨트롤</p> | <p><b>Support</b><br/>                     Soutien<br/>                     Apoyo<br/>                     Unterstützung<br/>                     Supporto<br/>                     Apoioar<br/>                     支持<br/>                     幫助<br/>                     サポート<br/>                     지원하다</p> |
|--|---|--|---|

# INSIDE

  CONTENU • CONTENIDO • INHALT • CONTENUTO • CONTEÚDO • 内 • 含量 • 内部 • 내용물 내부

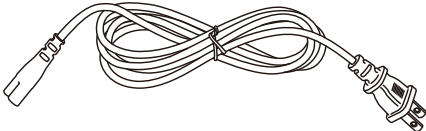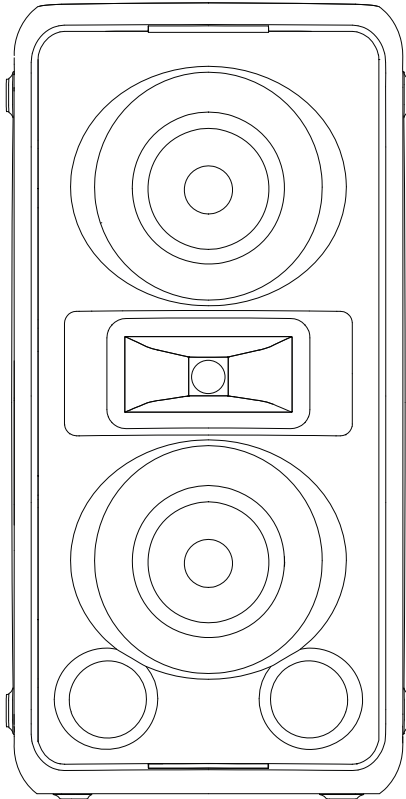


**SAFETY AND  
WARRANTY  
INFORMATION**

**QUICK  
START  
GUIDE**


# CONTROLS

 CONTRÔLES • CONTROLES • STEUERUNG • CONTROLLI • CONTROLES • 控制 • 控制装置 • コントロール • 통제 수단

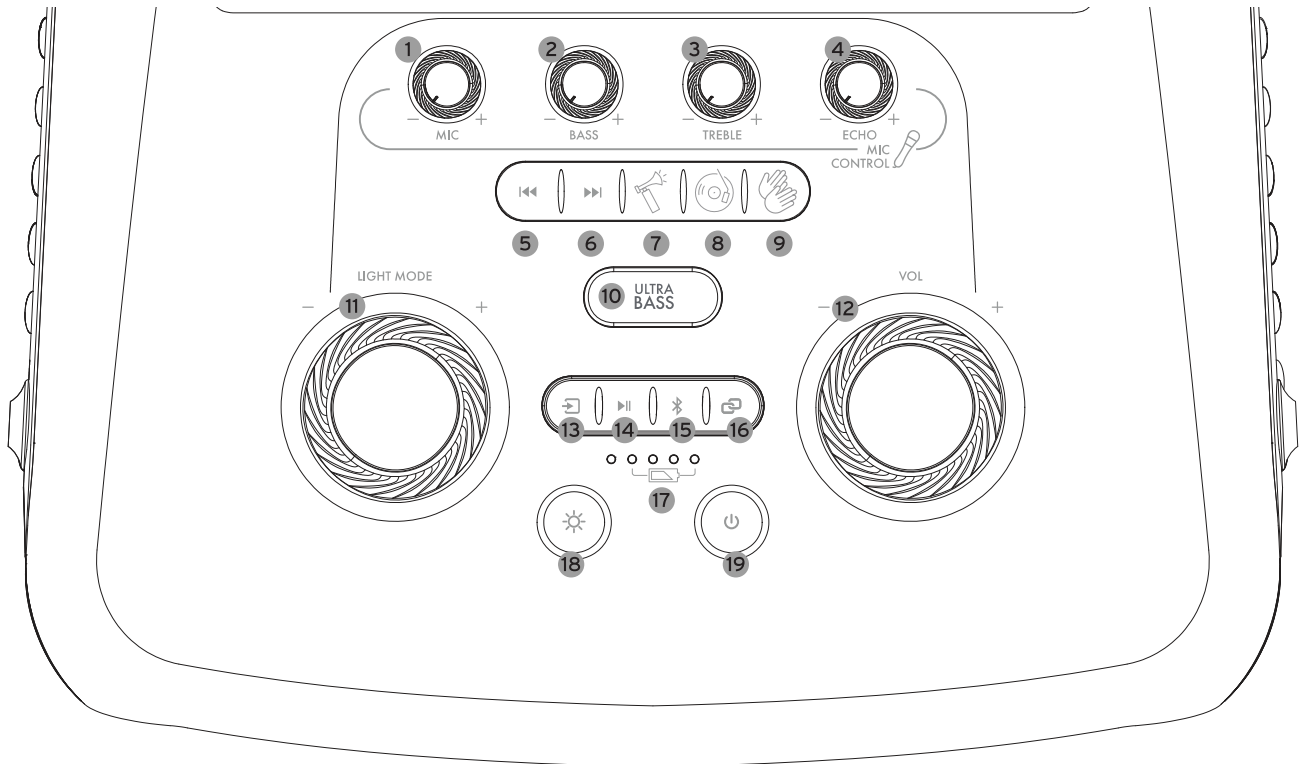

1. Microphone Volume Knob: Controls volume of microphone.
2. Bass Level Knob: Controls bass level of microphone input.
3. Treble Level Knob: Controls treble level of microphone input.
4. Echo Knob: Controls amount of echo in microphone.
5. Previous Button: Plays the previous song from the beginning.
6. Next Button: Plays the next song from the beginning.
7. Airhorn Button: Plays an airhorn sound effect.
8. Record Scratch Button: Plays a record scratch sound effect.
9. Applause Button: Plays an applause sound effect.
10. Ultra Bass Button: Enables ultra bass mode, boosting bass levels.

 
11. Light Mode Knob: Controls selection of light modes.
12. Volume Knob: Controls output volume of speaker.
13. Input Button: Controls which input the speaker is connected to. Only live inputs are available.
14. Play/Pause Button: Allows the user to play and pause the music.
15. Bluetooth Button: Used to connect the speaker to other devices. (phones, laptops, etc.)
16. TWS/Broadcast Button: Used to connect the speaker to other Music City Party speakers.
17. Battery Indicator Lights: Shows the current battery level.
18. Light Button: Toggle the light show on and off.
19. Power Button: Turns the speaker on and off.

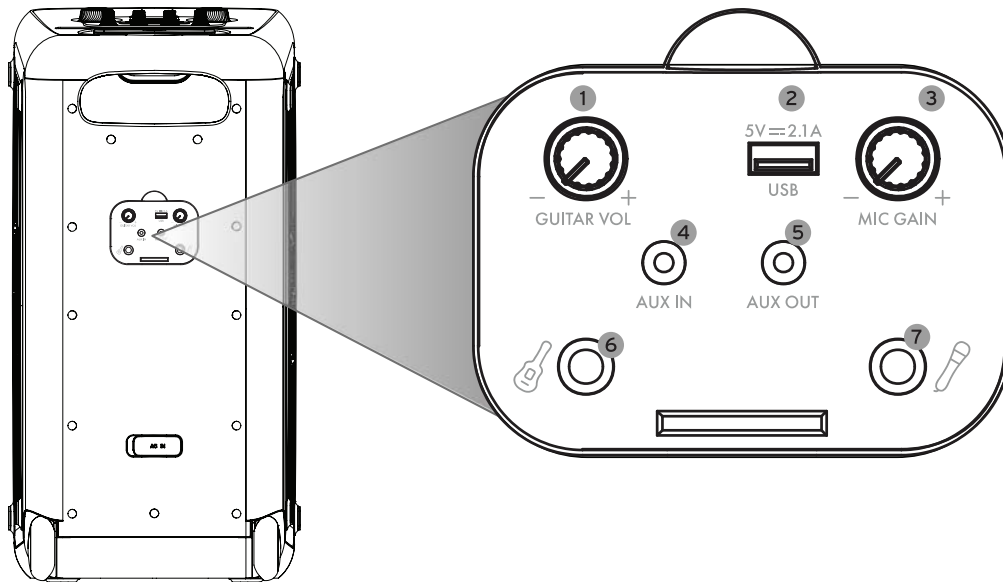

1. Guitar Volume Knob: Controls input level of guitar input.
2. USB Port: Allows reverse-charging of devices via USB connection and for firmware updates.
3. Microphone Gain Knob: Controls input level of microphone.
4. Aux Input: Allows input via Aux connection from compatible devices.
5. Aux Output: Allows output via Aux connection to compatible devices.
6. Guitar Input: Allows input via 1/4" cable connection for instruments.
7. Microphone Input: Allows input via 1/4" cable connection for microphones.

# RETRACTABLE HANDLE

 
POIGNÉE RÉTRACTABLE • MANGO RETRACTIL • EINZIEHBARER GRIFF • MANIGLIA RETRATTILE • ALÇA RETRÁTIL • 伸缩手柄 • 伸縮手柄 • 引き込み式ハンドル • 개폐식 핸들

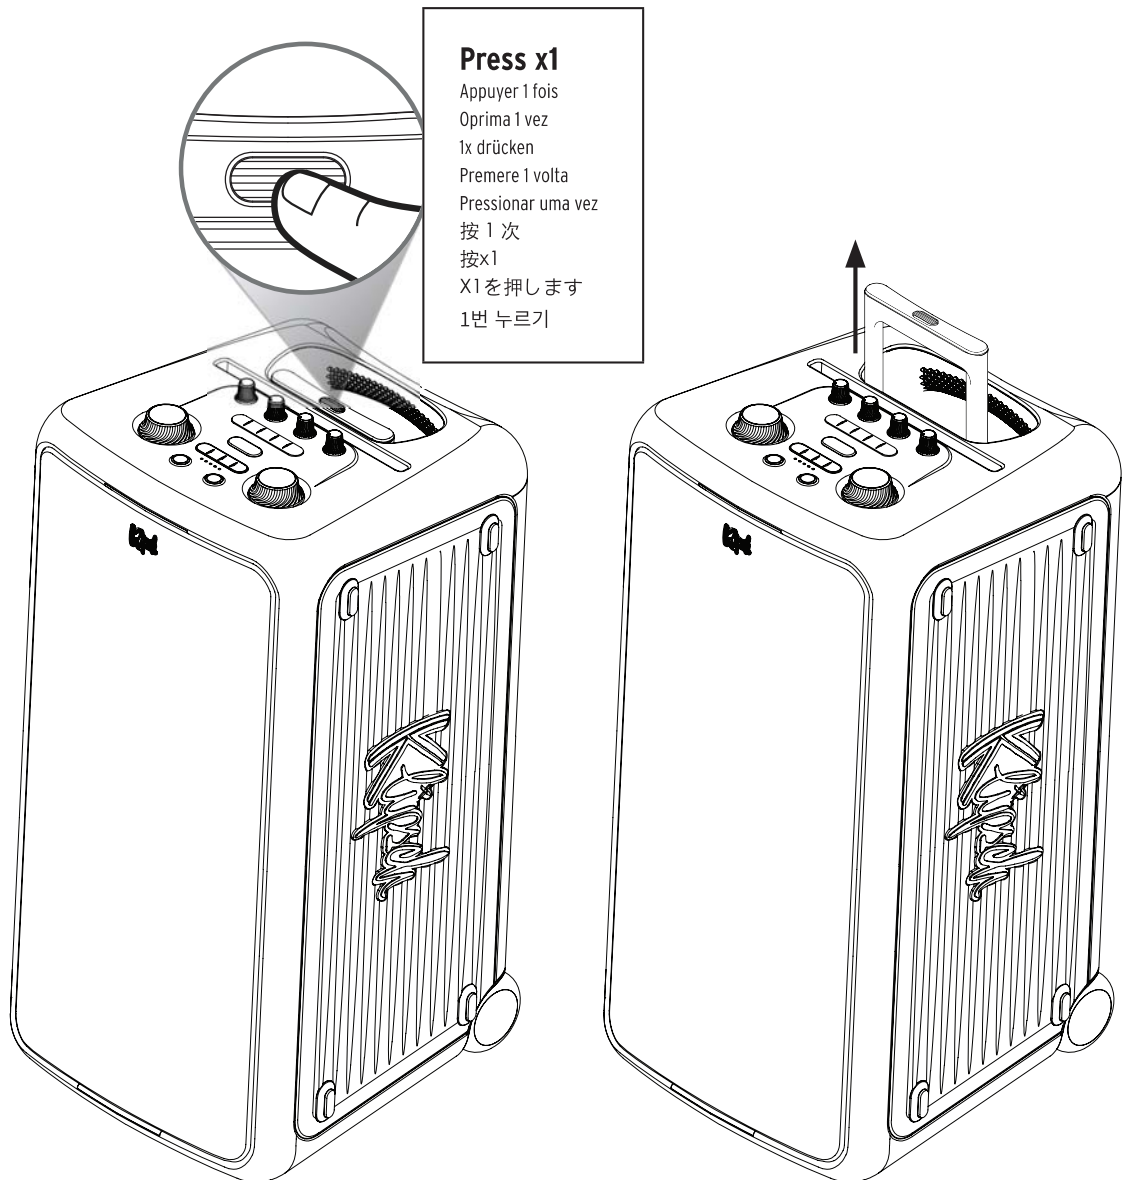

# POWER AND BATTERY

PUISSANCE ET BATTERIE • POTENCIA Y BATERÍA • STROM UND BATTERIE • ALIMENTAZIONE E BATTERIA • POTÊNCIA E BATERIA • 电源和电池  
電源和電池 • 電源とバッテリー • 전원 및 배터리

 
## ON

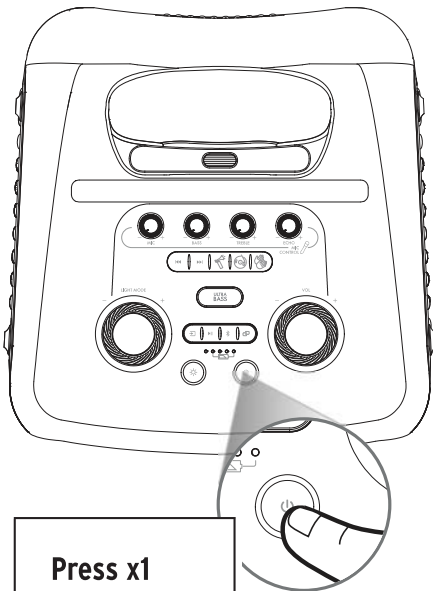

### Press x1

Appuyer 1 fois  
Oprima 1 vez  
1x drücken  
Premere 1 volta  
Pressionar uma vez  
按 1 次  
按x1  
X1を押します  
1번 누르기
 
## OFF

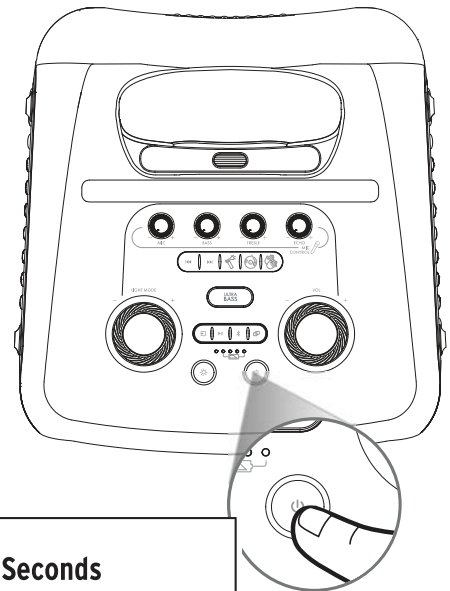


### Hold 2 Seconds

Appuyer pendant 2 secondes  
Mantenga oprimido durante 2 segundos  
2 Sekunden gedrückt halten  
Tenere premuto per 2 secondi  
Manter pressionado por 2 segundos  
保持 2 秒  
維持 2 秒  
2秒間押し続ける  
2초 동안 유지




# POWER AND BATTERY

 PUISSANCE ET BATTERIE • POTENCIA Y BATERÍA • STROM UND BATTERIE • ALIMENTAZIONE E BATTERIA • POTÊNCIA E BATERIA • 电源和电池  
電源和電池 • 電源とバッテリー • 전원 및 배터리


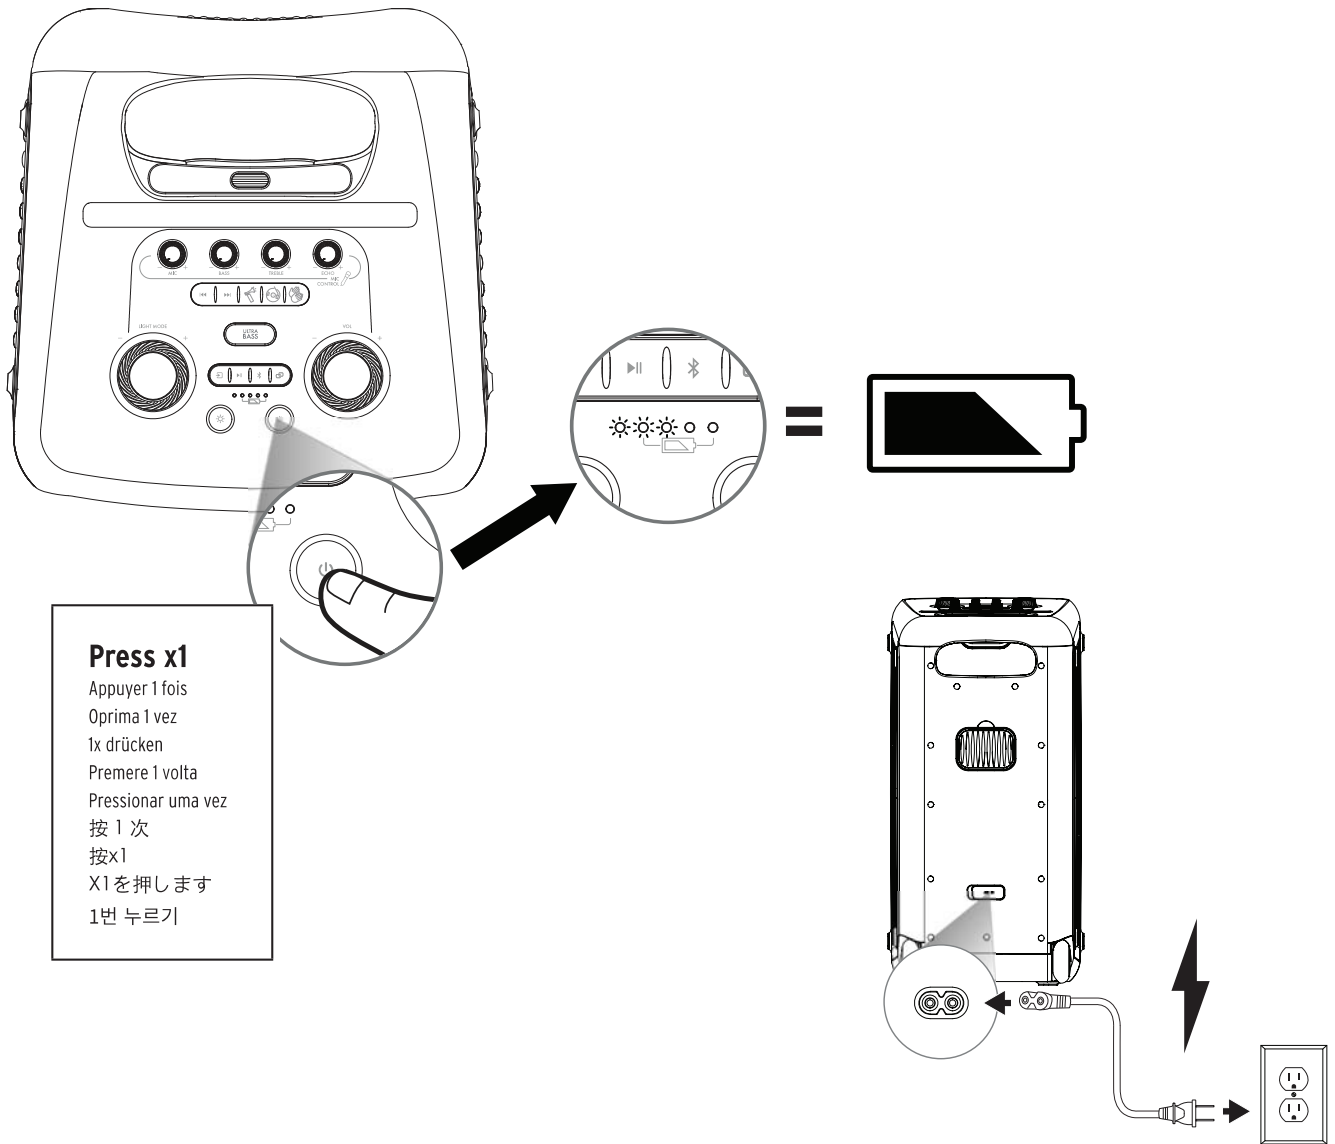


# LIGHT CONTROL

 CONTRÔLE DE LA LUMIÈRE • CONTROL DE LUZ • LICHTSTEUERUNG • CONTROLLO DELLA LUCE • CONTROLE DE LUZ • 灯光控制 • 光控 • 照明制御  
조명 제어

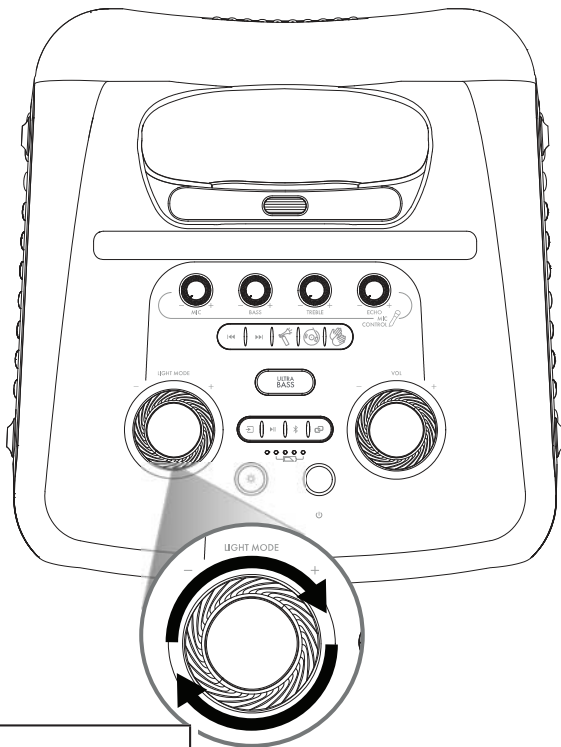

  **Turn**  
 Tourner  
 Doblar  
 Drehen  
 Giro  
 Vez  
 转动  
 轉動  
 ターン  
 회전하다

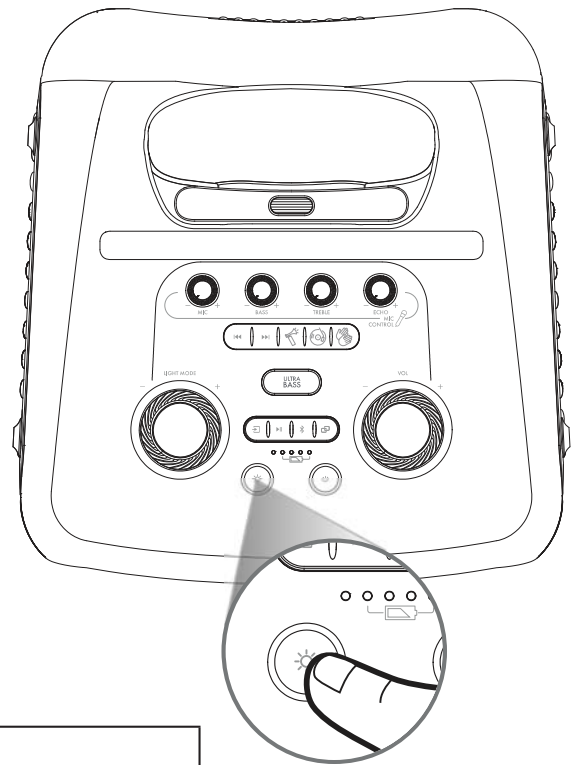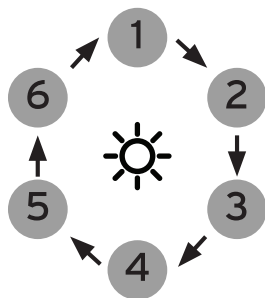


**Press x1**  
 Appuyer 1 fois  
 Oprima 1 vez  
 1x drücken  
 Premere 1 volta  
 Pressionar uma vez  
 按 1 次  
 按x1  
 X1を押します  
 1번 누르기

↓  
**FRONT + SIDE LIGHTS ON**  
 ↓  
**LIGHTS OFF**  
 ↓  
**FRONT LIGHT ON**


# LIGHT CONTROL

 CONTRÔLE DE LA LUMIÈRE • CONTROL DE LUZ • LICHTSTEUERUNG • CONTROLLO DELLA LUCE • CONTROLE DE LUZ • 灯光控制 • 光控 • 照明制御  
조명 제어

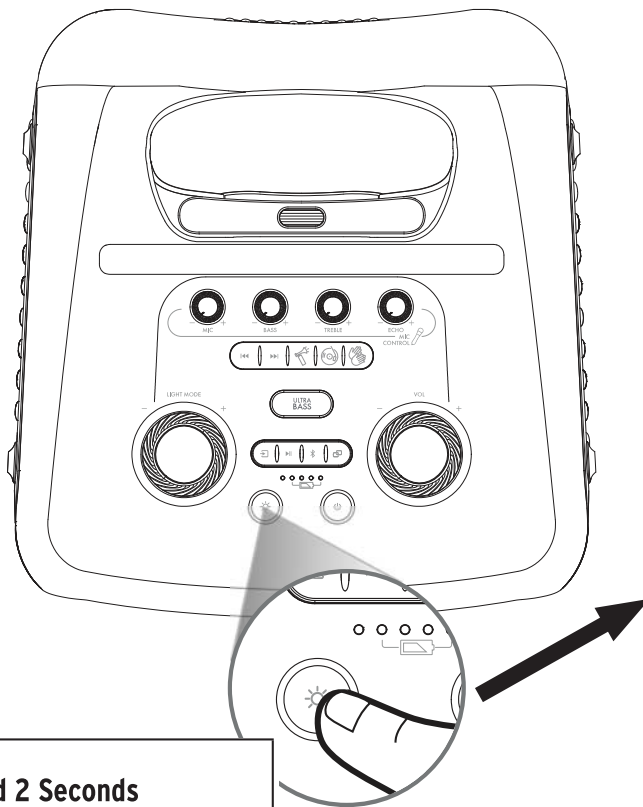

## Hold 2 Seconds

 Appuyer pendant 2 secondes  
Mantenga oprimido durante 2 segundos  
2 Sekunden gedrückt halten  
Tenere premuto per 2 secondi  
Manter pressionado por 2 segundos  
保持 2 秒  
維持 2 秒  
2秒間押し続ける  
2초 동안 유지

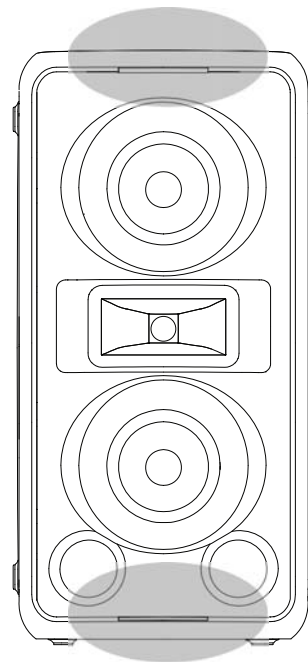


## Flashing



Clignotant  
Destello  
Blinkt  
Lampeggiante  
Intermittente  
闪烁  
点滅  
閃爍  
점멸

# BLUETOOTH® PAIRING MODE

 MODE DE COUPLAGE *BLUETOOTH*® • MODO DE EMPAREJAMIENTO *BLUETOOTH*® • *BLUETOOTH*®-KOPPLUNGSMODUS • MODALITÀ DI ABBINAMENTO *BLUETOOTH*®  
MODO DE EMPARELHAMENTO *BLUETOOTH*® • *BLUETOOTH*® 配对模式 • *BLUETOOTH*® 配對模式 • *BLUETOOTH*®ペアリングモード  
*BLUETOOTH*® 페어링 모드

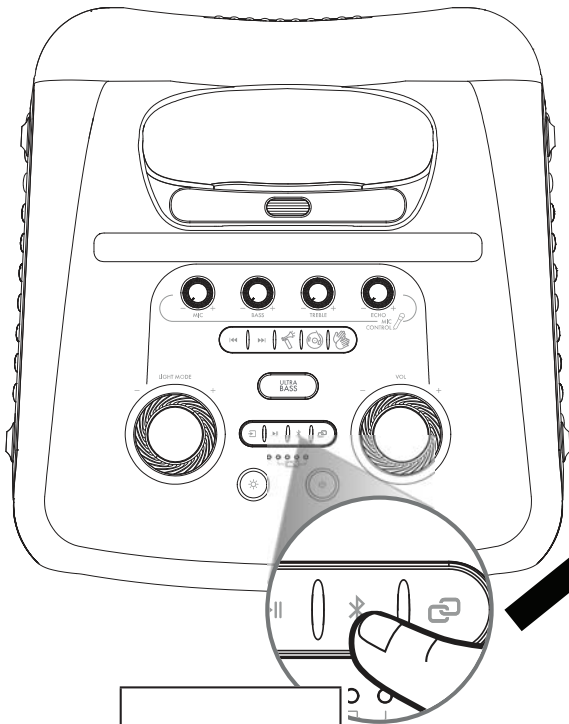

  
**Press x1**  
Appuyer 1 fois  
Oprima 1 vez  
1x drücken  
Premere 1 volta  
Pressionar uma vez  
按 1 次  
按x1  
X1を押します  
1번 누르기

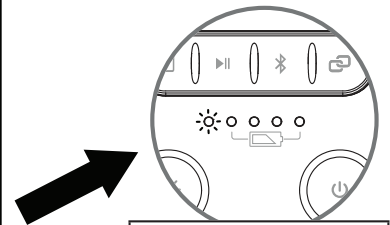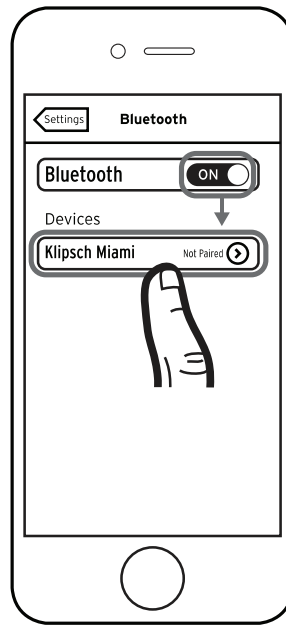



**Blue / Flashing**  
Bleu / Clignotant  
Azul / Destello  
Blau / Blinkt  
Blu / Lampeggiante  
Azul / Intermitente  
蓝色 / 闪烁  
藍色 / 閃爍  
青色 / 点滅  
파란색 / 깜박임

# CONNECTIONS - AUXILIARY

 CONNEXIONS - AUXILIAIRE • CONEXIONES - AUXILIAR • ANSCHLÜSSE - AUX • CONNESSIONI - INGRESSO AUSILIARIO • CONEXÕES - AUXILIAR • 连接 - 辅助 • 接続 - 補助 • 연결 - 보조

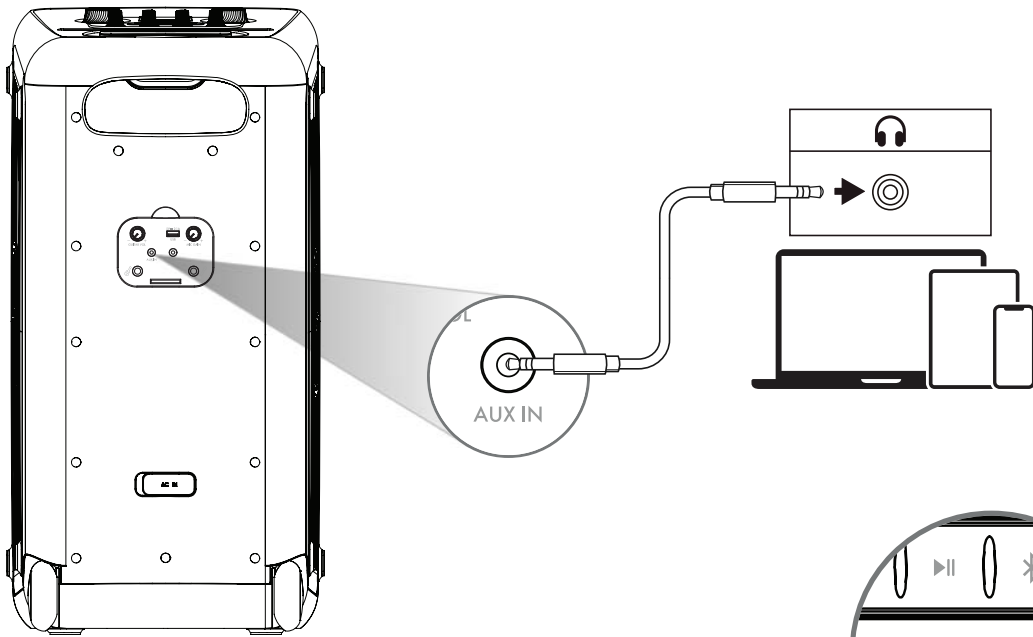


## DAISY-CHAIN

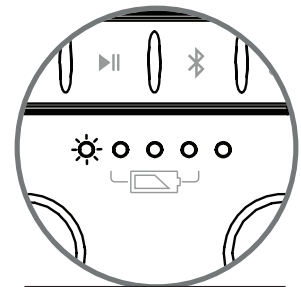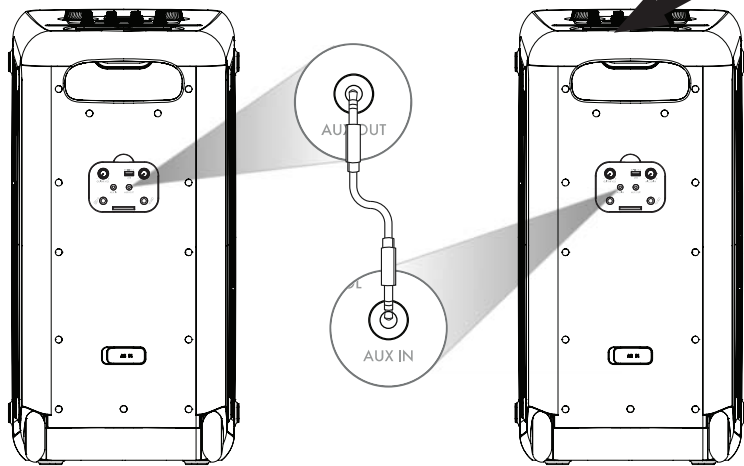  

- Green**
- Vert
  - Verde
  - Grün
  - Verde
  - Verde
  - 绿色的
  - 綠色的
  - 綠
  - 녹색

## CONNECTIONS - USB

 TCONNEXIONS - USB • CONEXIONES - USB • ANSCHLÜSSE - USB • CONNESSIONI - USB • CONEXÕES - USB • 连接 - USB • 接続 - USB • 연결 - USB

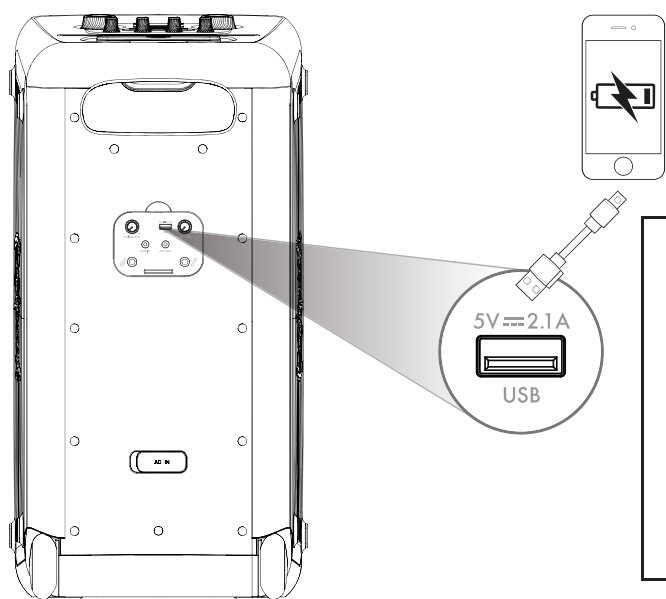


### **The Klipsch Miami must be powered on to charge your device.**

LE KLIPSCH Miami DOIT ÊTRE SOUS TENSION POUR CHARGER VOTRE APPAREIL.  
EL KLIPSCH Miami DEBE ESTAR ENCENDIDO PARA CARGAR SU DISPOSITIVO.  
DER KLIPSCH Miami MUSS EINGESCHALTET SEIN, UM IHR GERÄT AUFZULADEN.  
O KLIPSCH Miami DEVE ESTAR LIGADO PARA CARREGAR SEU DISPOSITIVO.  
IL KLIPSCH Miami DEVE ESSERE ACCESO PER CARICARE IL TUO DISPOSITIVO.  
KLIPSCH Miami 必须开机才能为您的设备充电。  
デバイスを充電するには、KLIPSCH Miami の電源が入っている必要があります。


# CONNECTIONS - 1/4" INPUT

 CONNEXIONS - ENTRÉE 1/4" • CONEXIONES - ENTRADA 1/4" • ANSCHLÜSSE - 1/4" EINGANG • CONNESSIONI - INGRESSO 1/4" • CONEXÕES - ENTRADA 1/4"  
连接 - 1/4" 输入 • 连接 - 1/4" 输入 • 接続 - 1/4" 入力 • 연결 - 1/4" 입력

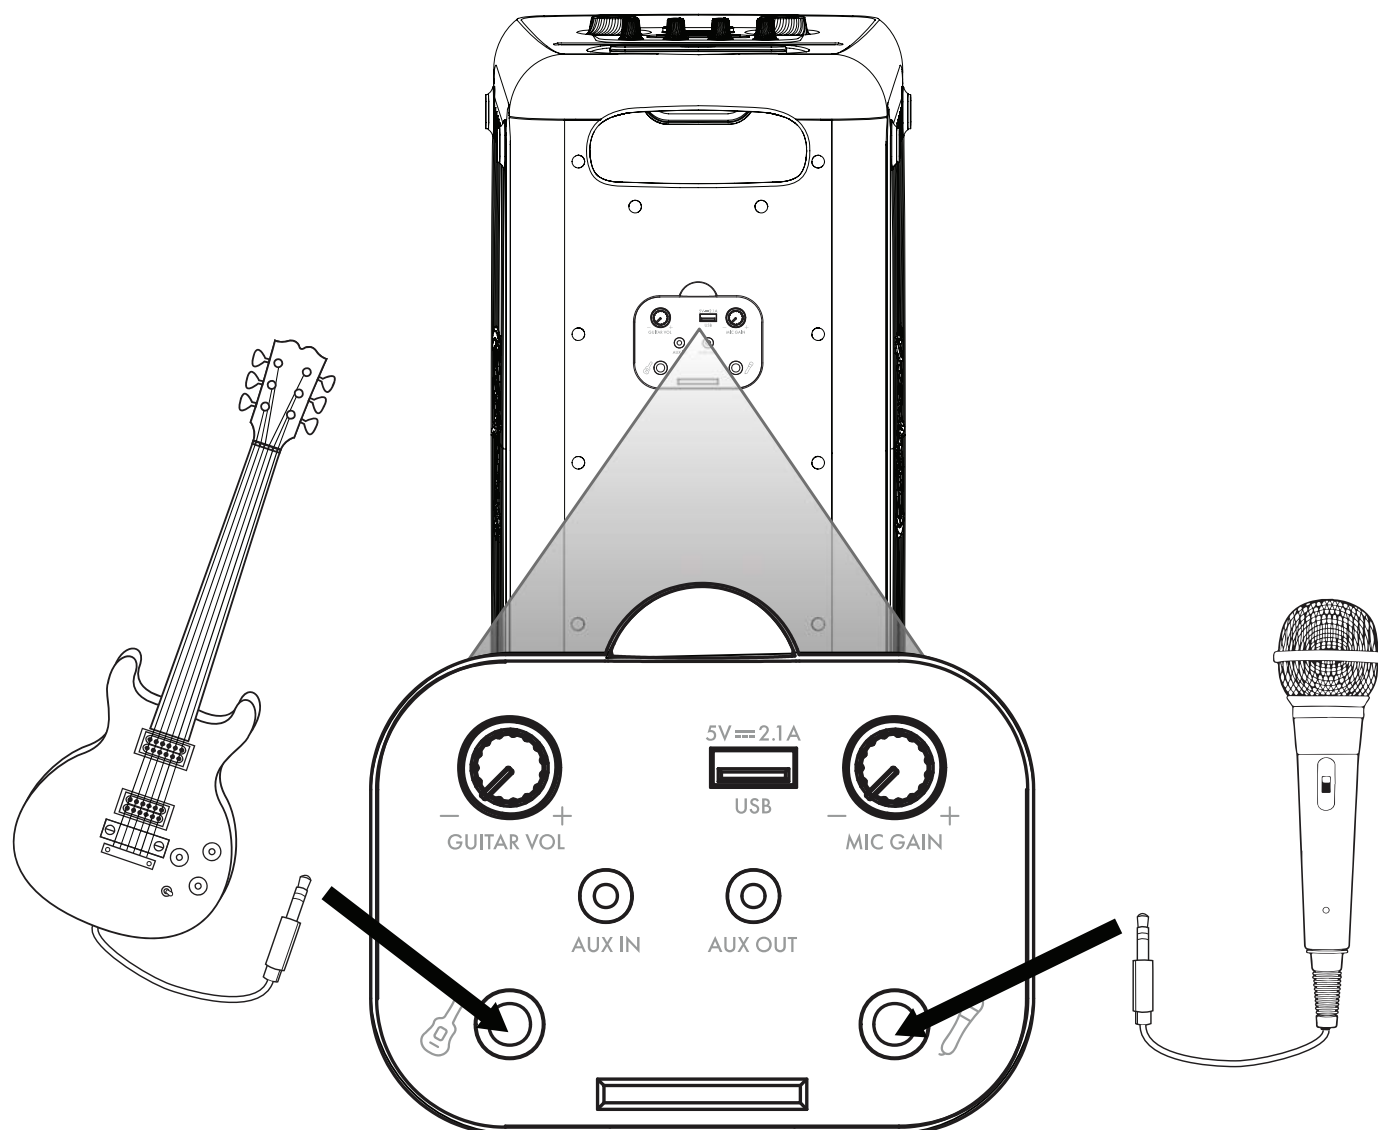

# TRUE WIRELESS STEREO PAIRING

 VÉRITABLE COUPLAGE STÉRÉO SANS FIL • VERDADERO EMPAREJAMIENTO ESTÉREO INALÁMBRICO • ECHTE KABELLOSE STEREO-KOPPLUNG • VERO ACCOPPIAMENTO STEREO WIRELESS • EMPARELHAMENTO ESTÉREO SEM FIO VERDADEIRO

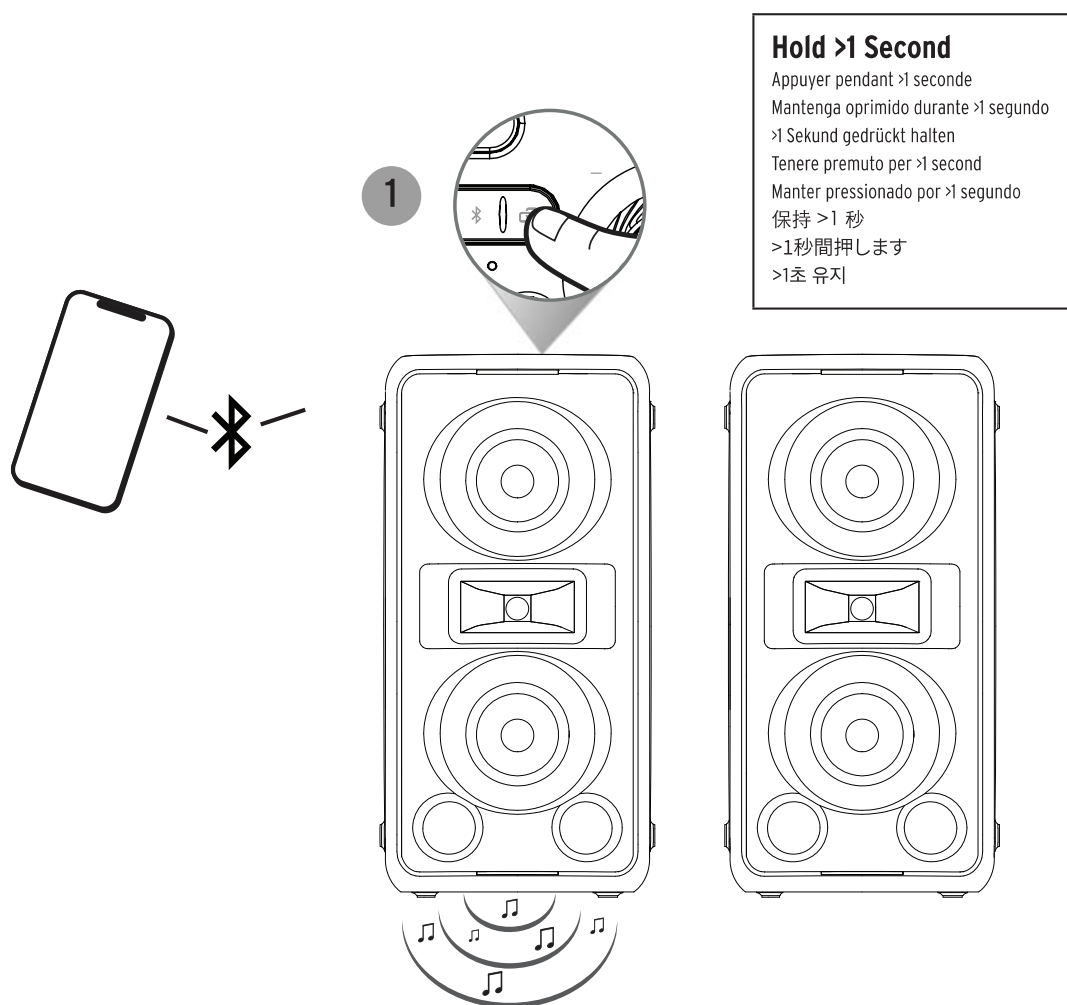




# TRUE WIRELESS STEREO PAIRING

VÉRITABLE COUPLAGE STÉRÉO SANS FIL • VERDADERO EMPAREJAMIENTO ESTÉRÉO INALÁMBRICO • ECHTE KABELLOSE STEREO-KOPPLUNG • VERO ACCOPPIAMENTO STEREO WIRELESS • EMPARELHAMENTO ESTÉRÉO SEM FIO VERDADEIRO

 
2

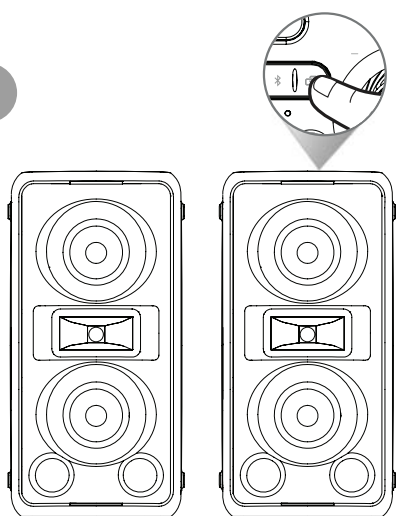

## Press x1


Appuyer 1 fois  
Oprima 1 vez  
1x drücken  
Premere 1 volta  
Pressionar uma vez  
按 1 次  
按x1  
X1を押します  
1번 누르기

 3

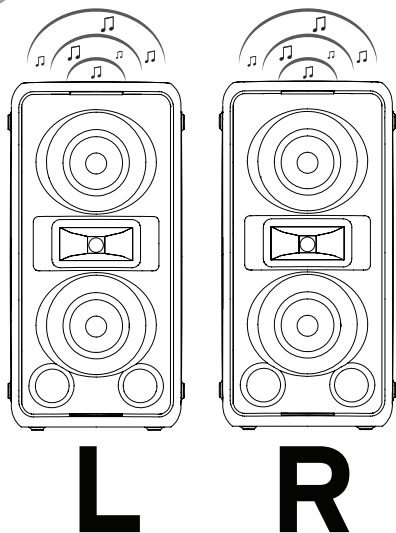


# BROADCAST MODE PAIRING

 COUPLAGE EN MODE DIFFUSION • EMPAREJAMIENTO DEL MODO DE TRANSMISIÓN • KOPPLUNG IM BROADCAST-MODUS • ACCOPPIAMENTO IN MODALITÀ TRASMISSIONE • EMPARELHAMENTO DO MODO DE TRANSMISSÃO • 广播模式配对 • ブロードキャストモードのペアリング • 브로드캐스트 모드 페어링

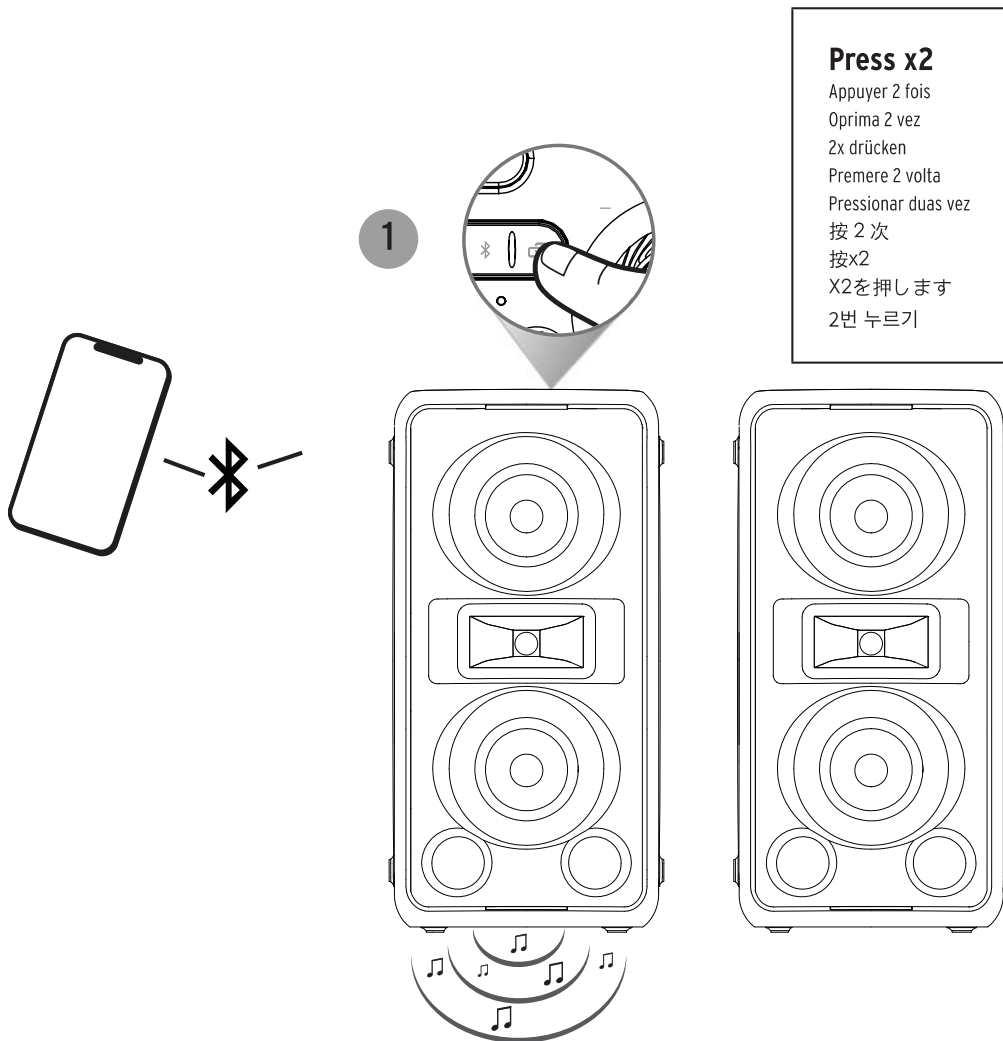


# BROADCAST MODE PAIRING

 COUPLAGE EN MODE DIFFUSION • EMPAREJAMIENTO DEL MODO DE TRANSMISIÓN • KOPPLUNG IM BROADCAST-MODUS • ACCOPIAMENTO IN MODALITÀ TRASMISSIONE • EMPARELHAMENTO DO MODO DE TRANSMISSÃO • 广播模式配对 • ブロードキャストモードのペアリング • 브로드캐스트 모드 페어링

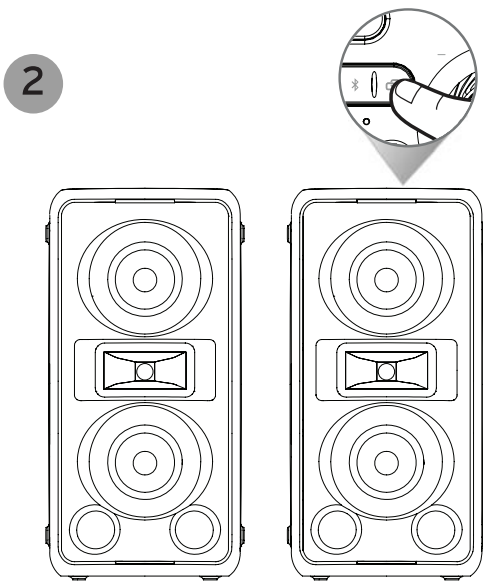



 
**Press x1**  
Appuyer 1 fois  
Oprima 1 vez  
1x drücken  
Premere 1 volta  
Pressionar uma vez  
按 1 次  
按x1  
X1を押します  
1번 누르기

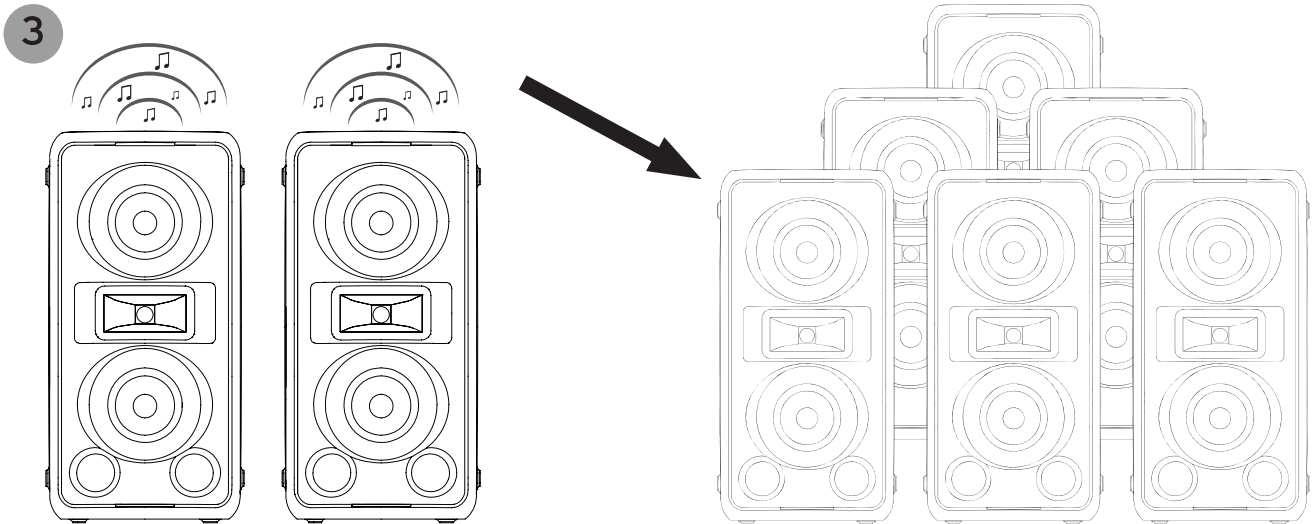

# FACTORY RESET



RÉINITIALISATION • RESTABLECIMIENTO DE FÁBRICA • RÜCKSETZUNG AUF WERKSEINSTELLUNG • RIPRISTINO IMPOSTAZIONI DI FABBRICA  
RESTABELECIMENTO DAS CONFIGURAÇÕES DE FÁBRICA • 恢复出厂设置 • 恢復出廠設定 • ファクトリーリセット • 공장 초기화

   **Hold 10 Seconds**  
Appuyer pendant 10 secondes  
Mantenga oprimido durante 10 segundos  
10 Sekunden gedrückt halten  
Tenere premuto per 10 secondi  
Manter pressionado por 10 segundos  
保持 10 秒  
維持 10 秒  
10秒間押し続ける  
10초 동안 유지

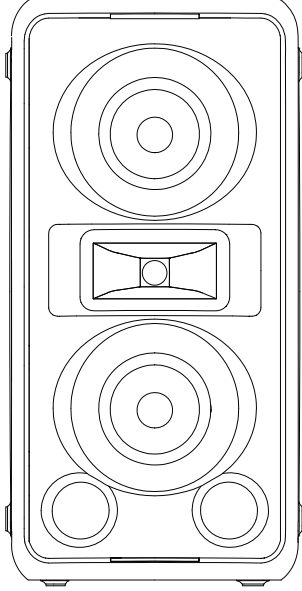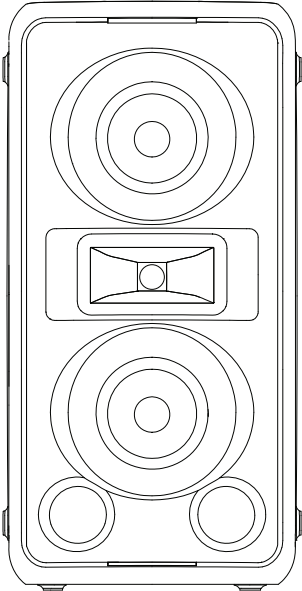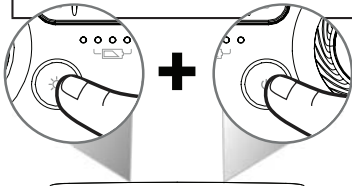

# CARE AND CLEANING

  ENTRETIEN ET NETTOYAGE • CUIDADO Y LIMPIEZA • PFLEGE UND REINIGUNG • CURA E PULIZIA • CUIDADOS E LIMPEZA • 保养与清洁 • お手入れ • 護理和清潔 • 관리 및 청소

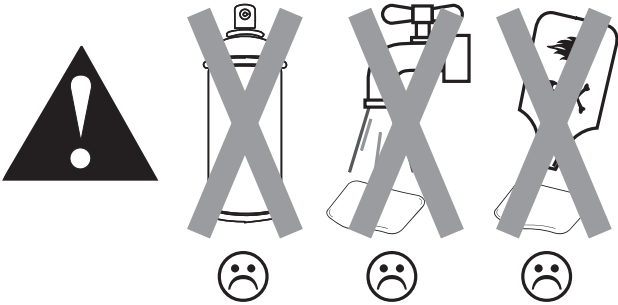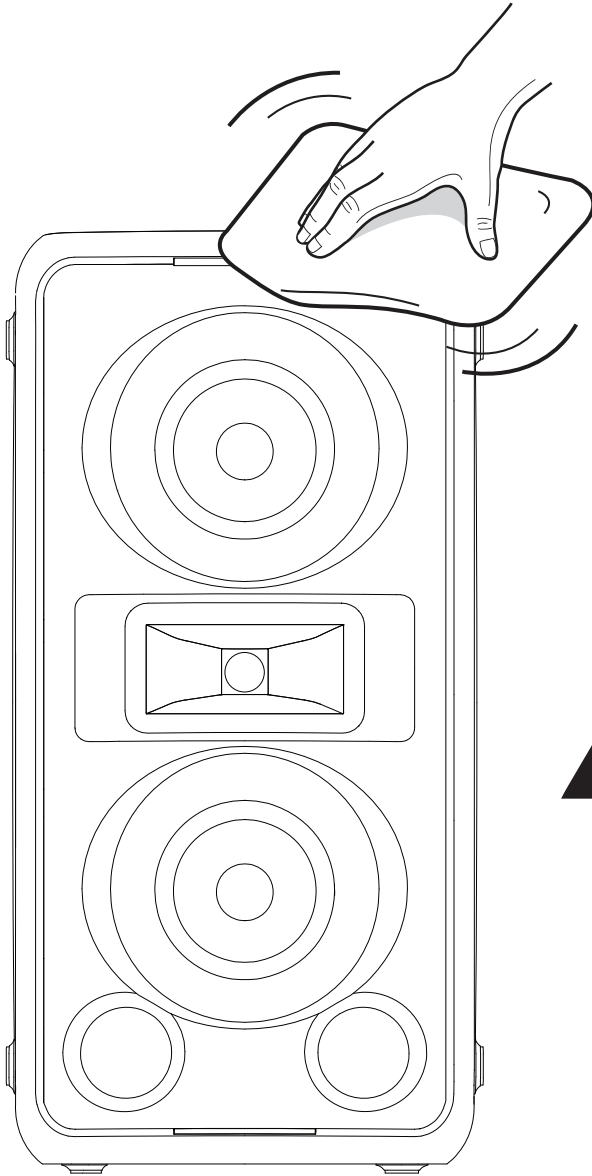

# **Klipsch<sup>®</sup>**

**KEEPERS OF THE SOUND<sup>™</sup>**

**3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA**

**KLIPSCH.COM**

©2024, Klipsch Group, Inc. Klipsch Group, Inc. is a wholly-owned subsidiary of Vox International Corporation.  
Klipsch and Keepers of the Sound are trademarks of Klipsch Group, Inc., registered in the United States and other countries. The *Bluetooth*<sup>®</sup> word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Klipsch Group, Inc. is under license.

V01 - 241120

