COMFAST 650Mbps USB WiFi Adapter User Manual

Manualsum, simplified manuals

Table of Contents

- COMFAST 650Mbps USB WiFi Adapter User Manual
 - Auto-Installation
 - Installation Finished
 - Network Connection
 - Maintenance Regulations
 - Customer Data

COMFAST 650Mbps USB WiFi Adapter User Manual

COMFAST 650Mbps USB WiFi Adapter User Manual

RADIOSHACK WORLDWIDE 650Mbps USB WiFi Adapter User Manual

2BDUR-2505013



Note:

- 1.This installation guide is only used for WiFi receiving mode. If you need to use AP mode, you have to download related driver on our website: www.szcomfast.com.
- 2. The different configuration in different computer may cause the self-drive function is not workable. Pls open "Computer" and double click "CD COMFAST" to start self-drive function.

If products with WPS function keys, you have to download related driver on our website: www.szcomfast.com.

Auto-Installation


It is similar installation steps in Windows 10/8.1/8/7/XP. Take Windows? as an example as below.

Insert the wireless adapter into the computer, Pls open "Computer" and double click © CD Driver(H:) WifiAutoInstall



Installation Finished

Please click the "Install" button to complete the installation.

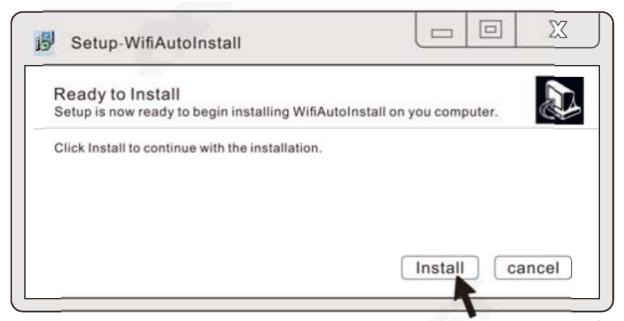

Manualsum

Network Connection

4

Click wireless connection icon signal.

and then choose the available WiFi



Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing a **COMFAST** products and service to protect your rights, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

• Failure torequire the installation manual, use ,maintenance, storage led to product failure or damage;

Manualsum

- Beyond the limited warranty, the warranty period; Unautorized alteratiion, tearing up the product bar code;
- Without authorization to chante the settings file or inherent disassemble without authorization;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or oxidation product of serious, etc;
- Other non-product itself, design ,technology, manufacturing, quality and other quality problems caused by the failure damage.

Customer Data

Name		
Address		
Model		
MAC No.		
Machine unit sales		
Sale of machine address		
Date of sale machine		
TEL		
Post Code		
Invoice No.		

