

RADIOHACK SPEAKER BOX **User Manual**

Manualsum, simplified manuals

Table of Contents

- [RADIOHACK SPEAKER BOX User Manual](#)
 - [SPECIFICATIONS](#)
 - [4001941 CONTROL PANEL](#)
 - [4001945 CONTROL PANEL](#)
 - [PLAYER CONTROLS](#)
 - [MODE](#)
 - [PLAY/PAUSE:](#)
 - [CYCLE PLAY MODE:](#)
 - [NEXT/VOLUME +:](#)
 - [PREVIOUS/VOLUME-:](#)
 - [CONNECTION BLUETOOTH](#)
 - [REMOTE CONTROL](#)
 - [CAUTION](#)

RADIOHACK SPEAKER BOX User Manual

RADIOHACK SPEAKER BOX User Manual

FCC id: [2BDUR-4001941](#)



12" & 15" 2-WAY P.A. SPEAKER

models: 4001941 / 4001945



 
PACKING CONTENTS

- 1x speaker
- 1x remote control
- 1x user's guide
- 1x power cable
- 1x wired microphone
- 1x speaker tripod (4001941 tripod pack separately by extra cart [item](#) [alsum](#))


SPECIFICATIONS

Model	4001941	4001945
TYPE	Active speaker with battery	Active speaker with battery
AC INPUT	AC100-240V,50/60Hz	AC100-240V,50/60Hz
WOOFER	12"	15"
VOICE COIL	1.5" (38mm)	1.5" (38mm)
MAGNET	30Oz	30Oz
SENSIVITY	93dB (+/-3dB)	95dB (+/-3dB)
FREQUENCY RESPONSE	50Hz-20KHz	50Hz-20KHz
TWEETER	25mm	25mm
POWER	100W	100W
FUNCTION	USB, FM, Bluetooth	USB, FM, Bluetooth
REMOTE CONTROL	Yes	Yes
BATTERY CAPACITY	12V, 5AH	12V, 5AH

4001941 CONTROL PANEL

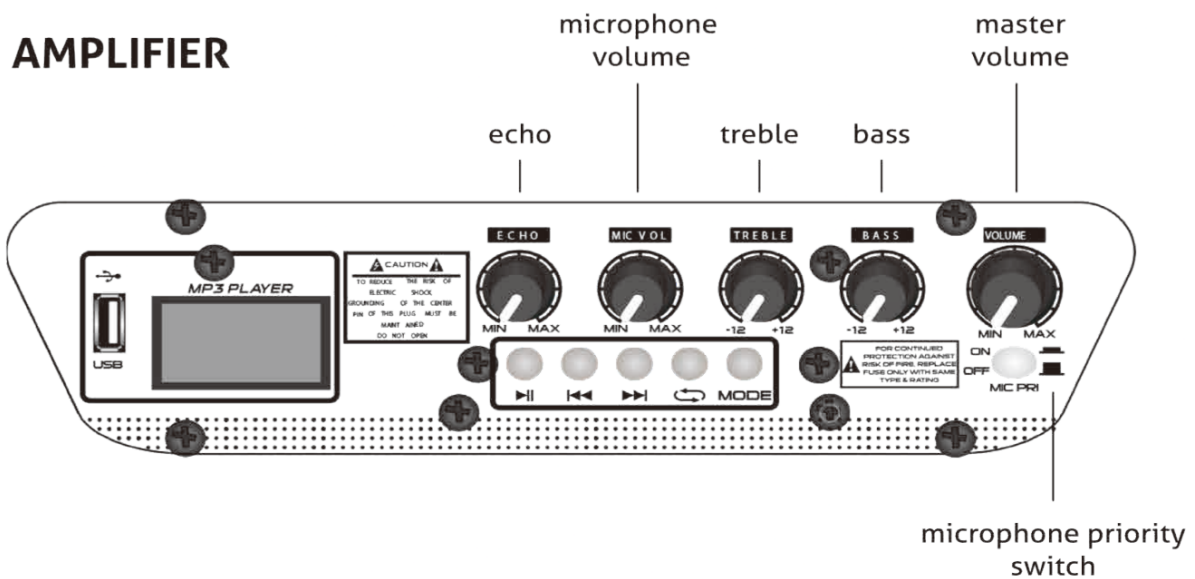

BACK PANEL

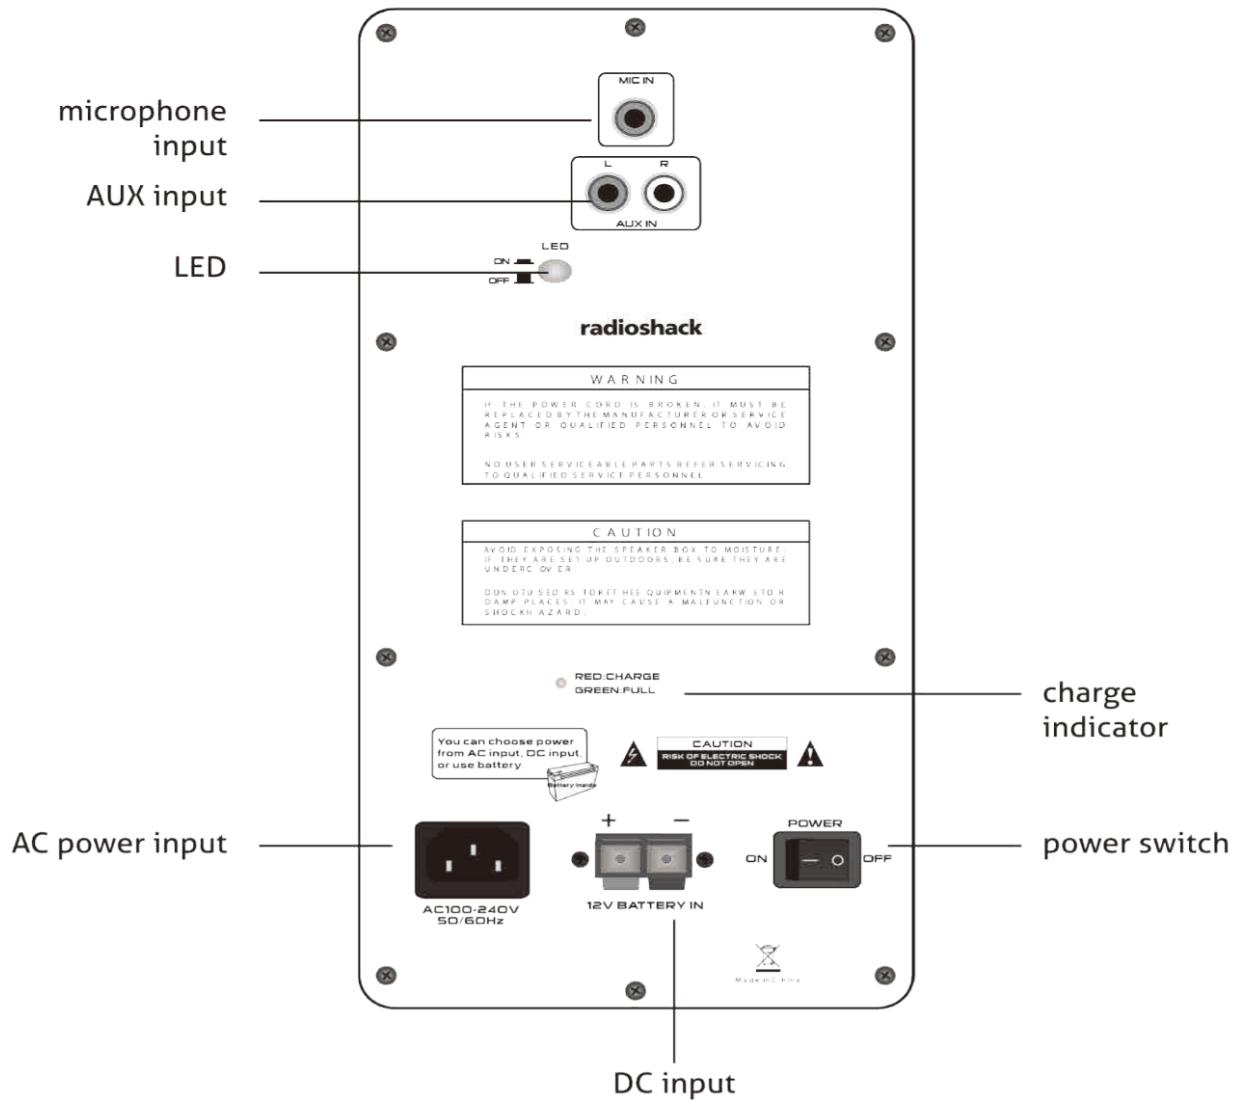 

4001945 CONTROL PANEL

AMPLIFIER

 
microphone
volume

master
volume

echo

treble

bass

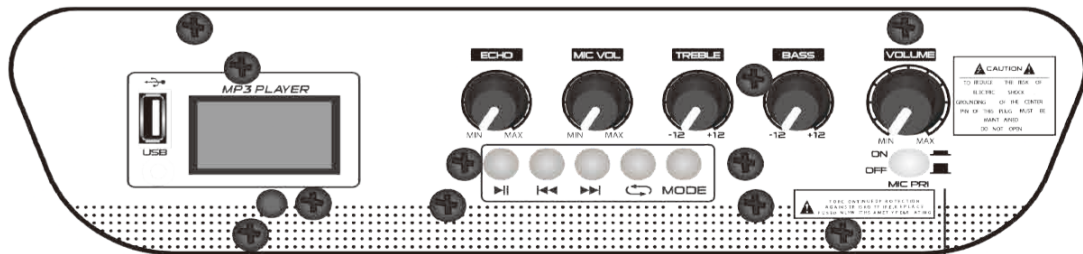

microphone priority
switch

BACK PANEL

microphone input
AUX input

 
LED

AC power input

charge indicator


power switch

DC input

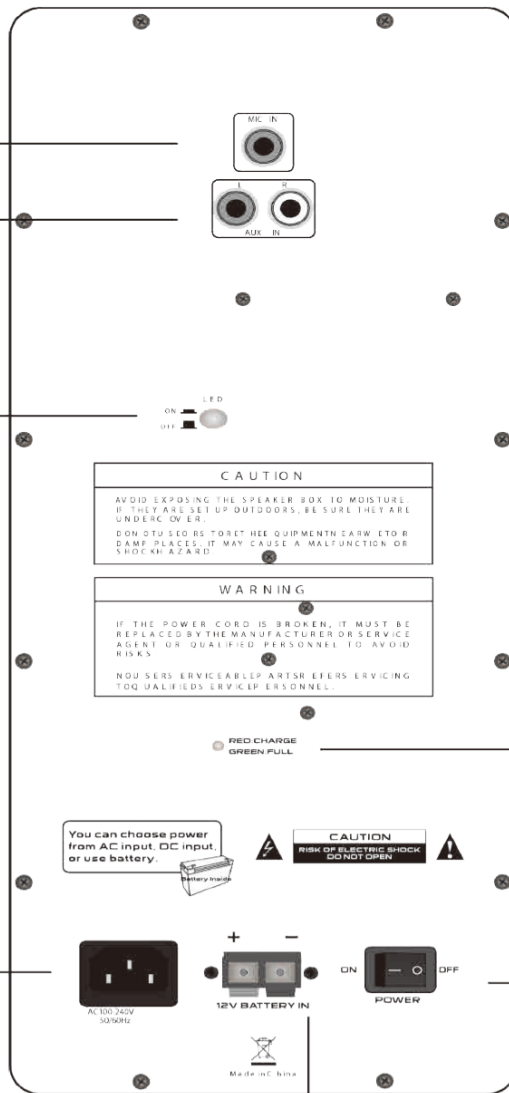

PLAYER CONTROLS

 PLAYER CONTROLS

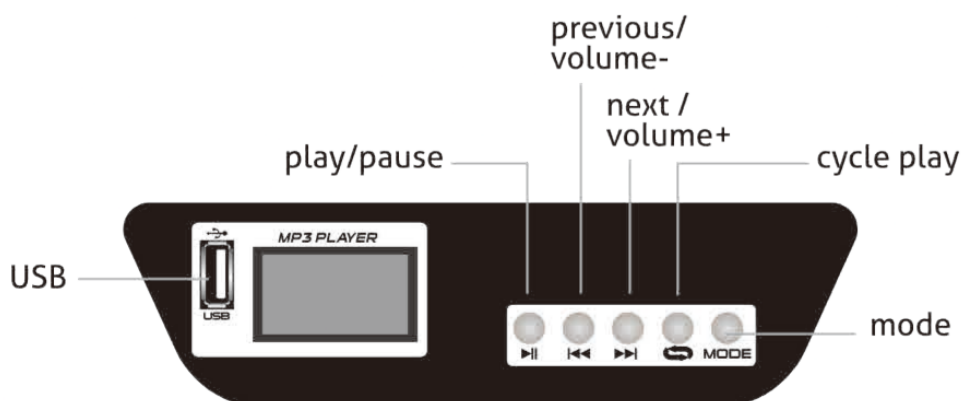

MODE

Select an operating mode, the options are: Bluetooth, AUX, USB and FM

PLAY/PAUSE:

- Press to play a song or pause while playing a song
- When you choose FM mode, when pressing this button it will automatically search the FM stations

CYCLE PLAY MODE:

press once to select a player mode, the options are:

- One: select this to play current song indefinitely
- All: with this option you can repeat all music

NEXT/VOLUME +:

- Press once to jump next song / press and hold to raise the volume level.
- In FM mode, press it to go to the next stations.

PREVIOUS/VOLUME-:

 
- Press once to jump previous song / press and hold to diminish the volume level.
- In FM mode, press it jump to the previous stations.

CONNECTION BLUETOOTH

1. To pair the speaker with a Bluetooth phone or audio device, press "MODE" repeatedly on the MP3 player until select this mode.
2. Put your phone or device to be used in Bluetooth device discovery mode.
3. When your phone or device shows the "RS 4001941 / RS 4001945 " device, confirm the link.

REMOTE CONTROL

1. Press to play a song or pause while playing a song.
Program radio FM stations
2. In play mode press to set one equalizer mode
3. Vol+/Vol-
4. Previous: Press once to jump previous song, press and hold to rewind
5. Next: Press once to jump next song, press and hold to fast-forward
6. Keys: Use this key to select the number of a desired track
7. Pick song: allows you to select the song you want to listen to. Ex: if you want to hear the song [No. 11](#)

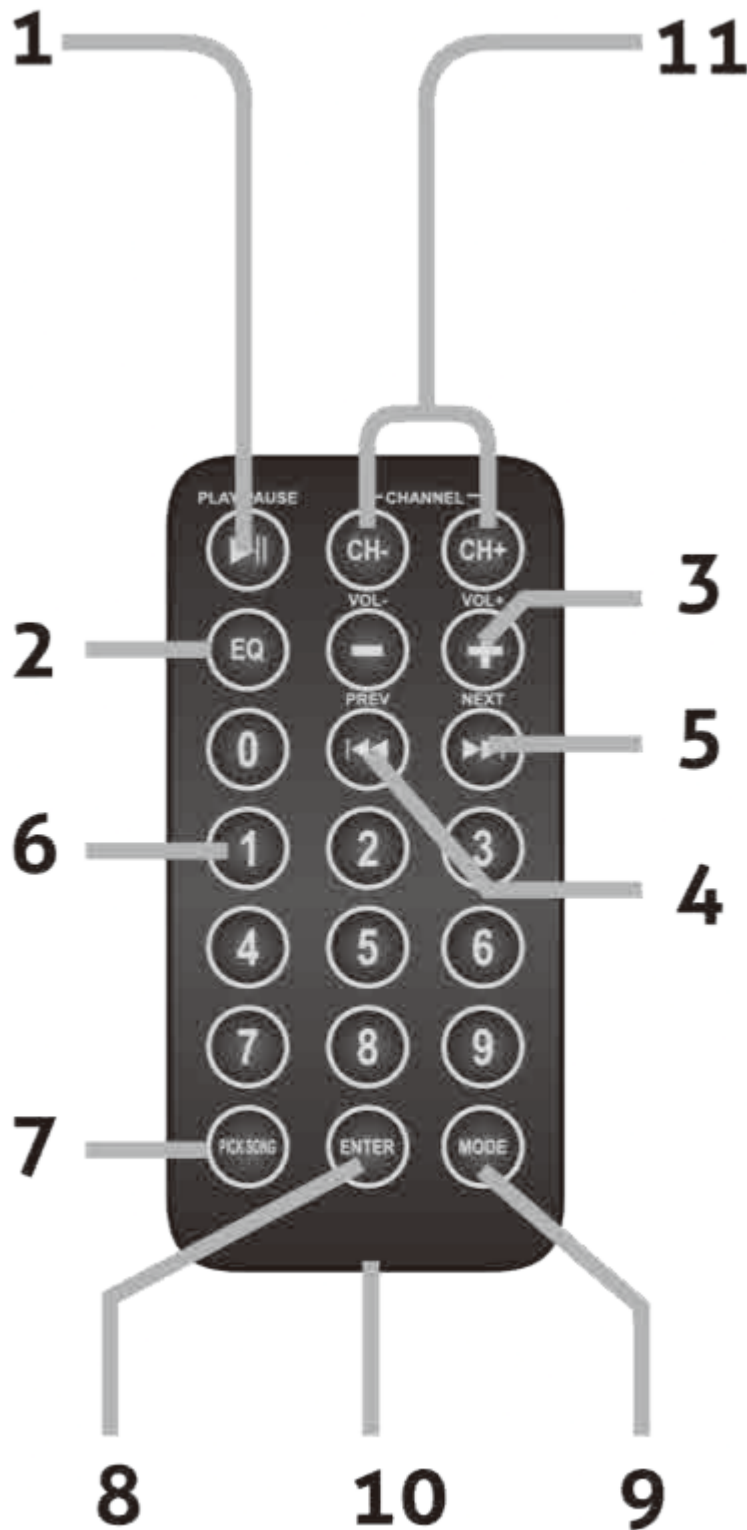

- first press the number 11 then press this button
8. Enter: choose repeat mode
 9. Model: select an operating modality, the options are SD/USB/FM radio/AUX
 10. Battery compartment (CR2025), not included
 11. Select a FM fequency

CAUTION

- Avoid exposing the speaker box to moisture. If they are set up outdoors, be sure they are under cover.

- Do not use or store the equipment near wet or damp places. It may cause a malfunction or shock hazard.
- If the power cord is broken, it must be replaced by the manufacturer or service agent or qualified personnel to avoid risks
- To reduce the risk of fire or electric shock do not expose this equipment to rain or moisture.
- Clean only with a soft, dry cloth