

SEA S.p.A V35 Wireless Gate Opener User Manual

Manualsum, simplified manuals

Table of Contents

- [SEA S.p.A V35 Wireless Gate Opener User Manual](#)
 - [Simple manual](#)
 - [Parameter](#)
 - [How to copy?](#)
 - [Recovery to HT12E code](#)

SEA S.p.A V35 Wireless Gate Opener User Manual

SEA S.p.A V35 Wireless Gate Opener User Manual

SEA S.p.A Italy

[SEA S.p.A Italy](#)

[2AEFA-E-COPY](#)



SEA[®]

Automatic Gate Openers

Simple manual



Parameter

1. Frequency: 433.92MHZ,
2. button: 4 buttons
3. Voltage: 12VDC(battery :12V/23A)
4. Encode type: copy code
5. Signal delay: 0 Seconds

6. Stand by current: 0mA
7. Working current: 13mA
8. Output power: <2dBm
9. Modulation: ASK(OOK)
10. Distance: >50M (open area)
11. Working Temp: -10°C-60C

How to copy?

- **a)** Press the 1* and 2™ button at the same time, the LED will slow flash 5 times then quick flash, release the 1* and 2" button then press the button you need to copy, the LED will be on and now come to the copy status.
- **b)** Makes the remotes close to the original remote, press the button of the original one, the remote's LED flash 2 times then off, it means you copy success
- **c)** The same copy way for other buttons.

Recovery to HT12E code

Press the 3" and 4" button of the remote control, the LED will flash 3times, then keep pressing the 3" button and press 3 times of the 4" button, the LED will flash, then the code will be recovery to be HT12E code Mainly used in electric doors, windows, lifting equipment, gates, elevators, industrial control, and security industries.

[SEA S.p.A] certifies that, as of the date of the filing of the application, the applicant is not identified on the Covered List(as a specifically named entity or any of its subsidiaries or affiliates) as an entity producing "covered" equipment.