

Shenzen Borui LAPTOP User Manual

Manualsum, simplified manuals

Table of Contents

- [Shenzen Borui LAPTOP User Manual](#)
 - [Hardware Configuration](#)
 - [System Information](#)
 - [Precautions For Use](#)
 - [Product Description](#)
 - [Warning](#)

Shenzen Borui LAPTOP User Manual

Shenzen Borui LAPTOP User Manual

([2A5RP-NX16](#))

Hardware Configuration

CPU	Intel Alder Lake-N95
RAM	16GB DDR4 3200
Storage	512GB M.2 SATA 2280
Display	16 inch 16:10 LCD
Input	12V 3A
WI-FI	802.11a/b/g/n/ac
Bluetooth	4.2
Charging	Red/Green

System Information


os	Windows 11 Pro
Language	Multi-Language

[Manualsum](#)

Precautions For Use

1. Computers are precision electronic instruments, please do not disassemble by yourself.
2. Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
3. Check for any frayed or damaged cords or plugs .
4. Please use original battery, charger and other accessories. The use of any othertype of accessories will violate the warranty and may cause the equipment to malfunction.
5. Do not use harsh of chemical solvent, cleaning products, we recommend using a soft cloth to wipe.
6. Dispose of waste machinery and accessories in accordance with local environmental regulations.
7. **Please keep plastic packaging bags out of reach of infants and children to prevent the risk of suffocation.**

Product Description

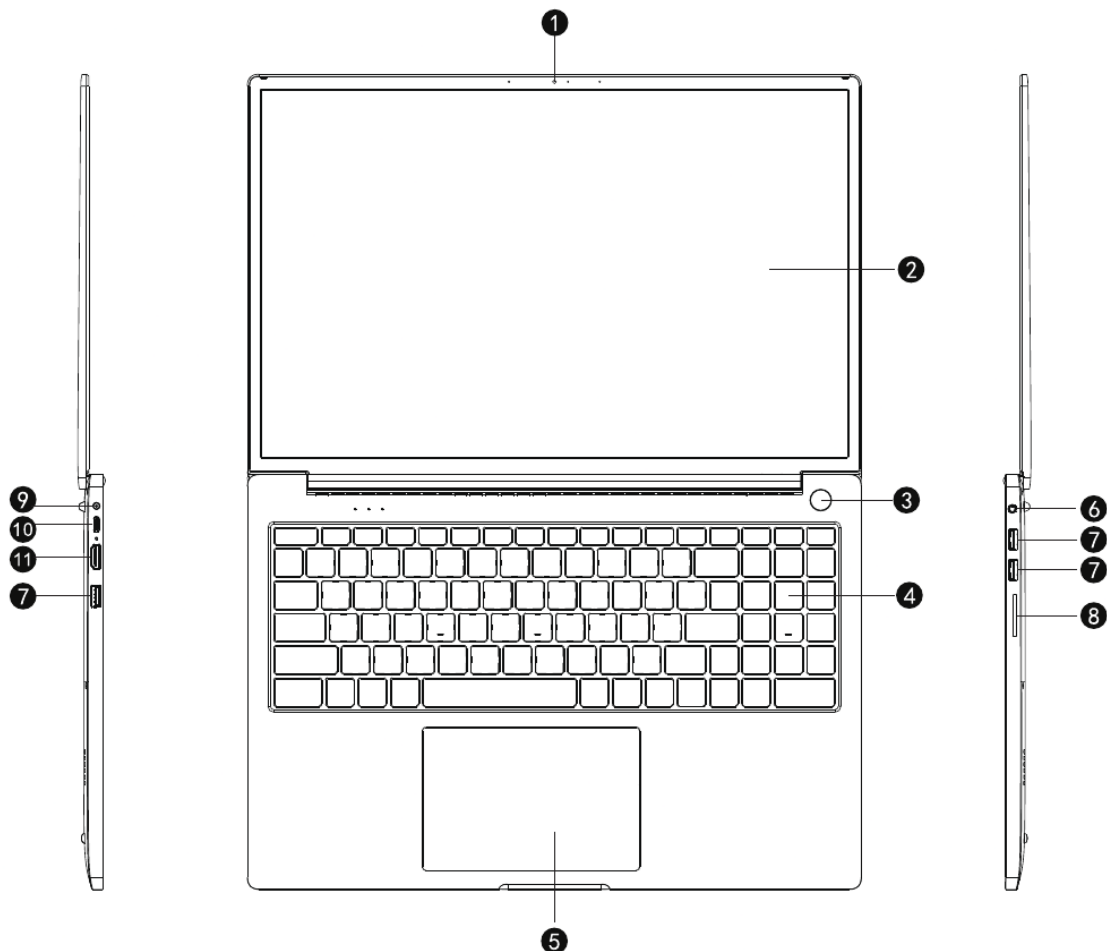

1. Camera
2. Display Screen
3. Fingerprint Power

4. Keyboard
5. Touchpad
6. Headphone
7. USB
8. SD Card
9. DC
10. Type - C
11. HDMI

Warning

1. Use this product at temperatures ranging from 0C to 35C and store it at temperatures ranging from -10C to +45C.
2. The power plug serves as a disconnecting device, and for pluggable devices, the power outlet should be mounted near the product and should be easy to operate. When the device is not used for a long period of time, disconnect the power adapter from the device and unplug the power adapter from the power outlet.
3. Use of unapproved or incompatible power supplies, power adapters or batteries may cause fire, explosion or other hazards.
4. Risk of fire or explosion if the battery is replaced with an incorrect model. Do not expose the battery to high temperatures or around heat-generating products, such as sunlight, heaters, microwaves, ovens, or water heaters. Overheating of the battery may cause an explosion.
5. Do not throw the battery into a fire as this may cause the battery to catch fire and explode.
6. Do not drop, crush or puncture the battery. Avoid subjecting the battery to large external pressures that could cause internal short circuiting and overheating.
7. Do not disassemble or modify the battery, insert foreign objects, or immerse it in water or other liquids, as this may cause the battery to leak, overheat, catch fire, or explode.
8. Do not cover ventilation holes, and this product is not intended to be used on soft supports (e.g., bedding, blankets, etc.).
9. This device utilizes a non-removable internal battery, do not replace the battery yourself as this may result in the device not functioning properly or the battery being damaged.
10. To prevent data loss, we recommend that you back up your device during daily use, before upgrading it, or before sending it in for repair. Do not use the power adapter in wet locations (such as near an allied sink, bathtub, or shower room), and do not plug or unplug the power adapter with wet hands.
11. Keep the device and its accessories dry. Do not use external heating devices such as microwave ovens or hair dryers to dry them.
12. Do not subject the appliance and its ac.