

[FTO309HDAM Remote Control Transmitter User Manual](#)

[Manualsum](#), simplified manuals

Table of Contents

- [FTO309HDAM Remote Control Transmitter User Manual](#)
 - [Operation Instructions](#)
 - [Use precautions](#)


FTO309HDAM Remote Control Transmitter User Manual

FTO309HDAM Remote Control Transmitter User Manual

Shenzhen Funpower General Technology REMOTE CONTROL TRANSMITTER
USER MANUAL

[2ABUP-FT0309HDAM](#)

Operation Instructions

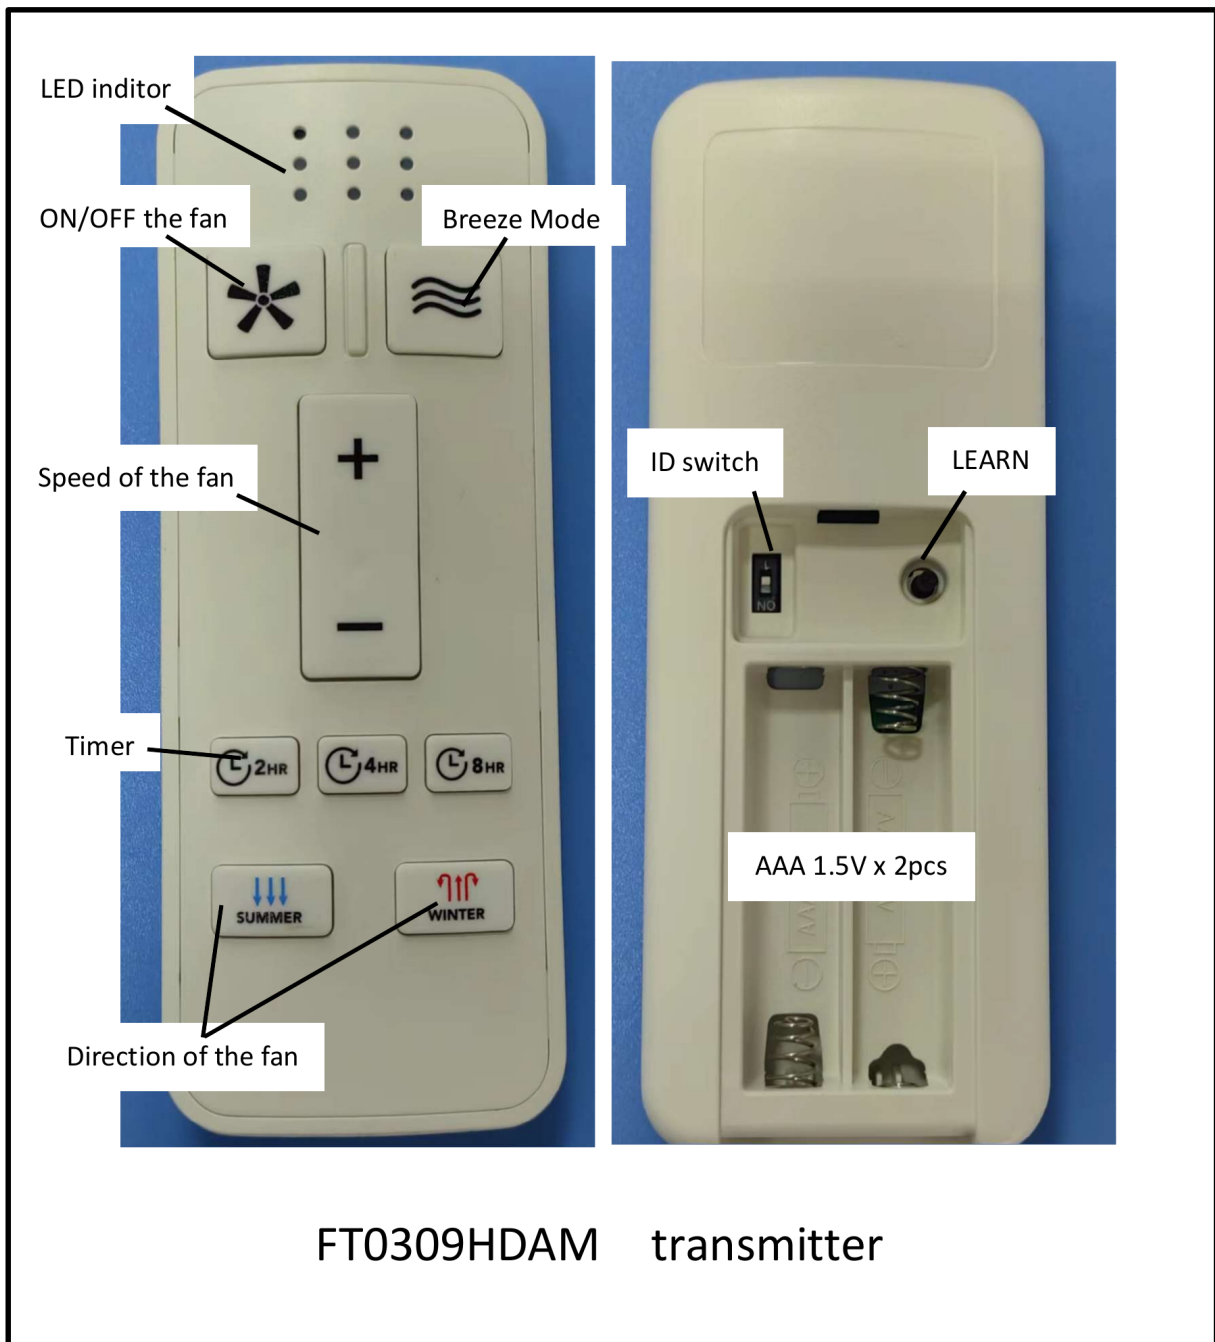

1. ON/OFF the Fan

- When fan shut down, press this button, the fan run at the speed before fan shutdown.
- When fan are on, press this button, the fan shut down.



2. Breeze Mode: Between Speed 2 to Speed 4, at 40 seconds in a curve and circle speed. Reach one specific speed, it changes to another speed.

3. Speed of the fan (1~9 level)

1. The “+” key increases the fan gear. The higher the gear, the higher the fan speed.
2. The “-” key lowers the fan gear, and the lower the gear, the lower the fan speed.
3. The number of indicators displayed corresponds to the current fan gear.
4. The lowest gear is 1st gear and the highest gear is 9th gear.



4. Fan timing control

Set up the timer at 2hours,4hours ,6 hours.

2H press this key, the fan will stop after 2 hours.

4H press this key, the fan will stop after 4 hours.

6H press this key, the fan will stop after 6 hours.


1. The timing function of the key works when the fan is running.
2. Press the key “+”or“-” will cancel the timer.
3. The latest timer will take place the previous one.
4. The number of LED lights corresponds to the number of hours when the fan is shut down.



5. Direction of the fan

1.



Press the  key to control the direction of the fan fan to make the wind blow on the ground. It is usually used in summer.Press and hold this key for 5 seconds to turn on this function. At the same

time, the LED lights will display from bottom to top in order. Finally, all the indicators will turn on and off.

2.




Press the key to control the direction of the fan, so that the wind blows upward from the ceiling. It is usually used in winter. Press and hold this key for 5 seconds to turn on this function. At the same time, the LED lights will be displayed in order from top to bottom. Finally, all the indicators will turn on and off.



6. ID switch

- Switch between Public and private codes.

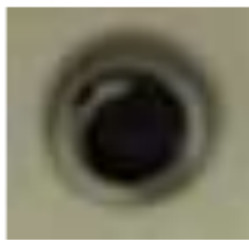

7. Learn key

- Transmitter and receiver matching learning.

8. The transmitter use ~ ~ 2pcs of 1.5V AAA battery, please install the battery correctly.

Use precautions

1. When press the key of transmitter, the LED indicator doesn't on, please inspect the battery installation.
2. When press the key of transmitter, the LED indicator flashing, that means the battery get low voltage, please replace a new one.
3. Please pull out of the battery from the transmitter when leaving unused for a long time.