# Hollyland Solidcom SE Intercom System User Manual

## Manualsum, simplified manuals

#### Table of Contents

- Hollyland Solidcom SE Intercom System User Manual
  - Configuration
  - <u>Overview</u>
    - Indicator Introduction
    - Notification Sound Introduction
  - Operations
    - Headset Pairing
  - Specifications
  - Disclaimer

- Safety Precautions
  - ■ <u>Support</u>
    - <u>Statement:</u>
    - Trademark Statement:

# Hollyland Solidcom SE Intercom System User Manual

Hollyland Solidcom SE Intercom System User Manual

Shenzhen Hollyland Technology Full-Duplex Wireless Intercom System User Manual

FCC id: 2ADZC-5601TA

**Manualsum** 



#### Solidcom SE

# Configuration




Master Headset (Brown)



Li-ion Battery Pack 770



Remote Headset (Black)

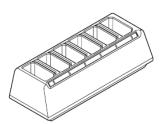


6-Slot Charging Base



USB-A to USB-C Cable




Number Stickers 01

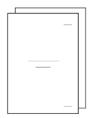

Quick Guide & Packing List Card


Warranty Card & Compliance Information

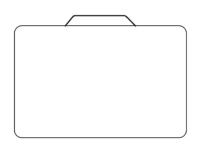


Carrying Case

**Note:** The quantity of the items depends on the product configuration detailed on the packing list card.

### **Overview**

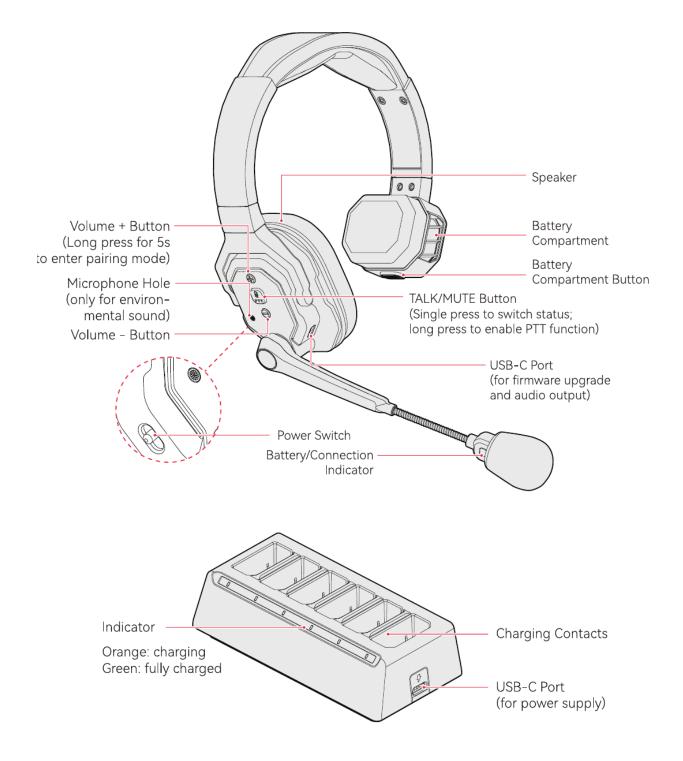

### **Indicator Introduction**

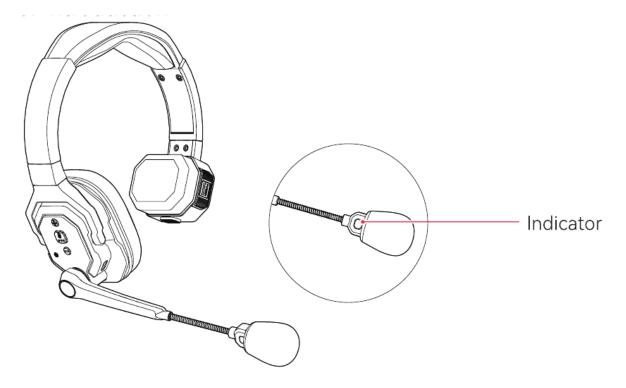

- 1. Disconnected\*: slowly flashing green light
- 2. Pairing: rapidly flashing green light
- 3. TALK Status: solid green light
- 4. MUTE Status: solid red light
- 5. Low Battery: slowly flashing red light
- 6. USB-C Charging:

A. Charging While Powered On: slowly flashing yellow light for 3s before returning to the former light

B. Charging While Powered Off: slowly flashing yellow light

- 7. USB-C Fully Charged: solid yellow light
- 8. Upgrading: alternately flashing red and green light

#### **Notification Sound Introduction**

- 1. Low Battery: low battery level
- 2. Ding: maximum volume
- 3. Tick: mic boom in position of mic on or off
- 4. Connected: device connected
- 5. Disconnected: device disconnected
- 6. Unmuted: mic on
- 7. Muted: mic off


\* While disconnected, the remote headset shows slowly flashing green light while the master headset shows solid green light.

# Operations

- (1) Installing and removing the battery
  - Place the battery into the battery compartment for installation.




• Press the battery compartment button to pop out the battery for removal.

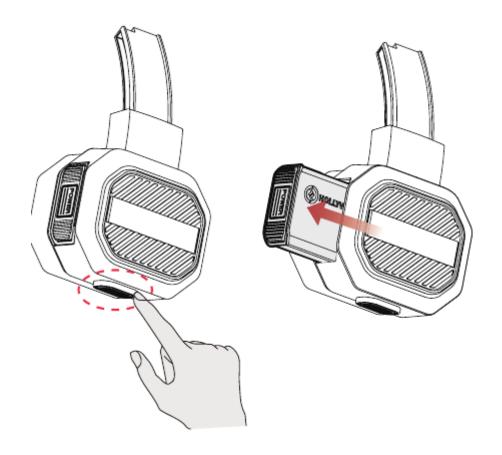


(2) Turning on the device and confirming connection

<u>Manualsum</u>

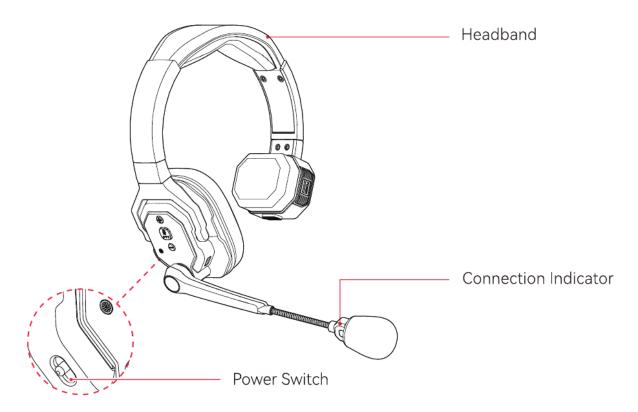

- 1. Toggle the power switch to turn on the headsets.
- 2. The indicator light changing from flashing green to solid green indicates successful connection.
- 3. The master headset has a brown headband while the remote headset has a black headband.
- (3) Turning on the microphone

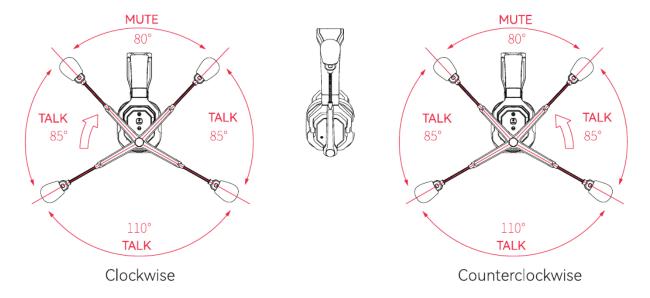


(4) Beginning your work

### **Headset Pairing**

All remote headsets are prepaired with the master headset at the factory, so they are ready to use upon poweron. Pairing is only necessary when adding new headsets to an existing system. Ensure that the master headset and all remote headsets are powered on while pairing.

- 1. Long press the volume + button on both the master and remote headsets for 5s and the indicator lights will flash rapidly.
- 2. The indicator lights turning solid indicates successful connection.
- 3. One master headset can connect to up to seven remote headsets.

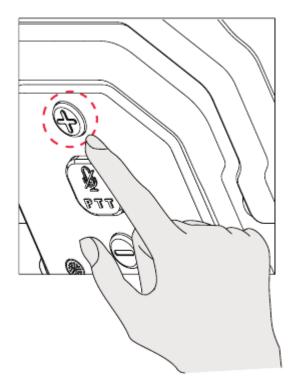

## Specifications

Product Name LOS Range Operating Frequency Modulation Mode Transmit Power Receiver Sensitivity Battery Capacity Charging Time Frequency Response SNR Distortion Microphone Type

1,100ft (350m) 2.4 GHz GFSK <20dBm -92 dBm 770 mAH (2.926Wh) <3 hours 150 Hz - 7 kHz (+10dB) >70dB @94dBSPL, 1kHz <1% @94dB SPL, 150 Hz - 7 kHz Electret

Solidcom SE Single-Ear Headset

**Manualsum** 

Maximum Input SPL	>115dB SPL
Output SPL	98dB SPL (@94dB SPL, 1kHz)
<b>Environmental Noise Reduction</b>	i > 20dB (from all directions)
Weight	about 185.29 (with battery)
Battery Life	10h
	0 – 45°C (working)
Temperature	-10 – 60°C (storage)

Product Name	6-Slot Charging Base
Port	USB-C Port; Charging Contacts
Dimensions	119.3 x 57.6 x 34.6mm (4.7 x 2.3 x 1.4in.)
Weight	91.1g
<b>Charging Power</b>	≤ 10W
Power Supply	4.75 – 5.25V
Charging Current ≤ 380mA/Slot	
Charging Time	< 3 hours (6 batteries)
	0 – 45°C (working)
Temperature	-20 – 60°C (storage)

## Disclaimer

## **Safety Precautions**

Do not place the device near or inside heating devices (including but not limited to microwave ovens, induction cookers, electric ovens, electric heaters, pressure cookers, water heaters, and gas stoves) to prevent the battery from overheating and exploding.Use the original charger, data cables, and batteries provided with the product. Using unauthorized or incompatible chargers, data cables, or batteries may cause electric shock, fire, explosion, or other dangers.

#### Support

If you encounter any problems in using the product or need any help, please contact Hollyland Support Team via the following ways:



Hollyland User Group



HollylandTech



HollylandTech



HollylandTech



support@hollyland.com



www.hollyland.com

#### Statement:

All copyrights belong to Shenzhen Hollyland Technology Co., Ltd. Without the written approval of Shenzhen Hollyland Technology Co., Ltd., no organization or individual may copy or reproduce part or all of any written or illustrative content and disseminate it in any form.

#### Trademark Statement:

All the trademarks are owned by Shenzhen Hollyland Technology Co. Ltd.

#### Note:

• Due to product version upgrades or other reasons, this Quick Guide will be updated from time to time. Unless otherwise agreed, this document is provided as a guide for use only. All representations, information, and recommendations in this document do not constitute warranties of any kind, express or implied.