

[SC-A310 Wireless doorbell instruction manual](#)

[Manualsum](#), simplified manuals

Table of Contents

- [SC-A310 Wireless doorbell instruction manual](#)
 - [Product function](#)
 - [Battery back](#)
 - [Installation instructions](#)
 - [This product can flexibly support the following two pairing methods:](#)
 - [Setup and adjustment:](#)
 - [Settings:](#)
 - [Quick guide](#)
 - [Warm reminder:](#)
 - [Wireless doorbell product three package voucher](#)
 - [A friendly reminder:](#)

SC-A310 Wireless doorbell instruction manual

 
 
SC-A310 Wireless doorbell instruction manual

Shenzhen Paian Technology doorbell User Manual

FCC id: [2BKX7SC-A320](#)

Model: SC-A310

Product function

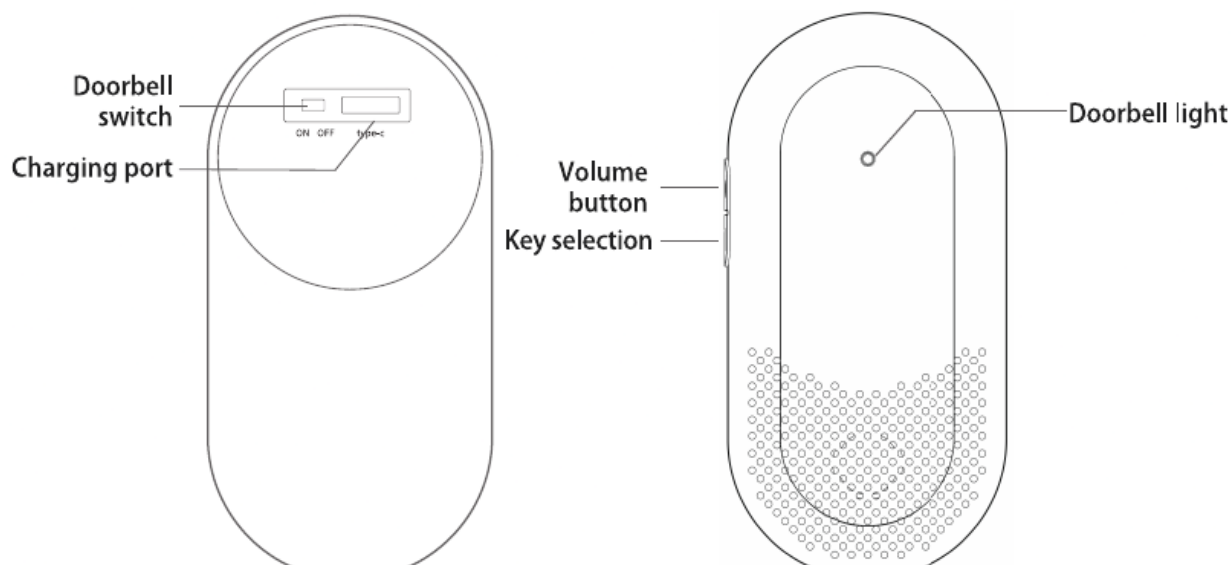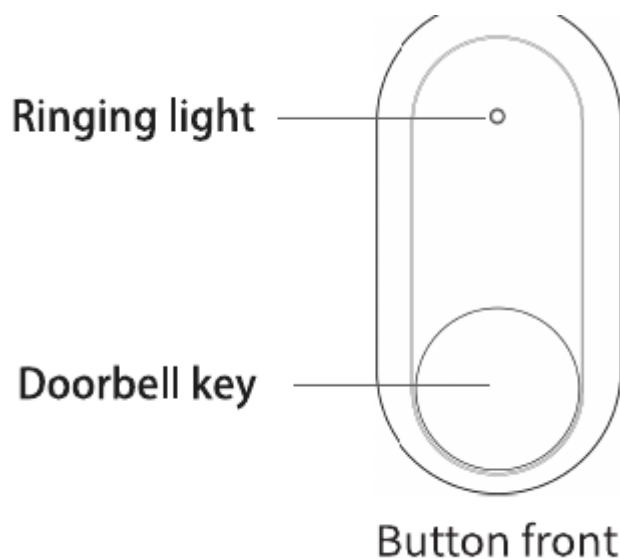

Plug in doorbell front

Battery back

 
Volume key: Short press to adjust the volume of the fourth gear

Select key: Press to switch 38 ringtones

Installation instructions

1. Tear off the other side of the double-sided adhesive. Attach to the back shell of the launch button.
2. Tear off the other side of the double-sided backing tape and stick On the wall or door, and press with appropriate force

Press to ensure that the paste is fit.

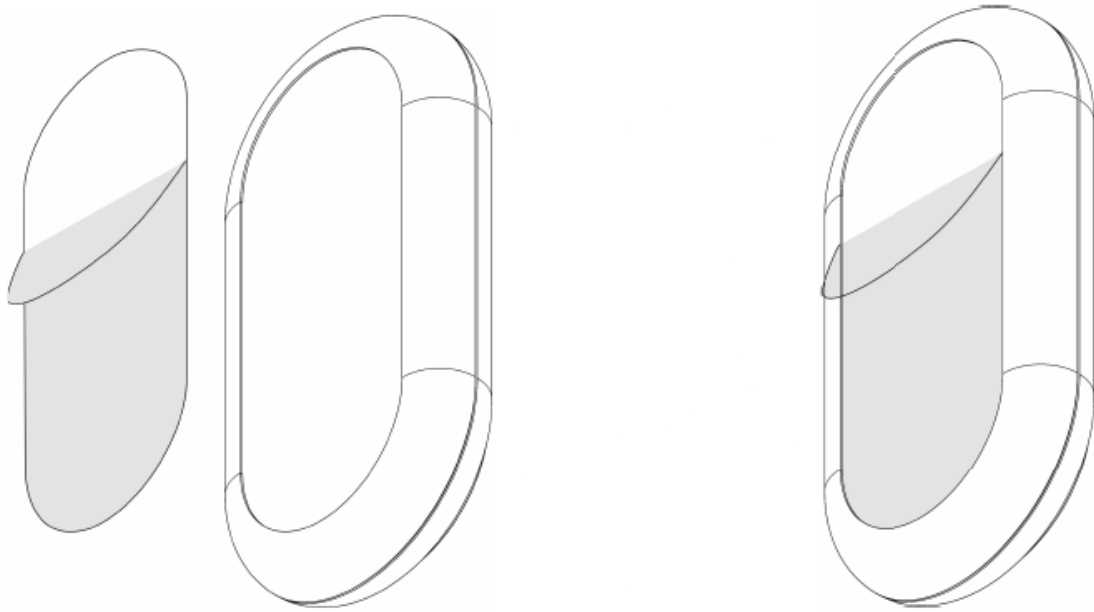


 
Please read the product carefully before using it Use instructions and keep them safe


This product can flexibly support the following two pairing methods:

1. A transmitter button is paired with multiple doorbell receivers;
2. Multiple launch buttons paired with a 1 doorbell receiver;

Setup and adjustment:

Short press the doorbell receiver [] key 1: select music sequentially, and play the current selected music;

 Short press the doorbell receiver [] key 1: select the volume level sequentially;

Transmission button pairing: Long press [] key for 5 seconds, the host indicator light is on, indicating that the doorbell receiver enters the doorbell button

 

In pairing state, press the launch button, and the doorbell host indicator flashes three times, indicating successful pairing;

Note: The doorbell receiver can be paired with up to 10 transmit buttons;

Trigger the launch button, the doorbell receiver will broadcast the set door ring tone;

In the pairing state, short press any key or 20 seconds without any operation will exit the pairing state;


Settings:

The doorbell receiver is held down at the same time [] and [] for 5 seconds without letting go, and the host light flashes for 3 times

All launch buttons are deleted and the host is restored to factory Settings.

Quick guide

 - **Step 1:** Plug the doorbell receiver (indoor unit) into the power outlet, and the doorbell receiver will play when it is just powered on. The ring tone “ding dong” indicates that the host is ready.
- **Step 2:** Press the doorbell key of the launch button (door machine), and under normal circumstances the doorbell receiver will ring.

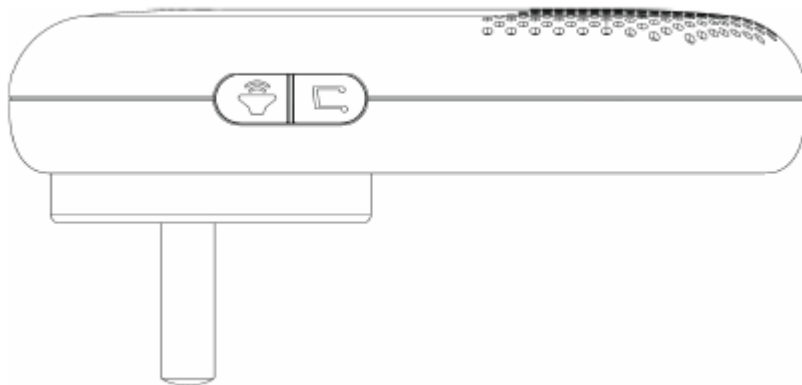

Warm reminder:

1. The launch button has a built-in CR2032 button battery when it comes out of the factory, and the launch button and doorbell receiver are also available. The factory has been paired to use directly;
2. Please do not install the launch button on the iron or steel door, iron or steel has a strong shield for wireless signals. The function will cause the wireless signal between the transmitter button and the doorbell receiver to be unable to be transmitted, resulting in abnormal function;
3. The doorbell receiver is recommended to be above 50cm from the ground, which can improve the reception strength of the wireless signal.

Wireless doorbell product three package voucher

User information

Customer name _____ (Mr. / Ms.) Contact number _____

E-mail _____ Postcode _____

Commodity information

Product type _____ Date of purchase _____ years _____ month _____ day

Purchase channel _____

A friendly reminder:

1. This product enjoys one-year free warranty, lifetime paid maintenance, paid maintenance costs need to be taken care of by customers;
2. Warranty period Warranty should provide a valid sales voucher, and complete warranty card together to provide, otherwise. The Company reserves the right not to provide maintenance services;
3. Product damage caused by human factors such as improper use and non-product quality problems is not within the scope of warranty;
4. Without the company's authorization of disassembly, modification, self-maintenance products are not covered by the warranty.

Maintenance record

Delivery date	Description and troubleshooting result	Date of submission	Maintenance personnel signature

合格证

CERTIFICATE



检验员 _____

生产日期 _____