

Shenzhen Peicheng Technology Tablet User Manual

Manualsum, simplified manuals

Table of Contents

- [Shenzhen Peicheng Technology Tablet User Manual](#)
 - [SPECIFICATION](#)
 - [FUNCTION OVERVIEW](#)
 - [GETTING STARTED](#)
 - [Power On/Off](#)
 - [Battery](#)
 - [Sleep Mode](#)
 - [Screenshot](#)
 - [HOME SCREEN](#)
 - [Home Settings, Widgets and Wallpapers](#)
 - [SETTING BASICS](#)
 - [Quick Settings](#)
 - [More Settings](#)
 - [Network & internet](#)
 - [Apps](#)
 - [Notifications](#)
 - [Battery](#)
 - [Storage](#)
 - [Sound](#)
 - [Display](#)
 - [Wallpaper](#)
 - [Accessibility](#)
 - [Security](#)
 - [Privacy](#)
 - [Location](#)
 - [Passwords & accounts](#)
 - [Digital Wellbeing & parental controls](#)
 - [Google](#)
 - [System](#)
 - [About tablet](#)
 - [NETWORK CONNECTION](#)
 - [Wifi Connection](#)

- [APP MANAGEMENT](#)
 - [App Download and Installation](#)
 - [App Management](#)
 - [Move the App](#)
 - [Remove the App from the Home screen](#)
 - [Uninstall the App](#)
 - [Clear the Cache of the App](#)
- [INTERNET NAVIGATION](#)
- [MULTIMEDIA](#)
 - [Connecting to a Computer](#)
 - [Connecting to an External Device](#)
- [TROUBLESHOOTING](#)

Shenzhen Peicheng Technology Tablet User Manual

Shenzhen Peicheng Technology Tablet User Manual

FCC id: [2BE3V-YQ11M](#)



 
SPECIFICATION

Size	10.1"	Connection	Wi-fi
Chipset	MT8768	CPU	Octa-core A53 2.3GHz
GPU	IMG GE8320	RAM	4GB+6GB
Display/Resolution	1280*800	Storage	64GB

[Manualsum](#)

Front-facing Camera	2.0MP	Network	802.11 a/b/g/n/ac
Rear Camera	8.0MP	Power Supply	DC 5V/2A
Battery	6000mAh	Touch	Multi-Touch
Operating System	Android 13	Ports	Type-C

FUNCTION OVERVIEW

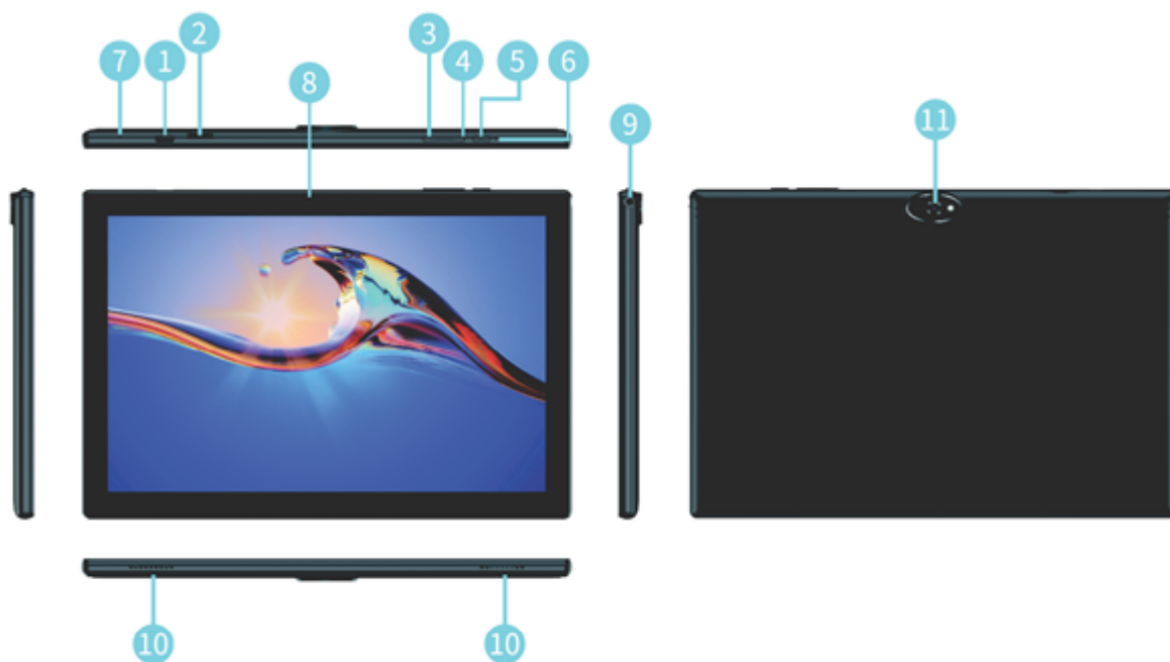

1. USB-C Port
2. Memory Card Slot
3. Volume +
4. Volume -
5. Power On/Off
6. Reset
7. Microphone
8. Front-facing Camera
9. Headphone Jack
10. Speakers
11. Rear Camera

* Google, Android, Google Play and other marks are trademarks of Google LLC.

GETTING STARTED

Power On/Off

- Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.

- Press and hold the power button for 2s, then release it. It will show Power off, Restart and Screenshot on the screen. Tap Power off to turn off the tablet.
- Press and hold the power button for 7-8s to do a forced reboot when it's frozen.

Battery

- A rechargeable Li-ion battery is installed in the tablet.
- DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- DO NOT dispose of tablet in a fire.
- DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature,
- Only use the ORIGINAL power adapter provided by us to charge the tablet battery.
- We suggest you drain the battery completely once a month if only use your tablet occasionally.
- The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household waste.
- Dispose of battery according to your local environmental laws and regulations.

Sleep Mode

Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.

Tip: Go to Settings > Display > Screen timeout to set the time of entering the Sleep Mode.

Screenshot

 
Press and hold the Volume- button and the Power On/Off button together to capture a picture.

HOME SCREEN



1. Back
2. Home Screen
3. Recent Activities

Home Settings, Widgets and Wallpapers

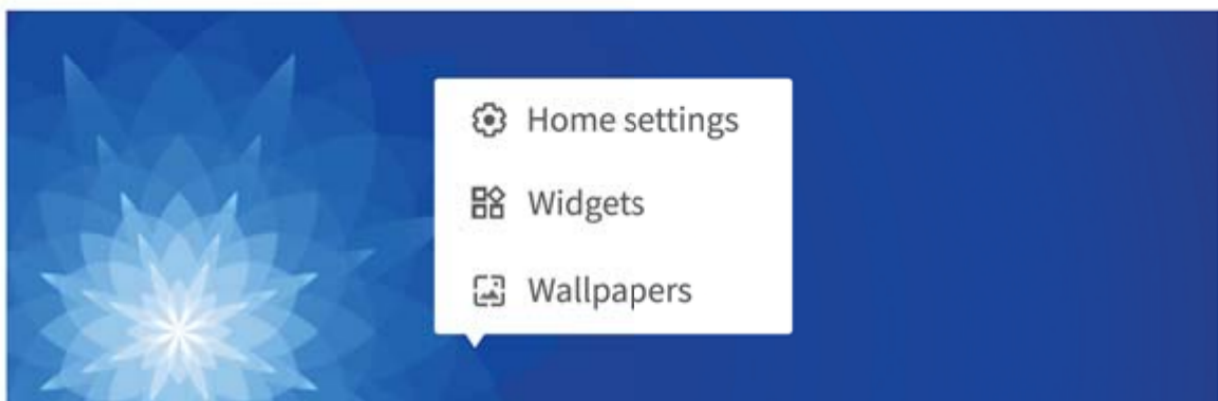

Tap and hold the empty section of a Home screen, Home settings, Widgets and Wallpapers will be displayed.

- Tap Home Settings to enable/disable Add icon to Home screen. This is applicable to the new Apps installed from Play Store. Tap Home Screen loop to allow continuous Home Screens swiping/sliding; tap Pull Down to sum

 
action to select the action when you swipe downward on the Home Screen, and more.

- Tap Widgets, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to X Remove.
- Tap Wallpapers to change the current wallpaper of the tablet from the default wallpapers or your photos.

SETTING BASICS

Quick Settings

Swipe down from the top of the screen to access Quick Settings.

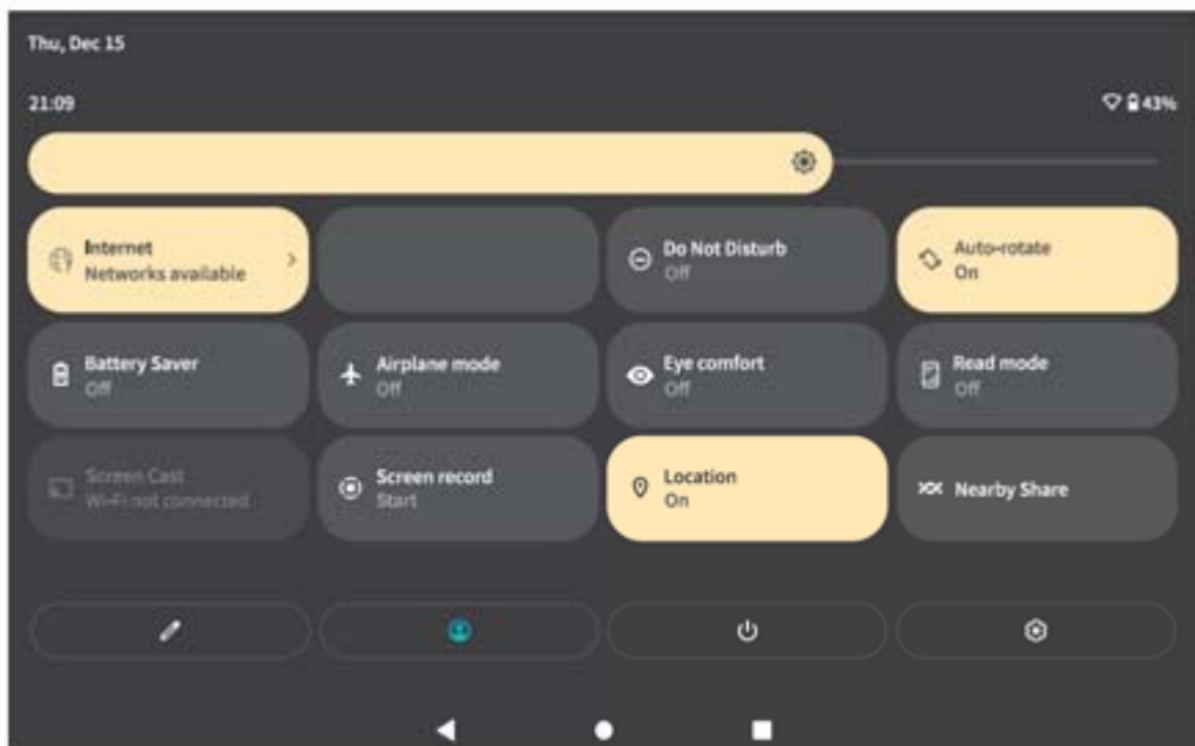

Internet. Tap to connect/disconnect to a wireless network



Do Not Disturb. Block sound after enabling this function



Auto-rotate. Turn on/off the Auto-rotate of the screen



Battery Saver. Tap to choose the power setting you prefer to save the battery time



Airplane Mode. Turn on/off all the network connectivity



Eye comfort. Eye comfort reduces the amount of blue light emitted by the device display



Read mode. The screen will be black and white after enabling this option



Screen Cast. Mirror the display of the tablet to compatible devices, e.g. TV box or Fire TV Stick.




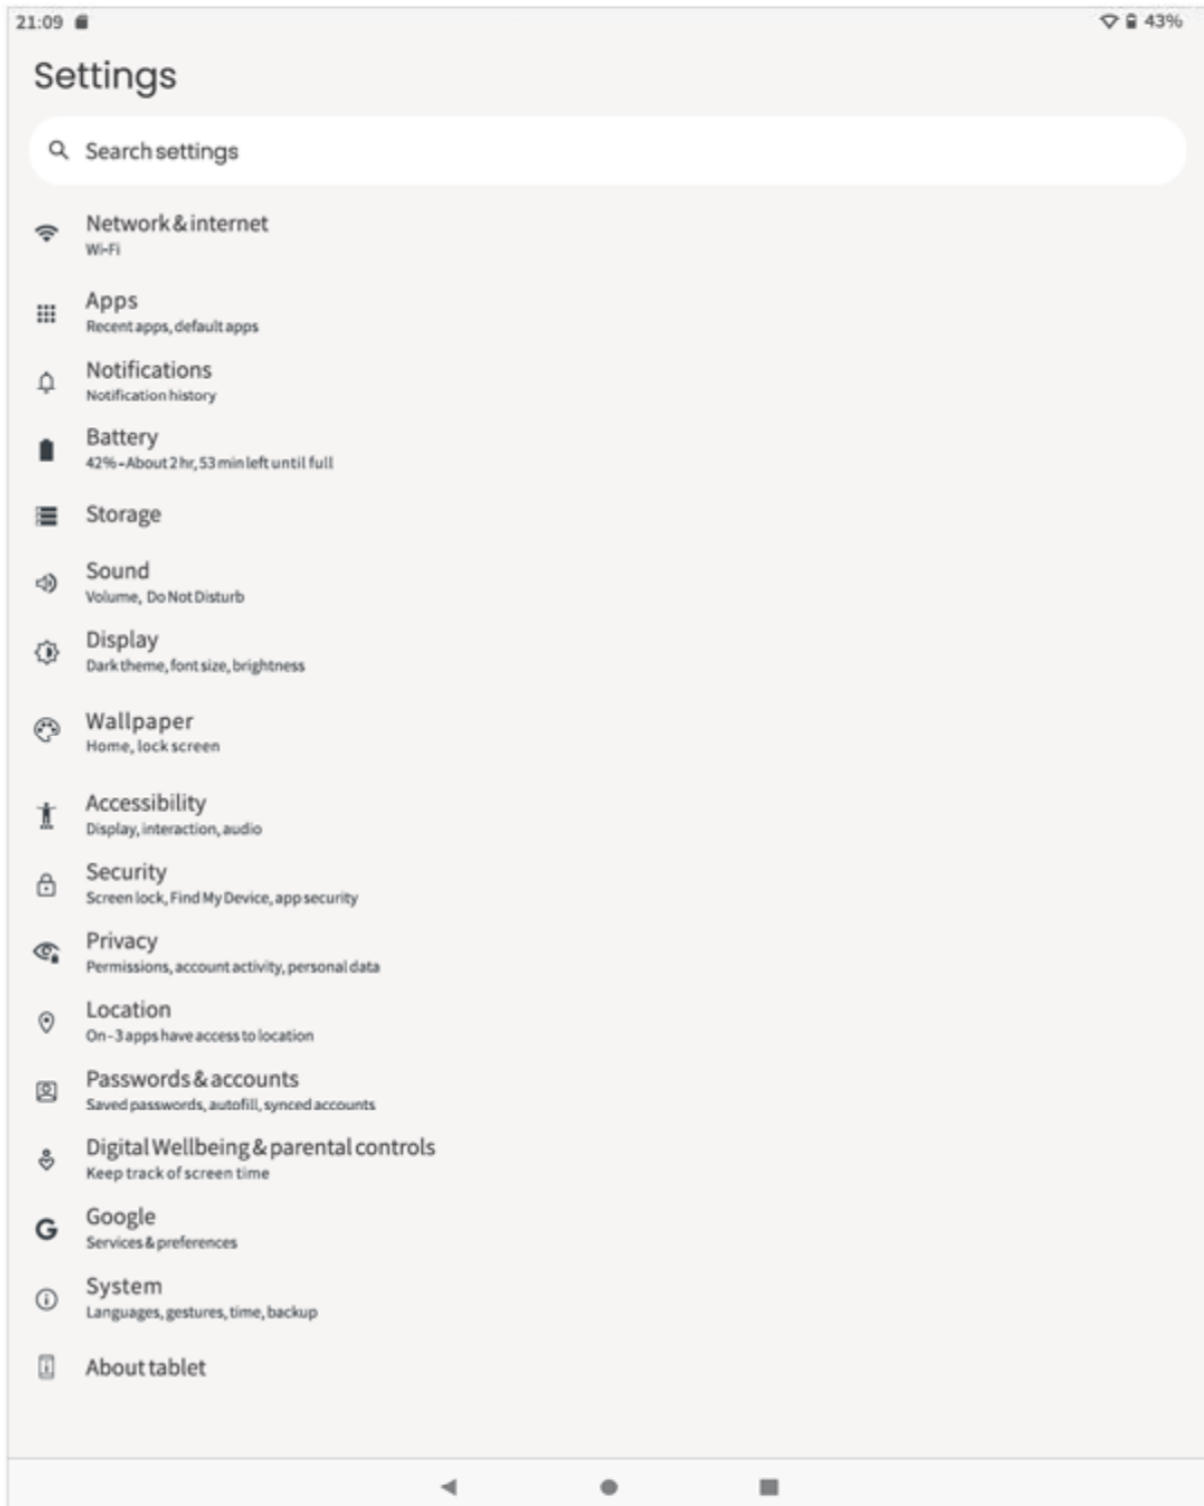 
Screen record. Start and end the screen recording.



Location. Enable/disable the location services.

More Settings

Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface. Or, tap the Settings App on the Home screen to enter.



Network & internet

- Connect to any working Wifi
- Enable/disable the Airplane Mode
- Turn on/off the Data Saver
- Add VPN Connections
- Select a private DNS mode

Apps

- Check the Apps recently opened
- Check all the Apps on the tablet
- Clear the cache of the Apps
- Uninstall the third-party Apps
- Set default apps and check the unused apps
- Check the screen time for Apps and more

Notifications

- Turn on/off the notification for each app
- Show or hide the notification history
- Set privacy preferences for notifications
- Set notification displaying options when the screen is locked
- Enable or disable the mode of Do Not Disturb
- Allow or disallow the apps to show dot and more

Battery

- Check the time for Screen usage since full charge
- Enable/disable Battery Saver and Battery Manager
- Display or hide the remaining power as a percentage

Storage

- View and manage your storage space

Sound

- Set sound level for Media, Alarm and Notification
- Enable/disable Do Not Disturb to mute sound
- Show/hide the media player when the media session has ended
- Set default notification sound and alarm sound
- Enable/disable Screen locking sound, Charging sounds, and Touch sounds and more

Display

- Adjust the screen brightness
- Enable/disable the Dark theme
- Turn on/off Night Light
- Change the wallpaper
- Adjust the time of entering the sleep mode
- Turn on/off the auto-rotation of the screen
- Adjust the font size and display size
- Set a screen saver
- Set what to show when the tablet is locked

Wallpaper

- Choose wallpaper from your photos or the default wallpapers.

Accessibility

- For vision and hearing impaired users, manage settings for **Screen reader, Display, Interaction controls, Captions, Audio and General.**

Security

- Check the security status
- Set screen lock pattern, e.g. Password, PIN, Swipe etc.
- Choose a Smart Lock to keep the device unlocked if you preset a lock pattern
- Allow the admin apps to Find My Device and lock or erase a lost device and more

Privacy

- Check and set app permissions
- Set to show/hide the password when input a password
- Set what to show when the tablet is locked and more

Location

- Turn on/off the location services for specific Apps
- Set apps that have access to location
- Check and set Location services and more

Passwords & accounts

- Add and remove the google accounts, manage google passwords.

Digital Wellbeing & parental controls

 
- Check your app usage based on Screen time, Notifications received, or Times opened from Dashboard
- Manage the related notification settings to reduce interruptions
- Set up Parental controls to help your kids balance their screen time and more

Google

- Set the preferences for Google™ related services

System

- **Set Language:** Tap Languages & input > Languages > +Add a language to add your language. After adding, hold and slide the



to the top to change the language

- Set gestures of using the tablet
- Set the date and time
- Turn on/off the option of Backup
- Check and update the tablet's system
- Manage multiple users and profiles
- Restore factory setting: Tap Reset options > Erase all data (factory reset) to restore the factory setting

About tablet

 
- Check the detailed information about the tablet

 
NETWORK CONNECTION

Wifi Connection

Go to network settings from the Settings App or by long pressing the Wifi icon in Quick Settings.

1. Tap Network & internet and turn on the Internet. All the WiFi connections available will be listed.
2. Select your WiFi and input the correct password.

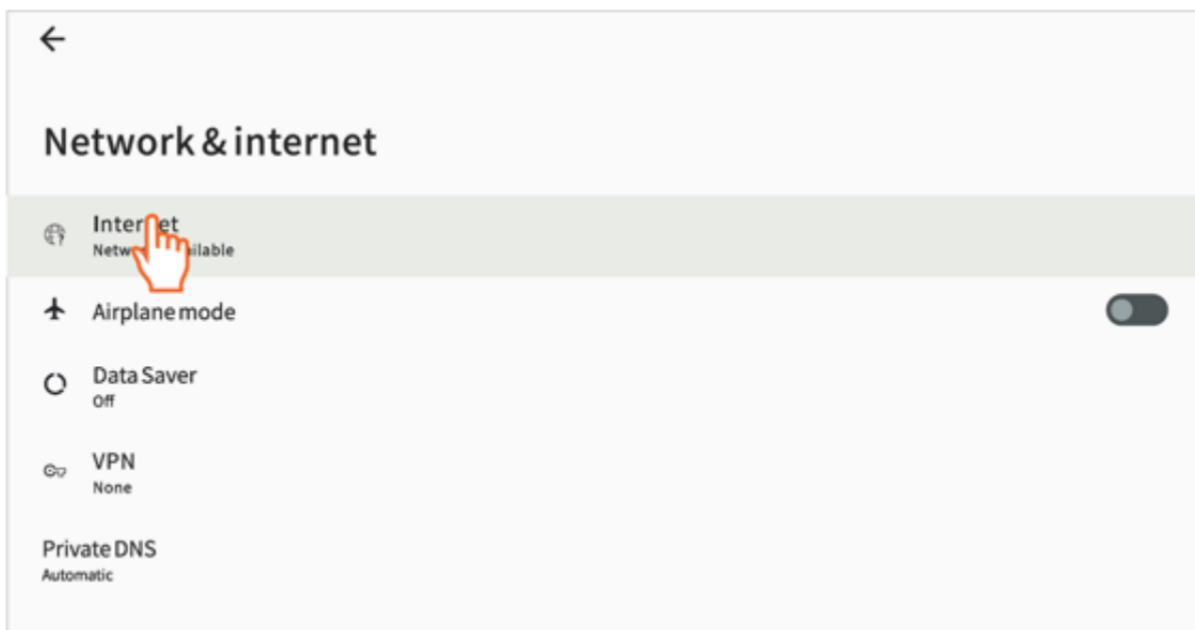

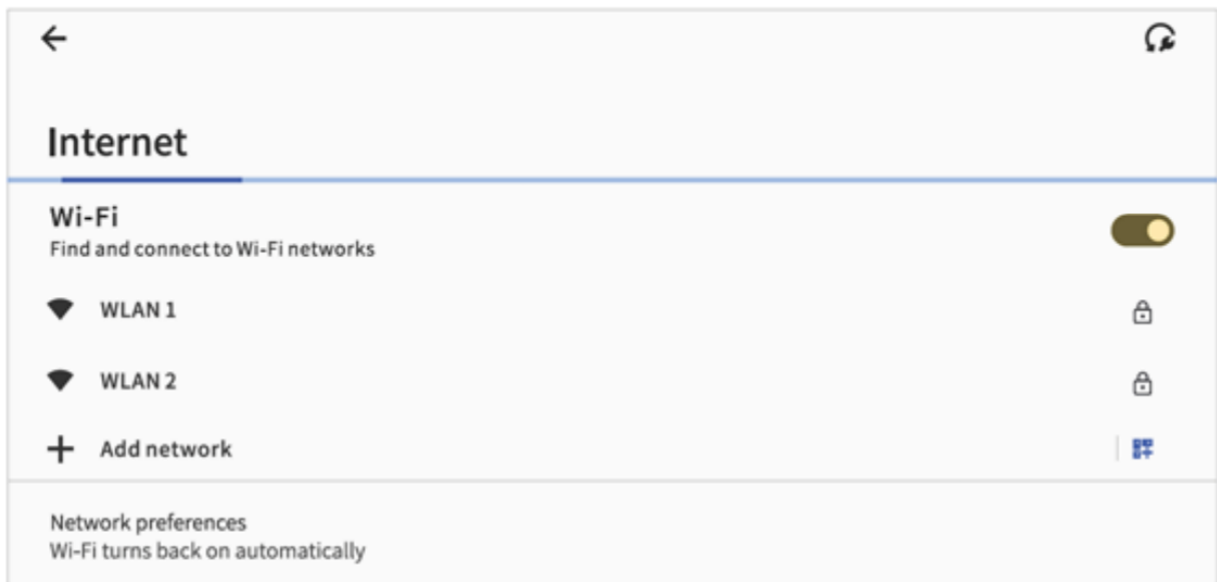

APP MANAGEMENT

App Download and Installation

1. Tap and open Play Store on the Home screen.
2. Log into your google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Touch and hold the App, then slide to to remove it from your Home screen.

Uninstall the App

Touch and hold the App, then slide to the to uninstall the App.

Clear the Cache of the App

1. Go to Settings > Apps.
2. Select an App > Storage & cache > CLEAR CACHE to clear the cache.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working WiFi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from Play Store.

Shenzhen Peicheng Technology Tablet User Manual

 
 
MULTIMEDIA

Connecting to a Computer

1. Connect your tablet to the computer with a USB cable.
2. File Transfer is the default setting. Go to your computer and find your tablet to transfer files between your tablet and computer.

Tips: Go to Quick Settings, tap USB file transfer turned on > Tap for more options > USB Preferences to select the option preferred.


- Select MIDI to play MIDI instruments on the tablet.
- Select PTP to transfer photos between the devices.
- Select No data transfer to charge your tablet.

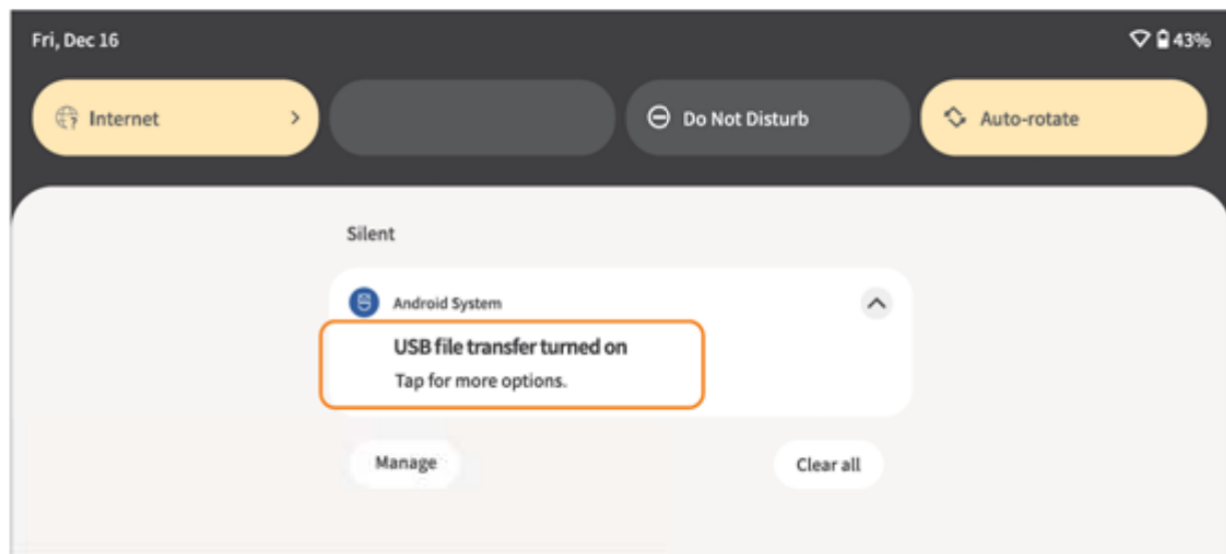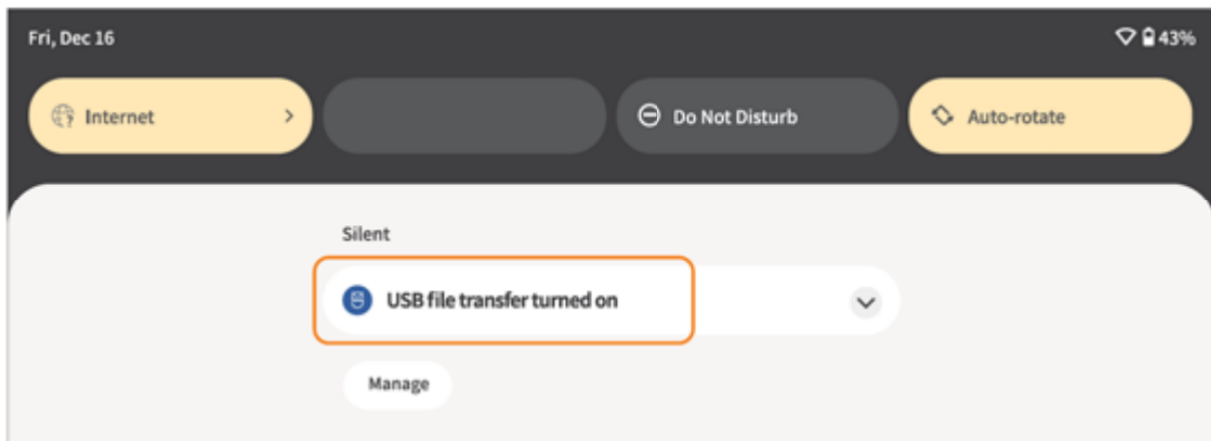





Connecting to an External Device

 1. Install a memory card into the memory card tray using the pin in the box when the tablet is off.

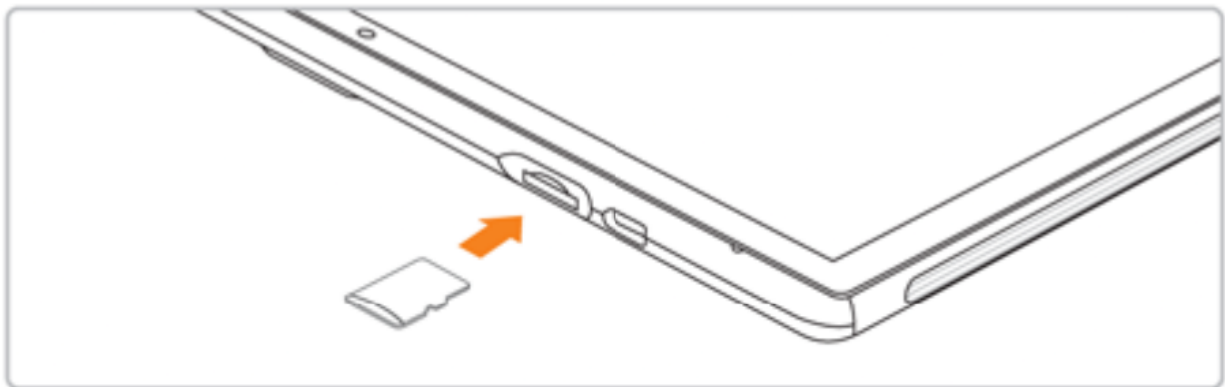

  2. Turn on the tablet, then go to Quick Settings and tap SET UP.
3. Set the memory card as a portable storage by selecting Portable storage. Enter memory card storage to move files between the card and tablet.

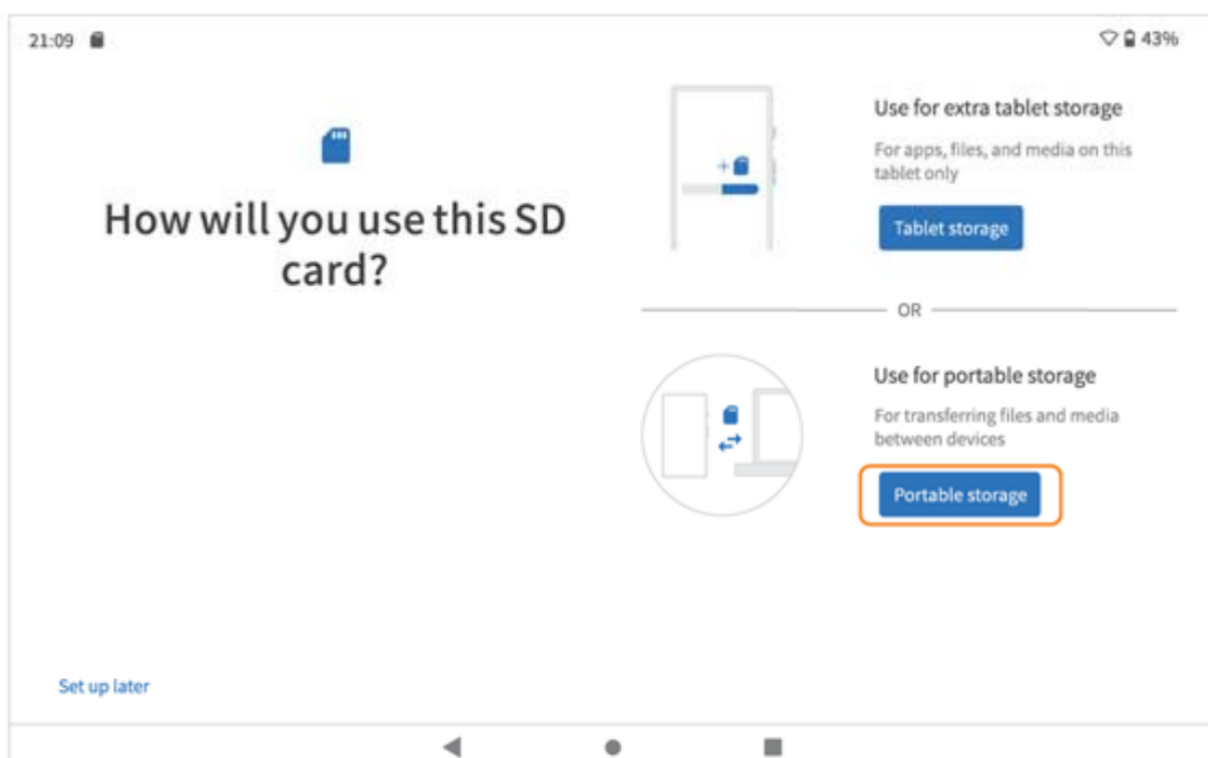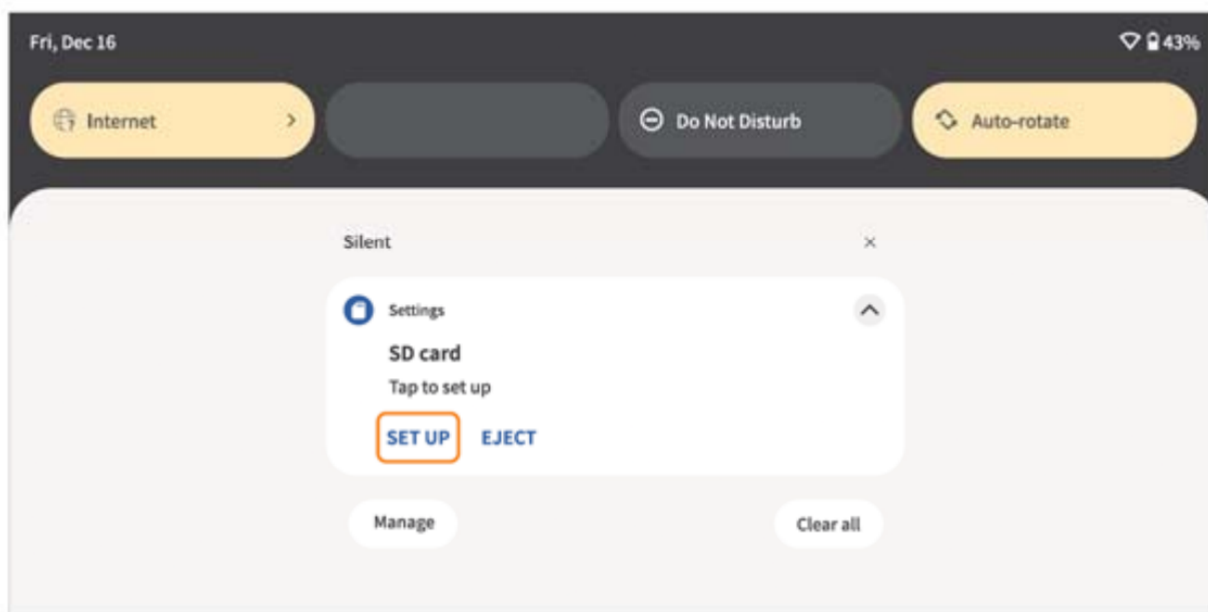

TROUBLESHOOTING

Q1. The tablet doesn't power on.

- Reboot your tablet after charging for more than 30 minutes.
- Press the power button to check if the tablet is in the Sleep Mode.
- Insert a pin to the Reset Hole to reboot it.

Q2. The tablet doesn't charge.

- Make sure the USB cable is properly plugged into the charging port.
- Try another compatible USB cable and adapter. [Manualsum](#)

Q3. Error message occurs during the operation.

- Uninstall the App with the error message, then download and install again.
- Insert the pin into the Reset Hole to reboot it.

Q4. The tablet cannot be detected by the computer.

- Make sure the tablet is powered on.
- Try another USB cable.
- Try another USB port on the computer.
- Instead of No data transfer, choose File Transfer or PTP when connecting the tablet to the computer.

Q5. The tablet cannot connect to the WiFi.

- Make sure the WiFi in your tablet is ON.
- Make sure you input the correct password when connecting the WiFi.
- Restart the router.
- Make sure there is no filter setting or device connection limitation in the setting of the router.
- Forget the current Wifi, reset the router and connect the Wifi again.

Q6. The storage space of the tablet is not enough.

- Delete the Apps you don't use.
- Clear the cache of the Apps regularly.
- Install a memory card to expand the storage.

Q7. The tablet comes with scratches on the screen.

- Check if the scratches are on the film. If yes, please remove the film.

Q8. The screen is unresponsive.

- Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

Q9. The font size is too small to read.

- Please go to Settings > Display > Advanced > Font Size to adjust the text size.

Q10. How to use your voice to search a fact?

- Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.



Notes:

1. High Sound Pressure
2. Hearing Damage Risk
3. Do not listen at high volume levels for long periods.

Shenzhen Peicheng Technology Tablet User Manual