

# Yongkang Chuangchen Industry and Trade, Ltd 2BG2F-QJBM-01 Music boxing target User Manual

## Manualsum, simplified manuals

### Table of Contents

- [Smart music boxing target](#)
  - [User Manual](#)
  - [Function Description](#)
- [Troubleshooting](#)
- [Product description](#)
- [Installation Notes](#)

# Smart music boxing target

## User Manual



### Function Description

1. Long press the middle touch switch (long press has digital tube timing effect); short press to adjust The volume is switched cyclically between 0 and 3 levels.

2. After turning on the machine, touch the left side to adjust the speed, and the digital tube displays H1~\*H15; touch the right side to adjust the mode, and the digital tube displays P1~P15. The hitting position will be different in different modes. 3. When you hit the correct position within the limited time

the hit position indicator light will go out, the hit indicator light will light up briefly, and a hit sound effect will sound. Then the foot quickly switches to the next striking position. When hitting the wrong position within the limited time, a hit will be issued.

Wrong sound effects.

4. After using a mobile phone or other electronic device to connect to the Bluetooth of the product, you can replace the device. Prepare your own background music to play music from your mobile phone or other electronic devices.

5. If there is no hitting action within 3 minutes, the system will automatically shut down and enter low power. consumption mode.

6. The charging voltage is 5V-USB charging. When the power is turned off and charged, the digital tube will display charging. Animation; no charging animation when not charging or after fully charging.

7. When the battery voltage is lower than 3.3V, the system will display abnormally or automatically shut down. Phenomenon. If these phenomena occur, please charge in time.

## Troubleshooting

1. No light and sound: The product is not turned on or the battery is low. Short press the power button or charge the product.
2. The light flashes: the battery power is too low, please recharge this product.
3. Short press the switch cannot turn on: long-term inactivity may cause chip defects, please press the switch key repeatedly.
4. Impact sound inside the equipment: It is emitted by the internal active stressed structure and is a normal phenomenon.

## Product description


**Product name:** Smart music boxing target

**Product material:** Carbon fiber+pp

**Applicable:** Professional/training/children/amateur fitness

**Connection method:** Bluetooth connection

**Colour:** Black

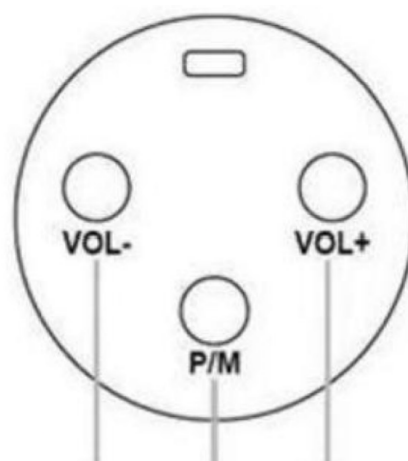

# Installation Notes

## Installation method 1:

1. First, fix the No. 2 and No. 3 holes of the bracket to the two holes on the back of the boxing target with flat-head screws.
2. Draw the No. 1 and No. 4 holes of the bracket on the wall, drill the holes with an impact drill, and use expansion screws Fixed on the wall.
3. Before using the product, please make sure it is installed firmly.

## Installation method 2:

1. First, peel off the double-sided tape on half of the EVA.
2. Align the EVA sticker on the back of the product.
3. Tear off the double-sided tape on the lower part of the EVA sticker.
4. Place it in place and stick it firmly on the wall.

## Installation method 3:

1. Align the adhesive Velcro on the back of the product.
2. Tear off the double-sided tape on the upper part.
3. Place it in position and align it with the wall.